
20-10131C IRIUMPER

TSXMODES

CLASSIC CLASSIC PAINT NO SECOND BIKE SPARES

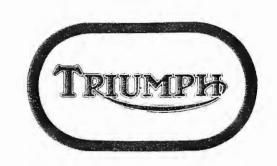



REPLACEMENT PARTS CATALOGUE CATALOGUE

FOR TSX MODEL

Publication 99-7581



Published Aug. 1982

INTRODUCTION

ENGINE AND FRAME NUMBERS

The engine number is located on the left side of the engine, immediately below the cylinder barrel to crankcase flange.

The frame number is located on the left side of the frame headlug, beneath the fork top lug and forward of the gasoline tank.

Both the engine and frame number should be quoted in full in any correspondence relating to the machine.

0

COPYRIGHT


All rights reserved. No part of this publication may be reproduced without permission.



INDEX

	Page		Page
AIR CLEANER	65	REAR BRAKE	59
ALTERNATOR	35	REAR WHEEL	57
ALIENNATOR	55	RECTIFIER	
DATTEDY CARRIED	0.1	DOCKEDO	79
BATTERY CARRIER	81	ROCKERS	17,19
BING CARBURETOR	21	0-0-10	
BRAKE SWITCH	79	SERVICE TOOLS	8
BREATHER PIPES	45	SIDE PANELS	65
		SILENCERS	37
CAMSHAFT, INLET & EXHAUST	11	SOLENOID	83
CARBURETOR	21	SPARK PLUG	79
CENTRE STAND	39	SPEEDOMETER	77
CHAINS	35	SPEEDOMETER GEARBOX	57
CHAINCASE	35		-
		STARTER MOTOR	25
CLUTCH	33	SUSPENSION UNITS	41
CLUTCH LEVER ASSEMBLY	31	SWINGING FORK	41
COIL	79	SWITCHES	71,81
CONDENSORS	79		
CONNECTING RODS	11	TACHOMETER	77
CONTROL CABLES	73	TACHOMETER GEARBOX	77
CONTROL LEVERS	71	TAIL LAMP	69
CRANKCASE	13	TAPPETS	17,19
CRANKSHAFT	11	TIMING COVER	23,25
CYLINDERS		TIMING GEARS	
CYLINDER LIEAD	17,19	TOOLKIT	11
CYLINDER HEAD	17,19	TOOLKIT	75
		TWIN SEAT	61
DISTRIBUTOR LIST	6		
		VALVES	17,19
ELECTRICAL PARTS	79,81,83	VALVE GUIDES	17,19
EXHAUST PIPES	37	VALVE GUIDE SETS	9
FLASHERS	81	WIRING HARNESS	81
FOOTRESTS	43	777777777777777777777777777777777777777	0 :
FRAME	39	ZENIED DOIDE	70
EDON'T DO AVE		ZENER DOIDE	79
FRONT BRAKE	55,57		
FRONT FORKS	47,49		
FRONT WHEEL	51		
S. Carlotte and Ca			
GASKET SETS	9		
GEARBOX	27,29,31		
HANDLEBARS	71		
HEADLAMP	81		
HORN	79		
1101114	15		
MOTOR DI ATEC	40		
MOTOR PLATES	43		
MOTOR TORQUE STAY	43		
MUDGUARDS	67		
OIL PIPES	45	•	
OIL PUMP	15		
OIL PRESSURE RELEASE VALVE	15		
OIL THEOGOTIE NEELEAGE VALVE			
PETROL TANK	63	1	
PISTONIC OVERSIZE & DING SETS			
PISTONS, OVERSIZE & RING SETS	9		
PISTONS	11	ncer	
PROP STAND	39	HIJI	
PUSH RODS	39 17,19		
PULSE SENSOR	23,25		
		DODEC	
	KIK F		
	are for	I III/LJ	
	3		
	9		



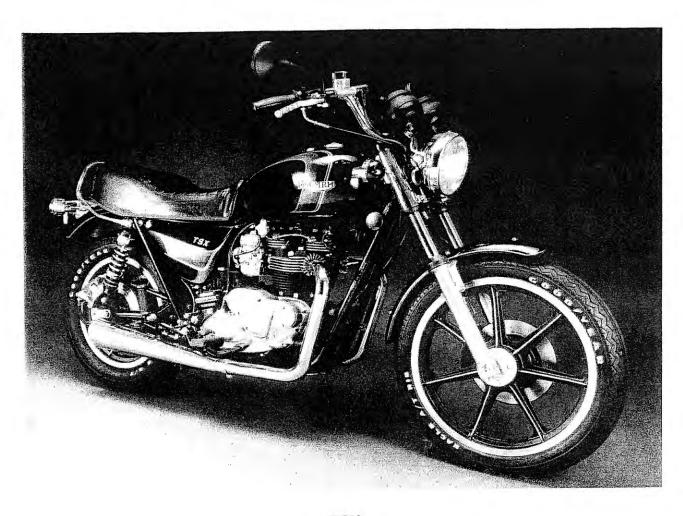

TSX

Bore & Stroke Capacity Compression Ratio Spark Plugs Carburetter

> Needle Jet Needle Throttle Valve Pilot Jet

Gearbox Sprocket Chains

Capacities

Tyre Size

Main Jet

Front Rear Fuel Tank Oil Tank Gearbox Front Forks Front Rear

76x82mm/2.992x3.228ins. 747cc/45cu.ins.

7 . 4:1 Champion N5

Bing Constant Depression Type 64 140

2.66

2C3 - Position 1

No.3 45

20 Teeth

Triplex 3/8in. pitch x 84 links 5/8in. x 3/8in. x 107 links

2.8 Galls (IMP)

4 Pints

7/8 Pint (500cc) 1/3 Pint (190cc)

 3.25×19 5.10 x 16

BIKE SPARES

Anglo Bike Beenham Garage The Stocks Beenham Berks Tel No 073521 3382

A Bennett & Son Station Street Garage Station Street Atherstone Warks Tel No 4076

Charlies 171 Fishponds Road Eastville Bristol Tel No 0272 511019

Eiite Motors 844-965 Garratt Lane Totting Broadway, London Tel No 01-672-1200

Harvey Owen 181-183 Walworth Road London SE17 1RR Tel No 01-703-0282

Hughes (S.H. Brand) Ltd 222 Tooting High Street Tooting London SW17 Tel No 01-672-3077

Etn Laurent Pdevijn Sint Jobstraat 99 9300 BELGIUM

C. Reinhardt A/S G1 Kongevej 11 1610 Kobenhavn V DENMARK

Ab Scandanavian Pacific Oy SF 25700 Kimito FINLAND

Messrs. C.G.C.I.M. 17 rue du Débarcadère 75017 PARIS FRANCE

Wüst Motorräder Schechingerstrasse 1 D-7071 Heuchlingen WEST GERMANY

Fa AMSG.m.b.H. Wiesbadenerstrasse 91 6503 Mainz-Kastel WEST GERMANY

Amco Co. Limited 30 Sina Street Athens GREECE

Verstegen Motor Import BV Industriepark 11-5374 CM Schaijk HOLLAND

Luigi Ghezzi Viale Gian Galeazzo 29 20136 Milan ITALY

Messrs. Törso & Co. Postboks 1020 4600 Kristiansand NORWAY.

Celebes sa San elias 29-31 Barcelona 6 SPAIN

List of U.K. Spares Distributors

Allan Jefferies 206 Saltaire Road Shipley Yorks Tel No 0274 587451

Leather & Simpson Flora Street Garage Flora Street Sheffield Tel No 0742 343173

Roebuck Motorcycles 354 Rayners Lane Pinner Middx Tel No 01-868-1231

Ben Lloyd M/Cs 37 Bridge Road Blundell Sands Liverpool Tel No 051 924 2369

Revetts Ltd 53-61 Norwich Road Ipswich Suffolk Tel No 0473 53726

Slocombes 251-254 Neadsen Lane London NW10 1QH Tel No 01-450 8655

T.M.S. 92-94 Carlton Road Nottingham Tel No 0602 53447 Reg Allen 41 Grosvenor Road Hanwell London W7 Tel No 01 567 1974

Wairon Auto Supplies 223 Coatsworth Road Gatesheat Tyne & Wear Tel No 0632 772968

West Pier Motorcycles 25 Brandon Terrace Edinburgh Scotland Tel No 031 556 3286

Wileman Motors Siddals Road Derby Tel No 0332 42813

Victor Devine & Co Ltd 219-233 Great Western road Glasgow 4 Stratholyde Scotland Tel No 041 332 0056

OVERSEAS STOCKISTS

Import Rådhes Motor AB Hospitalsgatan 15 Box 273 61101 Nykoping SWEDEN

Ernst Uhlmann Motos Haupstrasse 3257 Grossaffoltern/BE SWITZERLAND

Morgan & Wacker P.O. Box 4 54 Ross Street Newstead Brisbane Queensland AUSTRALIA

Alron Industries 65 Newcastle Street Perth 6000 WESTERN AUSTRALIA

Ton Byrne (Wentworth Traders) 34 wentworth Avenue Sidney AUSTRALIA

George Boiton Importers Pty Ltd 225 Greenhill Road Dulwich Adelaide South Australia

Hernandez Hermanos sl General Mola 27-29 Santa Cruz de Tenerife CANARY ISLES

Mornis Greenberg Limited 83 Shalma Road Tel-aviv ISRAEL

William White (Wholesale) Limited Paraiti road Bell Bock New Plymouth NEW ZEALAND

China Motors & Technical 76 Norman Williams Street South West Ikoyi Lagos NIGERIA

The Universal Engineering Company Talpur Road Karachi 2 PAKISTAN

Brown &Company Limited 481 Oarley Road Colombo 10 SRI LANKA

Central de Motos Marti Esquina Mutualismo MEXICO 18 DF

The Bike Shop 13 Henry Pierre Street Mucurapo Port of Spain TRINIDAD

Moto Palace c.a. Av E1 Progresso Edificio Oriol Urb. Las Acacias Caracas 104 VENEZUELA

HOW TO USE THIS PARTS CATALOGUE

First Consult the index on Page 3 for the parts or group of parts which you wish to locate. When you have located the parts make sure from the end columns that the part you have located does apply to your machine.

List the quantities required as single units; do not ask for "2 pairs" or "3 dozen".

In case of painted items always state the colour required. Painted parts are available only in the colours or alternatives specified for that model of that particular year.

PLEASE NOTE

THROUGHOUT THIS LIST, ASSEMBLIES ARE PRINTED IN CAPITALS AND THE COMPONENTS INCLUDED IN THAT ASSEMBLY ARE INDENTED IN THE DESCRIPTION COLUMN, REVERTING TO THE ORIGINAL ALIGNMENT WHEN THE ASSEMBLY IS COMPLETE. TO ORDER THE COMPLETE ASSEMBLY IT IS NECESSARYONLYTO QUOTETHE ASSEMBLY NUMBER. ANY COMPONENT PARTS LISTED MAY ALSO BE OBTAINED SEPARATELY IF REQUIRED. WHERE COMPONENTS ARE COMMON TO ALL MODELS ONLY ONE COLUMN APPEARS UNDER QUANTITY.

SPECIAL WORKSHOP TOOLS

A COMPLETE LIST OF WORKSHOP TOOLS CAN BE MADE AVAILABLE BY CONTACTING YOUR DEALER. IN MOST CASES THESE TOOLS ARE VERY COSTLY AS THEY ARE MADE ENTIRELY FOR WORKSHOP USE, AND THEREFORE, IT IS NOT RECOMMENDED THAT THE PRIVATE OWNER PURCHASES THE TOOLS IN ORDER TO AID SERVICING THE MACHINE ONCE OR TWICE ONLY. IN THESE CIRCUMSTANCES IT IS FAR MORE ECONOMICAL TO GET IN TOUCH WITH A RECOGNISED DEALER.

UNIFIED THREAD FORM

NEW PARTS HAVING THREADED FIXINGS INTRODUCED IN THIS CATALOGUE HAVE THE UNIFIED FORM OF SCREW THREADS. THIS CHANGEOVER WILL BE CONTINUED AS AND WHEN NEW PARTS ARE INTRODUCED. EVEN WHERE PARTS ARE SIMILAR IN APPEARANCE NEW PART NUMBERS WILL BE ALLOCATED TO IDENTIFY THE UNIFIED THREADS. ALL NUTS, BOLTS AND STUDS HAVING THIS THREAD ARE IDENTIFIED BY MARKINGS. BOLTS HAVE A CIRCULAR RECESS IN THEIR HEADS, STUDS A CIRCULAR GROOVE ON THE END, AND NUTS HAVE INTERLOCKING CIRCLES ON THE SIDE.

PARTS SPECIAL TO PARTICULAR MARKETS ARE IDENTIFIED IN 'REMARKS' COLUMN, OTHERWISE PARTS ARE COMMON TO ALL MARKETS.

WHERE MAKERS PART NUMBERS ONLY ARE SHOWN FOR REFERENCE, PARTS MUST BE OBTAINED DIRECT FROM THE MAKERS OR THEIR DISTRIBUTORS.



ESSENTIAL SERVICE TOOLS

Part No.	Description
61-6019 61-7013 61-7011 61-6125 61-6008 61-7014 61-6135 61-7017 61-3768 61-6132 61-7019 61-7022 61-7012 61-6063 61-7023 61-7024 61-6121 61-6121 61-6113 61-7025 61-7027 61-7029 61-6117	Crankshaft pinion extractor Camshaft oil seal spreader Gearbox assy tool - quadrant positioner Gearbox sprocket nut spanner Tappet guide block punch Clutch hub - extractor tool Piston ring clamp Mainbearing extractor - LH outer race Clutch locking plate Camwheel extractor Rocker spindle seal compressor Locator tool assy - flywheel 38 - T.D.C. Primary chain tensioner tool Valve guide removal & replacement tool Cam extractor 6CA Torque tool adaptor - cylinder head sleeve nut Peg spanner wheel bearing retainer Head race drift Fork damper tool Valve seat cutter (inlet and exhaust) Blending cutter (inlet and exhaust) Arbor pilot & tommy bars - valve seat cutters Swinging arm bearing - removal replacement tool
61-7035 61-7043	Crankshaft balance weights (689 grms.) Camshaft replacement tool



CARTON PACK ASSEMBLIES

PISTONS (C/W RINGS GUD 71-3995 71-3996 71-7090 71-7091	PISTON ASSY PISTON ASSY PISTON ASSY PISTON ASSY	7·9:1 + 0· 7·9:1 + 0· 7·4:1 + 0· 7·4:1 + 0·	020 No. 33964 010 FROM ENGINE 020 No. 33965
PISTON RING SETS (COMP	RISING 4 OFF TAPE	RING, 2 OFF	OIL CONTROL RING)

99-7 58 9 71-3690 71-7703	RING SET STD. TAPER RING OIL CONTROL RING	STD. STD.
99-7590	RING SET	+ 0·010
71-3691	TAPER RING	+ 0·010
71-7741	OIL CONTROL RING	+ 0·010
99-7591	RING SET	+ 0 · 020
71-3692	TAPER RING	+ 0 · 020
71-7742	OIL CONTROL RING	+ 0 · 020

VALVE GUIDE SETS (COMPRISING 2 INLET 2 EXHAUST 4 CIRCLIP)

99-7125	VALVE GUIDE SET	STD.
99-7126	VALVE GUIDE SET	+0.005
99-7127	VALVE GUIDE SET	+0.015

OIL PUMP

99-7508 OIL PUMP VALVE PACK

GASKET SETS

99-7001	DECOKE SET
99-7002	OVERHAUL SET

VALVE SPRING SET

99-7037 4 OFF INNER 4 OFF OUTER


BEARING CONROD B/E

99-7040	4 OFF	STD.
99-7041	4 OFF	-0.010
99-7042	4 OFF	-0.020

OWNER HANDBOOK TSX

60-7700



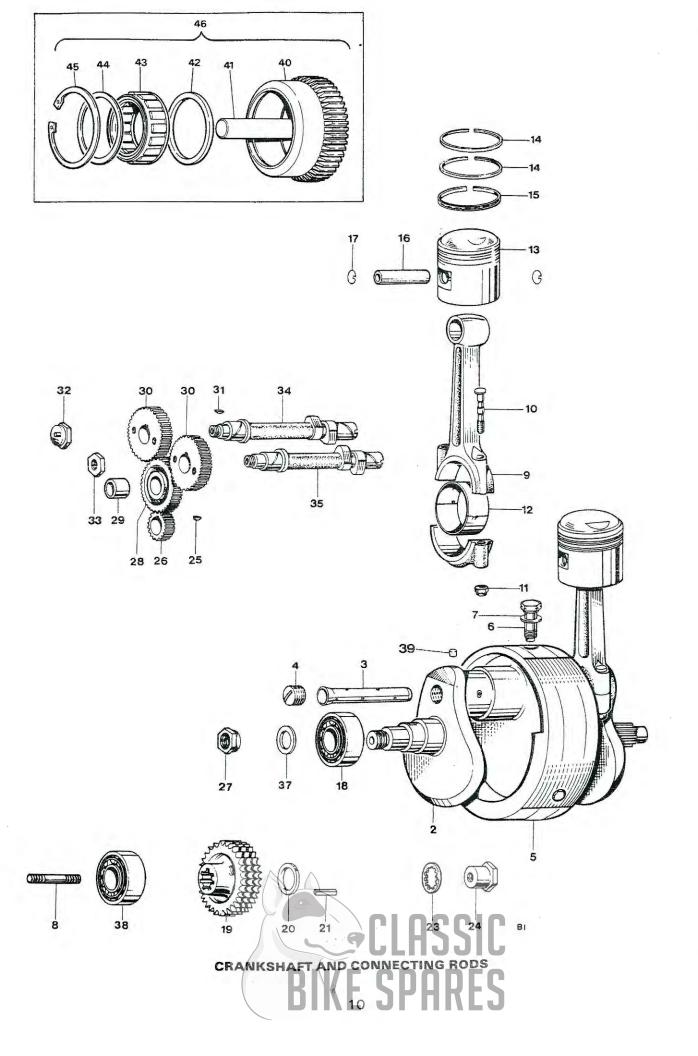


CRANKSHAFT AND CONNECTING RODS

Ref. No.	Part No.	Description	Quantity
1	71 7270		
1	71-7370	CRANKSHAFT AND FLYWHEEL ASSEMBLY	1
2	71-3298	CRANKSHAFT C/W. OIL TUBE	1
3	70-3903	Oil tube	1
4	71-2800	Screwed plug	1
5	71-7338	Flywheel	1
2 3 4 5 6 7	*71-3552	Flywheel bolt	3 3 1 2 4
8 .	71-1003 21-2183	Washer	3
9	71-3006	Crankshaft stud (1 3/8 in. O.A.) CONNECTING ROD	1
10	70-9914	Connecting rod bolt	4
11	21-7091	Self locking nut	4
12	70-3586	Big end bearing (Available in - · 010 in.	4
12	70-3380	and - · 020 in. undersizes)	4
13	71-7085	PISTON COMPLETE (7.4:1) - From Engine No. 33965	2
13	71-3778	PISTON COMPLETE (7.9:1) - Up To Engine No. 33964	2
14	71-3690	Taper compression ring	<u> </u>
15	71-7703	Oil control ring	2
16	71-3354	Gudgeon pin	2 2 4 2 2 4
17	71-3700	Circlip	4
18	60-7362	Main bearing, right	1
19	71-3542	Motor sprocket, 29 teeth Triplex	1
20	71-3544	Distance piece	1
21	71-0082	Rotor key	1
23	21-7024	Fan disc lock washer	1
24	21-2182	Nut	1
25	70-1580	Key	1
26	71-7679	Timing pinion	1
27	71-2877	Nut	1 .
28	70-6159	INTERMEDIATE WHEEL	
29	70-0400	Intermediate wheel bush	
30	71-7657	Camshaft pinion - Interchangeable With 71-3666	2 2 1
31	70-1558	Camshaft key	2
32	71-1007	Inlet camshaft nut	
33	70-6523	Exhaust camshaft nut	1_
34	71-7016	Inlet camshaft	1) Use With
35	71-7017	Exhaust camshaft - Up To Engine No.	14 Tapered
37	70-3300	Clamping washer	1 (Reluctor
38 39	70-2879	Main bearing, left (RM11L)	1
Not illus.	70-3902 71-2663	Plug, crankshaft oilway	1
Not illus.	70-8038	Spacer Shim (0:010 in.) - Engine sprocket	As Required
Not illus.	71-2660	Shim (0 · 030 in.)	As Required
40	71-7710		As nequired
41	71-7710	Intermediate wheel c/w spindle	1
		Spindle	
42	71-7245	Spacer Ring-inner	1
43 44	60-7291	Sprag Clutch	1
45	71-7244	Retainer Ring-outer	1
46	60-7269 71-7740	Circlip Sprag Clutch Assy C/W Int. Gear Assy.	1
40	/1-//40	oping Ciutoff Assy C/ W IIIt. Gedi Assy.	
35	71-7582	Exhaust Camshaft - From Engine No.	1
		(Use With Parallel Reluctor)	

^{*} Use Loctite 270 Sealant




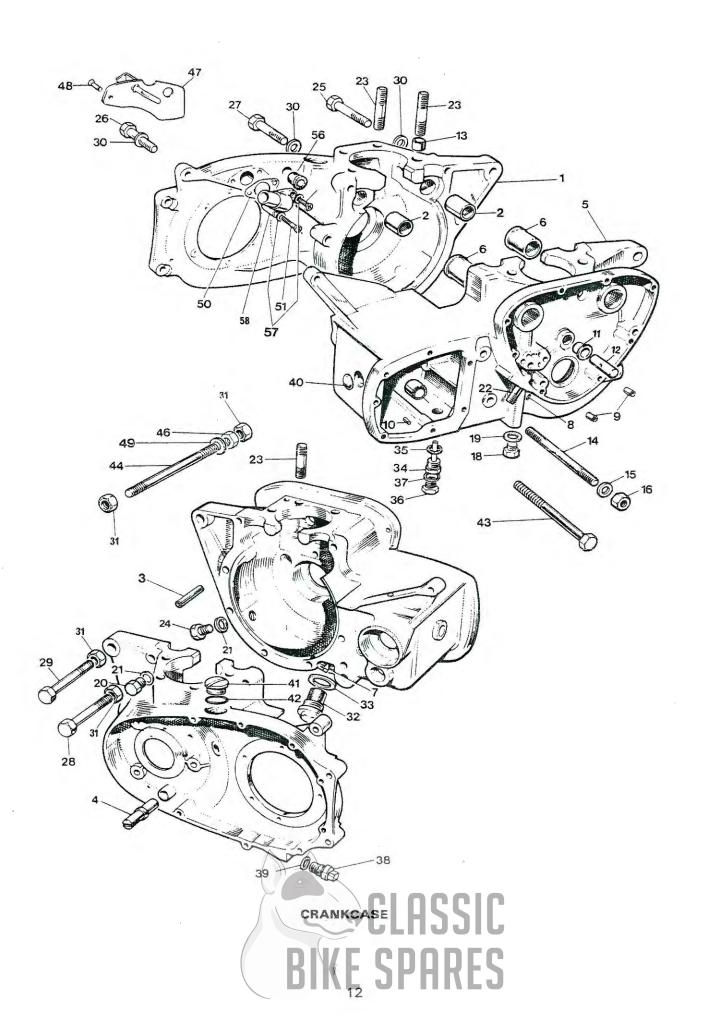

CRANKCASE

Ref. No.	Part No.	Description	Quantity
1		*CRANKCASE DRIVE SIDE	Reference Only
	71-0287	Camshaft bush L.H.	2
2 3 4 5 6 7	71-3989	Hollow dowel, crankcase joint	1
4	71-7258	Chain tensioner Pivot Pin	1
5		*CRANKCASE TIMING SIDE	Reference Only
6	71-0286	Camshaft bush R.H.	2
7	70-4538	Scavenge pipe	1.
8	70-6386	Locating peg (at oil pipes)	1
9	57-0989	Hollow dowel	2
10	57-0912	Locating peg (L/S at thrust washer)	1
11	71-7627	Bush-intermediate spindle	1
12	71-7489	Intermediate wheel spindle	1
13	70-8751	Hollow dowel, cylinder base	1
14	14-1445	Stud, rear	2
15	60-4246	Plain washer	2 1 2 1
16	14-1303	Nut	i
17	57-1606	Needle roller bearing layshaft	1
18	70-9330	Oilway plug	1
19	82-1880	Copper washer Tachometer drive plug (L.H. thread)	1
20 21	21-1871 37-3761	'O' ring, ignition timing hole plug	1 .
22	21-1863	Oil pipe stud	i
23	21-1865	Cylinder stud inner	4
23	71-3013	Cylinder stud outer	4
24	21-1872	Plug, timing hole	4
25	21-1870	Bolt, rear	1
26	14-6220	Bolt, top rear	1
27	14-6223	Bolt, top front	1
28	14-0230	Bolt, long - crankcase halves	1
29	21-1823	Bolt, short - crankcase halves	2 10
30	60-2330	Plain washer	10
31	14-1302	Nut	5
32	70-9336	Crankcase filter	1
33	70-8782	'O' Ring	1
34	57-2167	Drain plug (with level tube)	
35	60-7132	Fibre washer	1
36	21-0543	Level plug	1
37	70-2441	Copper washer	1
38 .	71-7259	Chain adjuster plug	i
39	70-6299	Washer adjuster plug	1
40 41	57-1920 57-2166	Blanking plug	· i
42	70-8782	Plug inspection 'O' ring	i
43	14-6242	Bolt, rear - crankcase halves	1
44	21-0669	Stud, crankcase halves	1
46	14-0402	Nut, exhaust ties	2
47	70-9334	Breather cover plate assembly	1
48	71-1077	Screw	1 2 1 1 2
49	60-2428	Spring washer	2
50	71-1460	Joint washer	1
51	70-7354	Screw	2
56	71-1345	Grommet, alternator leads - external	1
57	70-6559	Washer, outlet stub screw	2 1 2 1
58	71-4044	Outlet stub	1

*NOTE CRANKCASES ARE SUPPLIED ONLY AS MATCHED PAIRS PART No. 71-7604

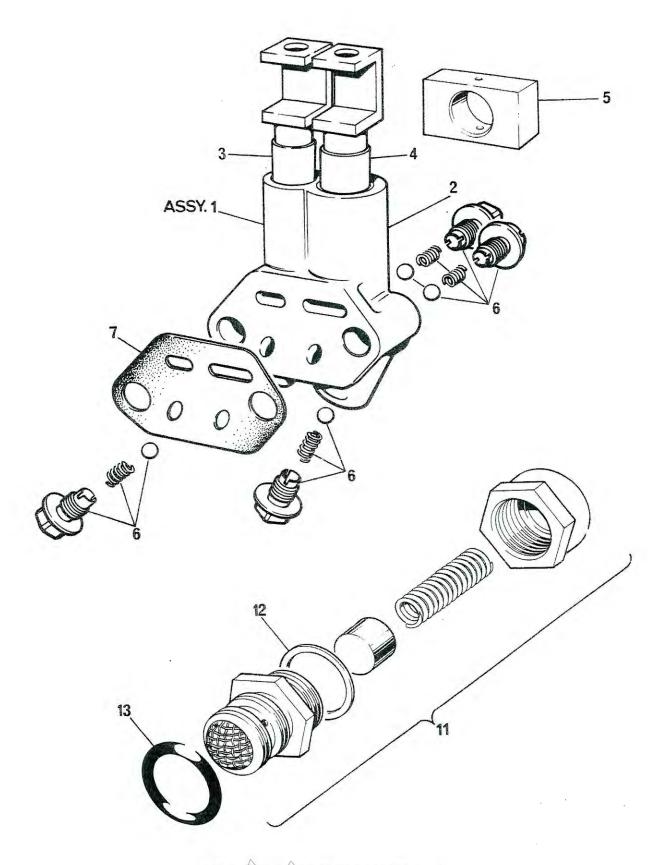


OIL PUMP AND RELEASE VALVE

CLASSIC BIKE SPARES

OIL PUMP AND RELEASE VALVE

Ref. No.	Part. No.	Description	Quantity
1	71-7317	Oil pump complete	1
2	71-7253	Pump body	1
2	70-9269	Feed plunger	1 .
3	70-6681	Scavenger plunger	1
4	70-0495	Drive block	1
5	99-7508	OIL PUMP VALVE PACK	. 1
0	71-3910	Joint washer	1
N	14-7007	Fixing screw short 11/4" U.H.	1
NI	14-7008	Fixing screwlong 11/2" U.H.	1
NI	60-2417	Washer spring - Fixing screw	2
111	71-3447	Oil pressure release valve	1
1 2	70-8754	Joint washer (cap to body)	1
13	60-3355	'O' ring, release valve	1



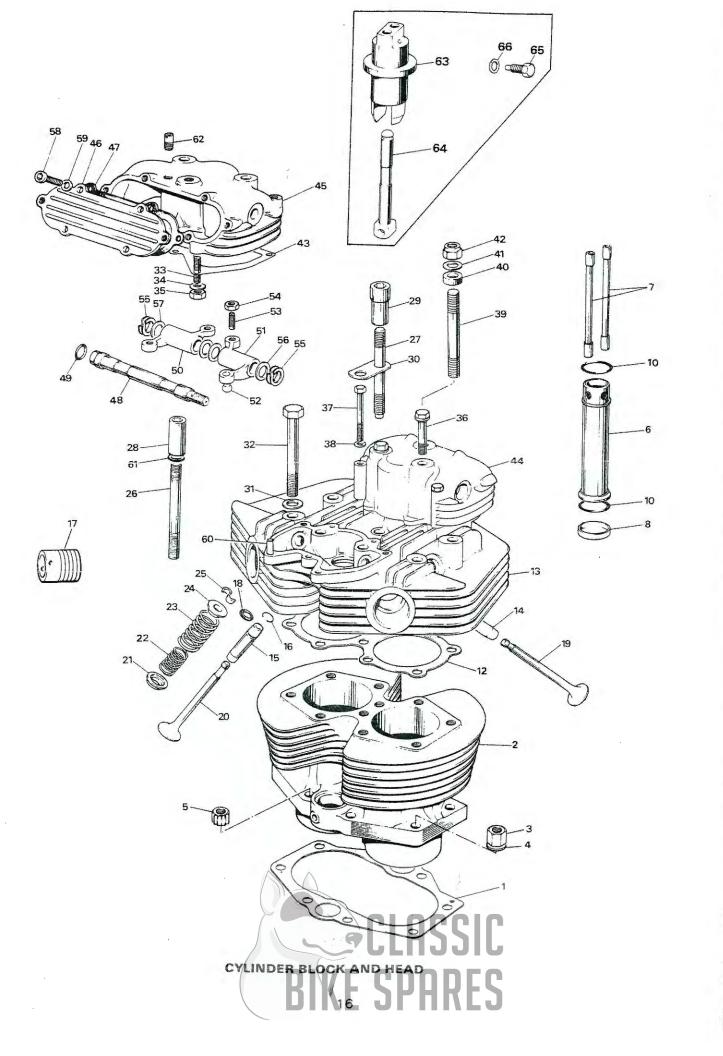

Statement of the statem

TOTAL PRINCIPLE OF THE PRINCIPLE OF THE


The state of the s

Zinza (1817

CYLINDER BLOCK AND HEAD

Ref. No.	Part No.	Description	Quantity
1	70-6309	Cylinder base washer	1
2 3 4 5 6 7 8	71-4006	Cylinder block	1 .
3	21-2177	Cylinder base nut	4 4 4 2 4 2
4	70-3446	Washer	4
5	21-0692	Cylinder base nut (12 point)	4
6	71-7191	Push rod cover tube	2
7	71-3330	Push rod	4
8	71-7196	Sleeve	2 .
10	71-1283	'O' ring	1
12	71-4619	Cylinder head gasket	
13	71-7607	Cylinder head assy.	1
14	71-7506	Inlet valve guide	2
15	71-7202	Exhaust valve guide	2
16	70-3209	Circlip-valve guide	4
17	70-9516	Exhaust stub	2
18	70-6299	Seal-inlet valve	2
19	70-4603	Inlet valve	2
20	70-2904	Exhaust valve	2
21	71-7203	Bottom cup	4
22	70-4221	Inner valve spring	4
23	70-7400	Outer valve spring	4
24	70-1543	Top collar	4
25	71-3748	Split cotter	8
26	21-2201	Stud - cylinder head (3/8 in.)	4
27	21-2200	Stud - cylinder head (5/16 in.)	2
28	21-2204	Socket nut (3/8 in.)	4
29	21-2205	Socket nut (5/16 in.)	2
30	71-3553	Bridge plate	1
31	82-2184	Washer	4
32	14-0241	Bolt - cylinder head	4
33	14-1401	Stud - rocker box	6
34	70-3302	Washer	6
35	14-0301	Nut	6
36	14-0234	Bolt - rocker box	1224222244444842421446664444
	82-2184	Washer - Bolt	4
37	21-1875	Bolt - rocker box	4



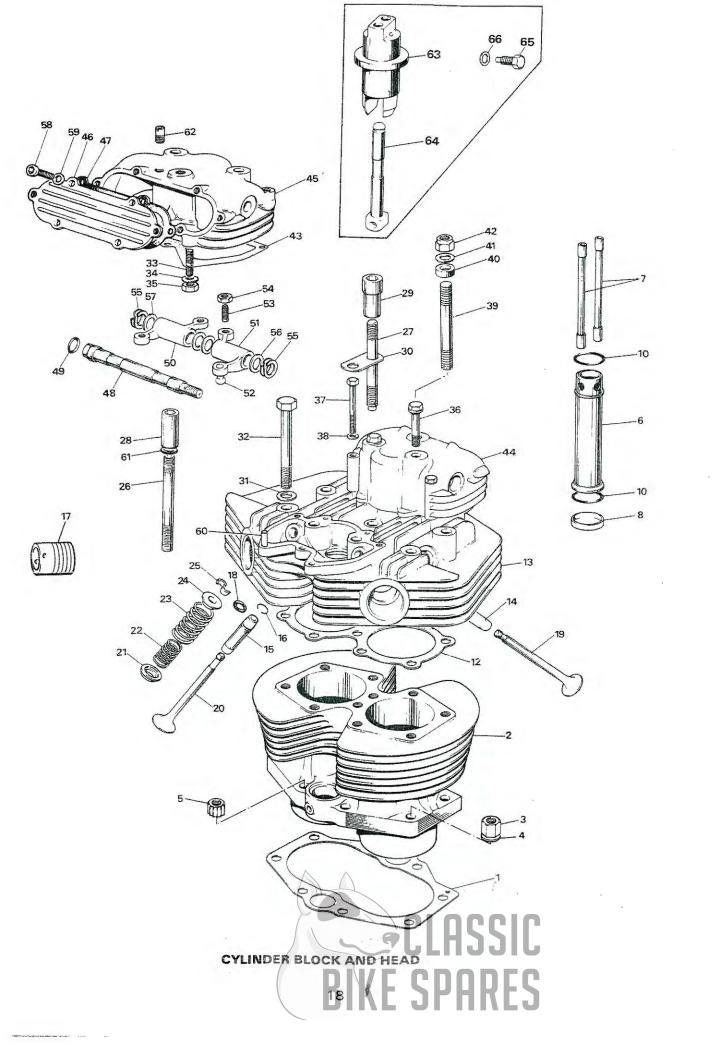

WATER OF THE PERSON NAMED IN COLUMN NAMED IN C

receive.

6.....


- meant

1

CYLINDER BLOCK AND HEAD

Ref. No.	Part No.	Description	Quantity
38 39 40 41 43 44 45 46 47 48 49 51 52 53 55 55 55 57	60-4248 21-2197 37-2338 60-2331 14-1303 71-2599 71-7596 71-7608 71-7694 71-3673 71-3549 60-3548 71-7044 71-7043 71-0070 71-7045 14-0402 70-1574 70-1575 70-1330	Washer Stud Distance piece Washer Nut Rocker box gasket Inlet rocker box Exhaust rocker box Assy Tappet inspection cover Gasket Rocker spindle Sealing ring Rocker (right exhaust, left inlet) Rocker (left exhaust, right inlet) Ball pin Adjuster pin Lock nut Spring washer Thrust washer (½ in.) Thrust washer (3/8 in.)	Quantity 4 2 2 2 2 2 1 1 1 2 2 2 2 1 1 1 2 2 2 2
57 58 59	70-1330 14-7004 60-3963	Screw - socket head Washer	12 12
60 61 62	71-2361 71-2598 71-3313	Dowel, rocker box to head Plain washer Connector - Breather	4 4 1
63 64 65	71-7194 71-7008 97-0200	Tappet Guide Block Tappet Set Bolt	2 4 2
66 N.i. N.i.	70-2441 70-7563 71-7528	Washer 'O' Ring Tappet Guide Block Inlet Manifold Stub	2 2



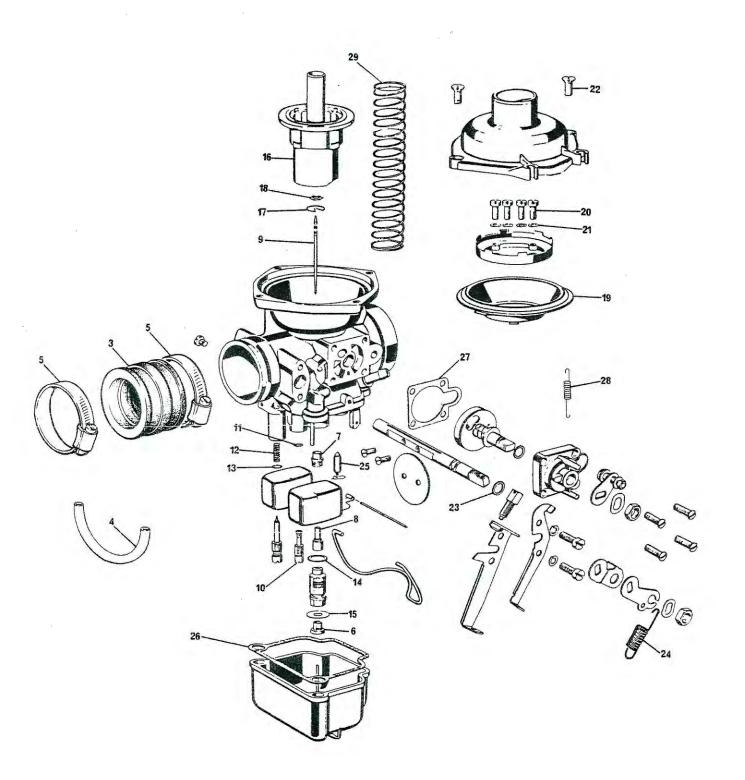





CARBURETOR

Ref. No.	Part No.	Description	Qty.
1	60-7725	Carb LH From Engine No.	1
2	60-7726	Carb RH	1
1	60-7418	Carb LH Up To Engine No.	1
2	60-7419	Carb RH J	1
3	60-7400	Rubber Carb To Head	2
4	71-7529	Balance Pipe	1
5	70-6849	Clip	2 1 2
6	99-7583	Main Jet 140cc	1
2 3 4 5 6 7 8 9	99-7526	Atomizer	1
8	99-7527	Needle Jet 2.66	1
9	99-7528	Jet Needle	1
10	99-7529	Idle Jet 45cc	1
11	99-7530	Washer	1
12	99-7531	Spring	1
13	99-7532	Rubber Ring	1
14	99-7533	Rubber Ring	1
15	99-7534	Washer	1
16	99-7582	Plunger No.3	1
17	99-7536	Retaining Spring	1
18	99-7537	Washer	1
19	99-7538	Diaphragm	1
20	99-7539	Screw	4
21	99-7540	Washer	4 4 2 1
22 23	99-7541	Screw	2
23	99-7542	Sealing Ring	1
24	99-7543	Return Spring	1
25	99-7544	Float Needle	1
26	99-7545	Float Chamber Seal	1
27	99-7546	Seal	1
28	99-7547	Choke Return Spring	1
29	99-7533	Spring-Plunger	1



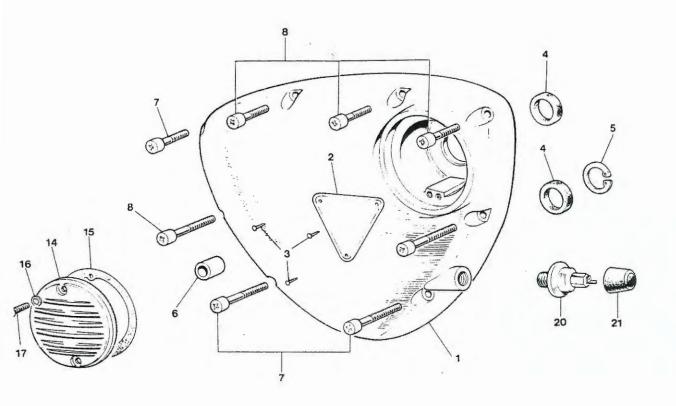

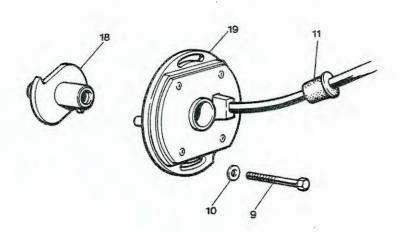


4.4

TIMING COVER AND CONTACT BREAKERS IC BLKE SPARES

TIMING COVER AND PULSE SENSOR


Ref. No.	Part No.	Description	QUANTITY
1 2 3 4 4 N I 5 6 7 8 9 10 11 12	71-7318 70-4016 60-4255 70-4568 70-6387 71-7263 70-4569 57-0989 14-7007 14-7006 14-0207 70-8163 70-4707 70-6550	Timing cover c/w Patent plate Patent plate Hammer - drive screw Oil seal Oil seal (0 · 020 in. undersize) Joint Washer - Timing Cover Circlip Hollow dowel Screw, long Screw, short Bolt Plain washer Rubber grommet Pillar bolt	1 1 3 1 A 1 1 2 2 6 1 1 1 2 2
13	70-6559	Plain washer	2
14 15 16 17 18 19 20 21	71-7159 71-1462 97-0430 70-7354 99-7043 99-7044 60-3719 71-2930 99-7588	Cover Joint washer Fibre washer Screw (½ in. U.H.) Reluctor Lucas 54400905 - Up To Engine No. Pulse sensor c/w lead Lucas 54402693 Oil pressure switch Cover pressure switch Reluctor Lucas - 54403727 - From Engine No.	1 2 2 1 1 1 1



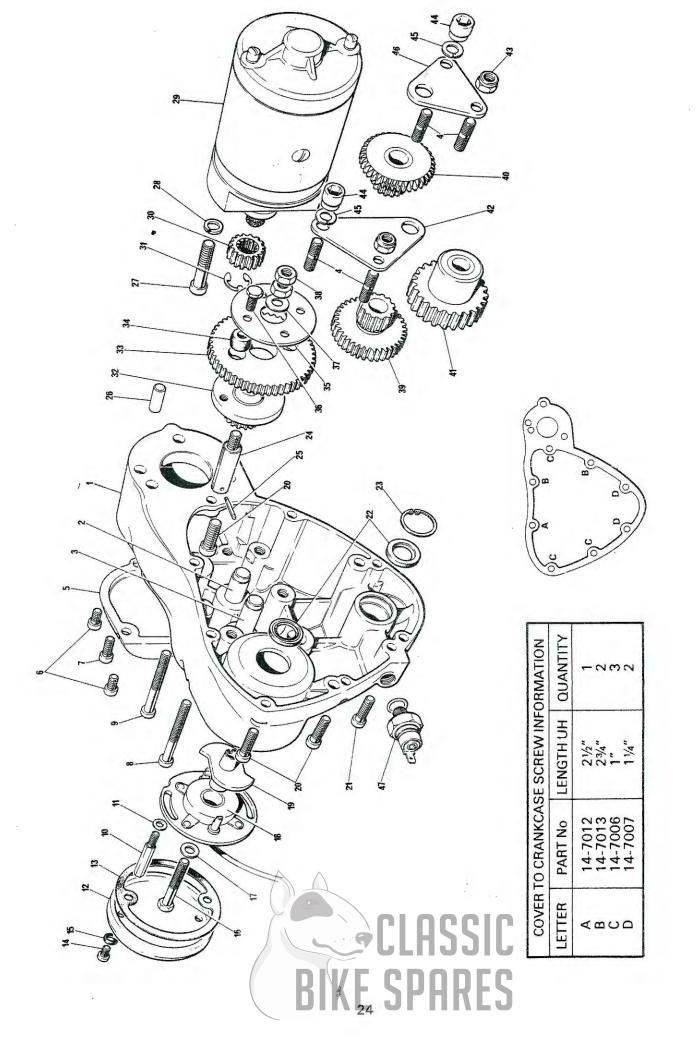

E/S TIMING COVER GEARS

Ref No.	Part No.	Description	Quantity
1	71-7501	Timing Cover	1
2	71-7377	Spindle: 2nd stage	1
2	71-7376	Spindle: 3rd stage	1
4	21-7066	Stud-Outrigger plate	4
5	71-7327	Cover-starter motor	1
N1	71-7328	Joint washer-cover	1
6	14-7003	Screw-cover to case 5/8" UH	2
7	14 - 7006	Screw-cover to case 1" UH	1
	14-7012	Screw-timing cover to c/case 21/2" UH	1
8	14-7012	Screw-timing cover to c/case 23/4" UH	2
9	71-7400	Pillar bolt	2
10		Washer-pillar bolt	4
11	70-6559	Cover-pulse sensor	1
12	71-7159	Gasket-cover	1
13	71-1462		
14	70-7354	Screw-cover fixing	2 2
15	97-0430	Washer-fibre	1
16	14-0207	Bolt-reluctor fixing - Up to engine No.	1
17	70-8163	Washer-bolt	1 1 54402602
18	99-7044	Pulse sensor	1 Lucas 54402693 1 Lucas 54400905
19	99-7043	Reluctor - Up to engine No.	
20	14-7006	Screw-timing cover to c/case 1" UH	3
21	14-7007	Screw-timing cover to c/case 11/4" UH	2
22	70-4568	Oil seal-at camshaft and crankshaft	2 2
23	70-4569	Circlip-oil seal at crankshaft	
24	71-7494	Spindle for gear 2/3	1
25	60-7385	Roll pin-spindle fixing	1
26	71-7383	Dowel-motor to cover	1
N1	60-7295	'O' Ring-motor to cover	1
27	14-7020	Screw-motor to cover	3
28 .	60-2428	Washer-spring for screw	3
29	60-7296	Starter motor	1
30	71-7226	Pinion-starter motor	1
31	60-7292	Retainer-pinion to starter motor	1
32	71-7416	Pinion no. 3 & coupling-16T	1
33	71-7417	Pinion no.2-54T	1
34	60-7340	Bush-shock absorber	2
35	71-7418	Face washer-bush retainer	1
36	21-7083	Screw-face washer	1
37	60-2330	Washer-thrust	2
38	14-0402	Nut-end float adjustment	1
39	71-7242	Gear no. 4/5 36-16T	2
40	71-7621	Gear no. 6/7 36-9T	1
41	71-7619	Gear no. 8-19	1
42	71-7379	Plate-upper outrigger	1
43	14-1202	Nut-plate fixing	2 2 2
44	21-7092	Nut-socket head	2
45	60-2428	Washer spring	2
46	71-7380	Plate-Lower outrigger	1
47	60-3719	Oil pressure switch	1
NI	71-7421	Cush Drive Assv	1
16	21-7150	Bolt-Reluctor fixing - From engine No.	1
	99-7588	Reluctor - From engine No.	1 Lucas 54403727
Note:- Fo	r Sprag clutch	information see page 13	
	,	BIKE SPARES	
		25	

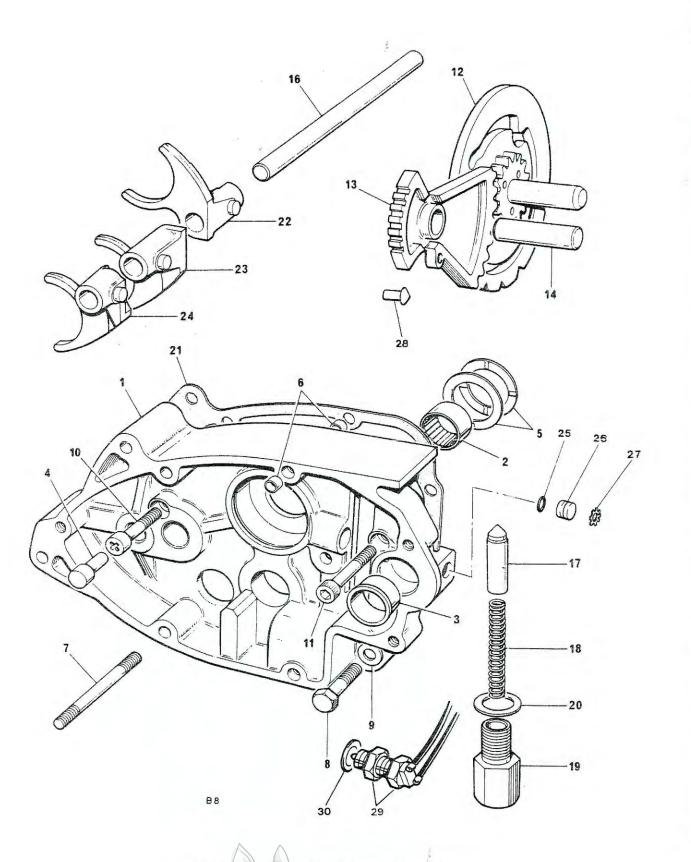

GEARBOX INNER COVER AND SELECTORS

CLASSIC BIKE SPARES

GEARBOX INNER COVER AND SELECTORS

Ref. No.	Part No.	Description	Quantity
1 23 45 67 89 101 12 13 14 16 17 18 19 20 12 22 22 22 22 23 23 23 23 23 23 23 23 23	57-7074 57-1614 57-7009 57-0045 57-1607 57-0989 21-2149 14-6217 70-3446 14-6608 14-7023 57-4889 57-7052 57-7011 57-3989 57-7020 57-4459 57-4459 57-4460 57-3978 57-7012 57-4364 57-4366 57-4660 37-3761 57-7016 57-7016 57-7016 57-7041 60-7240 70-1335	GEARBOX INNER COVER Layshaft bearing Gearchange spindle bush Kickstart stop Thrust washer Hollow dowel Stud Bolt Washer Screw Screw Camplate Operating quadrant c/w pin Quadrant spindle Selector fork rod Index plunger Plunger spring Housing, index plunger Washer Joint washer, inner cover to crankcase Selector fork - mainshaft 4th gear Selector fork - layshaft 3rd gear Selector fork - layshaft 1st gear 'O' ring Plug Retainer Operating pin Switch neutral C/W lock nut Washer - For Switch	1 1 1 1 2 4 2 1 1 1 1 1 1 1 1 1 1 1 1 1



12


GEARBOX SHAFTS AND GEARS

Cham carding

GEARBOX SHAFTS AND GEARS

Ref. No.	Part No.	Description	Quantity
1 23 4 5 6 7 8 9 11 12 13 14 14 15 16 18 20 21 22 23	60-3500 70-3789 57-4779 60-3511 60-3500 57-7077 57-3988 57-4376 57-4653 57-4653 57-4790 57-4787 57-4657 57-4657 57-4654 60-3494 57-4661 57-4782 57-4396	Oil seal, cover plate Cover plate MAINSHAFT HIGH GEAR ASSEMBLY Needle roller bearing Oil seal, high gear MAINSHAFT Bush Mainshaft 4th gear MAINSHAFT 3rd GEAR c/w bush Mainshaft 1st and 2nd gear LAYSHAFT ASSY Layshaft high gear Layshaft 4th gear c/w bush Circlip for layshaft high gear Layshaft 3rd gear LAYSHAFT 2nd GEAR c/w bush Circlip Driving dog Gearbox sprocket - 20T Locknut	1 1 2 1 1 1 1 1 1 1 1 1 1
24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 NI	57-4909 70-0489 60-3552 57-4113 57-1962 57-1963 57-0730 57-0731 57-7076 21-7072 57-1736 71-1070 60-3512 60-4100 57-7069	Lock washer Circlip Mainshaft bearing Circlip Washer Pinion Sleeve Pinion Spring K/Starter pinion K/Starter ratchet Tab washer Nut Clutch operating rod 'O' ring, gearbox sprocket Oil seal, gearbox sprocket High gear bearing Spacer M'Shaft	1 1 Hoffman LS8 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1




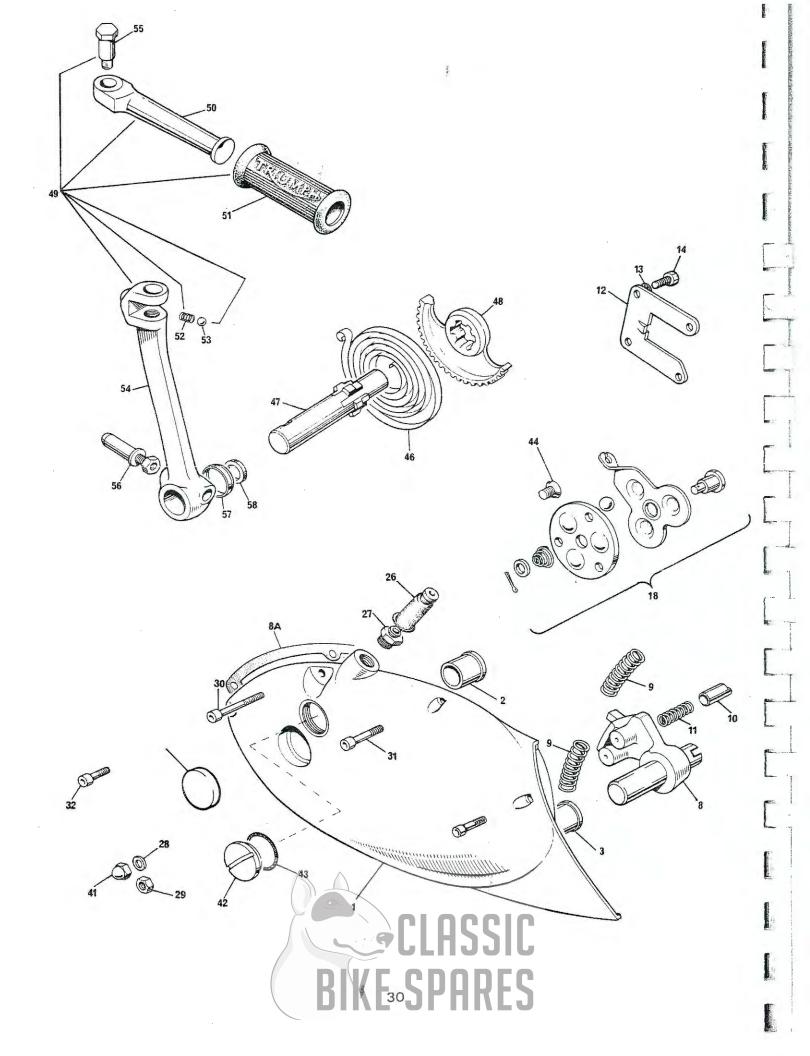

GEARBOX OUTER COVER

Ref. No.	Part No.	Description	Quantity
1 2 3 8 8A 9 10	57-7050 57-7055 57-7008 57-7021 71-1448 57-7051 57-4403 57-0405	GEARBOX OUTER COVER Kickstarter spindle bush Gearchange spindle bush Gearchange quadrant assembly Gasket outer cover Quadrant return springs Gearchange quadrant plunger Plunger spring	1 1 1 1 2 2 2 2
12 13 14	57-0407 70-1612 14-6103	Guide plate Serrated washer Bolt - guide plate	4
18 26 27 28 29 30 31 32 41 42 43	57-7033X 57-1646 57-3762 60-4247 14-1302 14-7013 14-7007 14-7006 21-0544 57-2166 70-8782	Clutch lever assembly Rubber cover Abutment for clutch cable Plain washer Nut Screw cover to crankcase Screw outer cover to inner Screw outer cover to inner Domed nut Filler plug 'O' ring	1 1 1 2 1 2 2 1 1 1
44 45 46 47 48 49 50 51 52 53 54 55 56 57 58	21-1879 57-7068 57-7083 57-4117 57-7018 57-7017 57-2330 57-1167 60-2364 57-2173 21-0541 57-4356 57-1955 57-1956	Screw Plug G'Box Cover K/Starter return spring K/Starter axle K/Starter Quadrant Folding K/Starter assy K/Starter Pedal Pedal Rubber Pedal locating spring Steel ball 1/4 dia Kickstarter crank Pedal bolt Cotter pin c/w nut & washer Oil seal housing Oil seal	1 - Non - K/Start 1 Optional -When K/Starter 1 Delete 57-7068 Plug 1 1 1 1 1 1 1 1 1



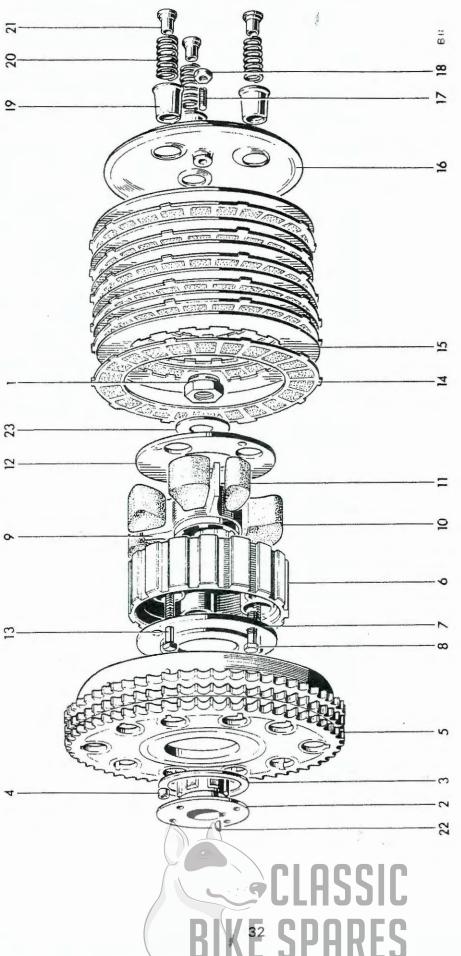

CI.UTCH


BIKE SPARES

CLUTCH

Ref. No.	Part No.	Description	Quantity
1	14-1307	Clutch securing nut	1
2	57-3929	Hub Thrust washer	i
3	57-3931		20
4	57-0394	Roller	1
5	57-7065	Sprocket and housing	. 1
2 3 4 5 6 7 8 9	57-4438	Centre	1
1	57-4436	Inner plate	3
8	21-2157	Bolt	1
9	57-4636	Shock absorber spider	3
10	57-1722	Drive rubber (large)	3 3 1 3 6
11	57-1723	Rebound rubber (small)	1
12	57-4437	Outer plate	2
13	57-4754	Screwed pin	5
14	57-7058	Driving plate (bonded)	6
15	57-7060	Driven plate	1
16	57-4590	Pressure plate	1
17	57-2159	Adjuster pin	1
18	14-0403	Nut	2
19	57-1931	Spring cup	3 3 3
20	57-1830	Spring	3
21	57-2526	Pressure nut	3
22	60-4253	Key	1
23	21-7073	Washer	1
NI	57-7056	Clutch assembly complete	1
NI	57-4435	Clutch shock absorber assembly complete	1




-28

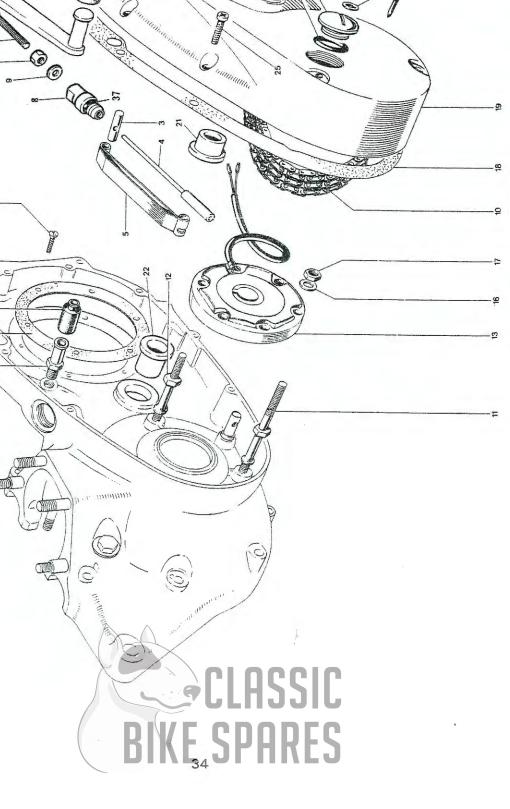

CHAINCASE AND CHAINS

Ref. No.	Part No.	Description	Quantity
1	70-3821	Countersunk screw	6
2	71-1419	Joint washer	1
3	70-5087	Trunnion	1
4	71-7255	Tie rod - chain tensioner	1
5	70-5085	Blade - chain tensioner	1
6	21-7064	Screw - chain adjuster	1
2 3 4 5 6 7	14-0401	Nut - screw	1
8	71-7259	Plug - tensioner screw	1
8	60-7268	Washer - for Nut	1
10	60-4125	Primary chain, 3/8 in. Triplex x 84 links	1
11	21-2199	Stator stud	2
12	21-2198	Stator stud	1
13	60-7256	Alternator CPTE - See item 38,39	1 Lucas 54021841
14	70-9360	Sleeve nut	1
15	70-4144	Rubber grommet	1
16	60-4247	Plain washer	3 3
17	21-1852	Self-locking nut	3
18	71-7009	Joint washer	1
19	71-7464	Chaincase	1
20	71-3892	Timing pointer	1
21	57-7055	Bush - footchange spindle	1
22	57-7009	Bush - footchange spindle inner	1
23	71-3895	Inspection plug	2
24	71-3896	'O' ring	2
25	14-7006	Screw	6
26	14-7019	Screw	2
27	21-0544	Domed nut	2 2 6 2 2 2
28	82-1880	Copper washer	2
29	57-7010	Gearchange pedal	1
30	57-2331	Pedal rubber	1
31	14-0201	Bolt	1
32	57-1956	Oil seal-spindle	1
33	14-7017	Drain plug - primary cover	1
34	70-6299	'O' ring - drain plug	1
35	60-2118	Rear chain 5/8in. x 3/8in. x 107 links	1
36	57-7062	Footchange spindle	1
37	70-6299	'O' Ring for plug - Ref. line 8	1
38	99-7057	Stator - Lucas 47244	1
39	99-7584	Motor - Lucas 54212006	1
-		INC. The Control of t	



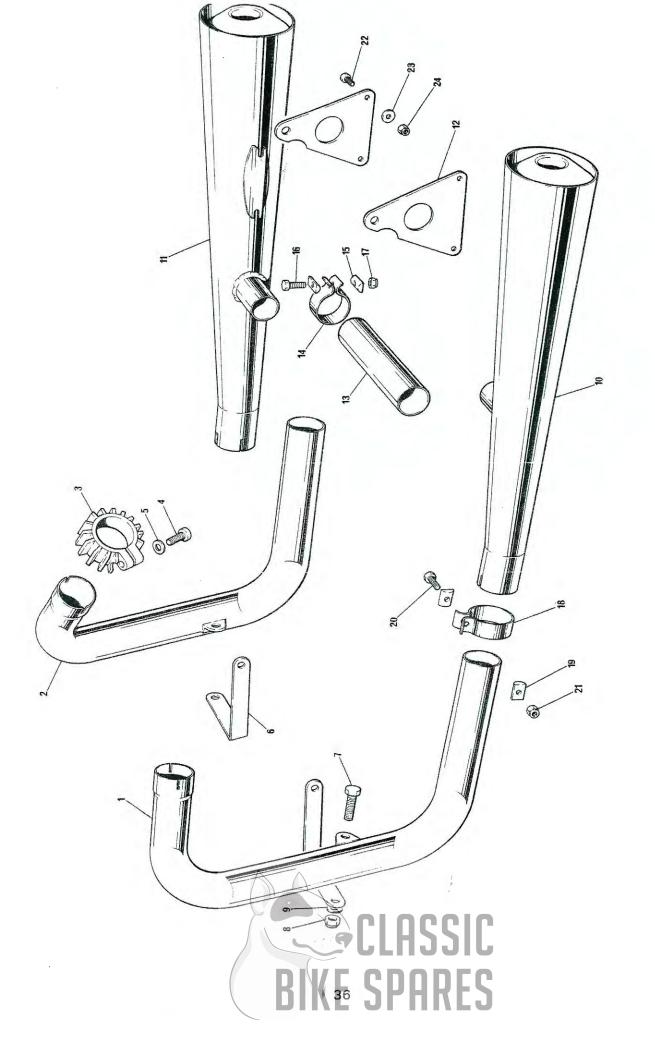


because and

EXHAUST PIPES & SILENCERS

Street, or other Persons	Ref. No.	Part No.	Description	Quantity
3	1	71-7699	Exh pipe assy LH	1
1	2	71-7700 71-0216	Exh pipe assy RH Finned clip	1 2
H	4	70-6744	Bolt finned clip	2 2 2 2 2 2 2
	5	70-8860	Washer	2
7	6 7	71-7701	Exh pipe stay	2
1	7	14-0102	Bolt	2
7.0	8	14-1301 60-2329	Nut Washer	2
,	10	71-7677	Silencer assy LH	1
1	11	71-7678	Silencer assy RH	i
	12	83-8387	Hanger brkt silencer	2
	13	71-7680	Coupling pipe	1
1	14	70-5874	Clip-coupling pipe	2
.1	15	70-3768	'D' washer	4
	16 17	14-0219 14-1202	Bolt Nut	2
7	18	71-7694	Clip silencer to pipe	2
-	19	70-3768	'D' washer	4
_	20	14-0219	Bolt	2
-	21	14-1202	Nut	2
1	22	14-0102	Bolt silencer to hanger	4
.1	23	60-2338	Washer silencer to hanger	2 4 2 2 2 4 4 2 2 4 4 4 4
_	24	14-1201	Nut silencer to hanger	4
1				



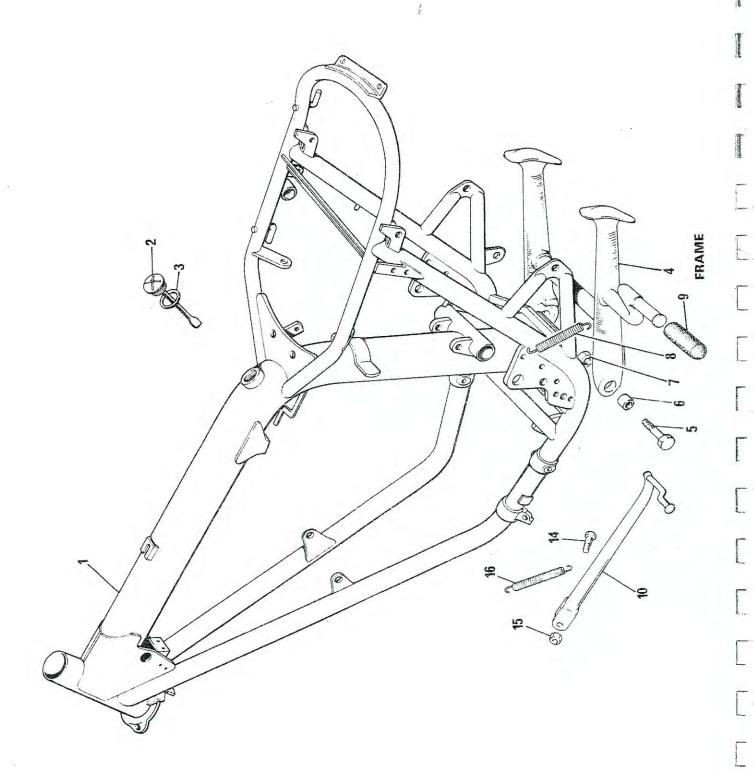



FRAME

Ref. No.	Part No.	Description	Quantity
1 23 4 5 6 7 8 9 10 14 15 16 N	83-8265 71-3463 60-3616 83-7532 14-0147 83-7460 14-1305 83-3793 57-2331 83-7553 82-7021 14-1303 82-8382 60-3361	Frame Oil filler cap 'O' ring Centre stand Pivot bolt Pivot bearing bush Nut - Pivot bolt Return spring Pedal rubber Prop stand Pivot bolt Nut - bolt Return spring Transfer - "made in England"	1 1 1 2 2 2 2 1 1 1 1 1
NI	60-7168	Transfer - "Radio Suppression"	1



SWINGING ARM AND SUSPENSION UNITS


Extramological Experimental Exp

ten a de la compania de la compania

SWINGING ARM AND SUSPENSION UNITS

Ref. No.	Part No.	Description	Quantity
	83-8302	Swinging arm assy c/w bushes	
1	83-8247	SWINGING ARM	1
2 3 4 5 6 7 8 9	83-2521	Bush	1 4 1 1 2 1 1 4 1 2
3	60-7336	Grease nipple	1
4	21-7097 83-2691	Washer for nipple	j.
5	83-8257	Sleeve, swinging arm pivot Distance piece R.H.	1
7	83-2689	Distance piece L.H.	1
8	83-2692	Dirt excluder	4
9	21-2087	Pivot bolt - swinging arm	1
10	83-2266	Washer, swinging arm pivot	2
11	14-1307	Nut, swinging arm pivot	1
12	83-8353	Brake torque stay	1
14	21-7047	Bolt torque stay - swinging arm	1
15	21-7065	Bolt, torque stay - caliper	1
16	60-2331	Washer, torque stay	2
17 18	14-1303 60-7644	Nut, torque stay SUSPENSION UNIT	1 1 2 2 2
10	00-7044	303FENSION ONLY	2
20	14-0235	Bolt, damper - top	2 4 1
21	60-2331	Washer, damper-top and bottom	4
22	14-1203	Nut, damper - RH Btm	1
23	14-0237	Bolt, damper, lower RH	1
24	83-8278	Chainguard	1
25	60-2347	Washer, chainguard fixing - front	1
26	14-0206	Bolt, chainguard fixing front	1
N.I.	60-1841	Grease Nipple Fibre Washer	1
N.I.	83-7221		2
27	14-0235	Bolt damper-lower LH	1
28 29	14-1303 14-1203	Nut damper LH Btm Nut damper top LH & RH	1 2 1 1 2 1
30	14-1301	Nut chainguard bolt front fixing	1
NĬ	83-8386.	Bracket rear brake hose	1



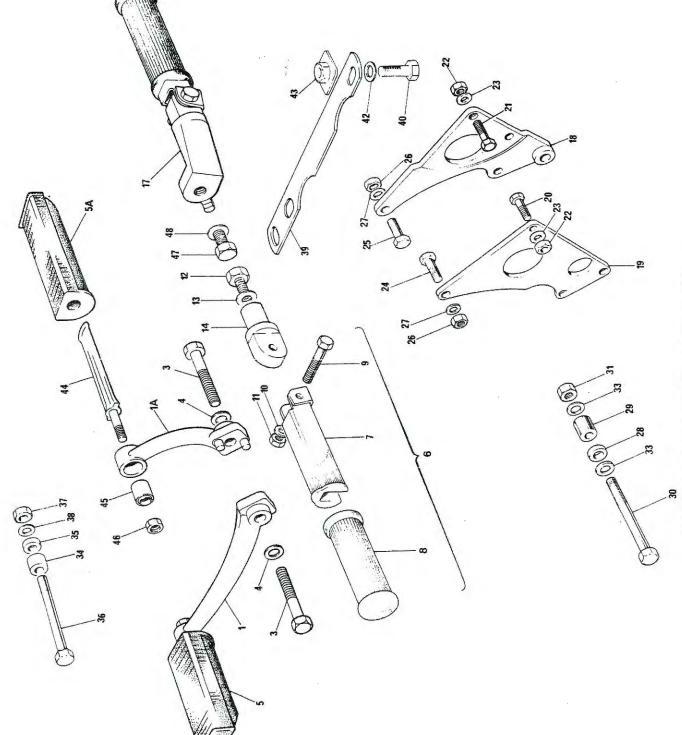


CLASSIC BIKE SPARES MOTOR UNIT FITTINGS AND FOOTRESTS

MOTOR UNIT FITTINGS AND FOOTRESTS

Ref. No.	Part No.	Description	Quantity
1 1A	83-8034 83-8036	Footrest Left Footrest right	1
3 4 5 5 6 7 8 9 10 11 12 13 14 17 18 19 20 21 22 23 24 25 25 26 27 28 29 30 31 31 31 31 31 31 31 31 31 31 31 31 31	14-0259 60-2421 83-7256 83-7259 83-7659 82-9054 14-0216 82-9089 14-1302 14-0128 60-2419 83-8419 83-8282 83-8255 14-0115 14-0218 14-0218 14-0216 14-1302 60-2330 14-0220 14-0222 14-1302 60-2321 83-8288 83-8287 21-2112 14-1304 60-2332	Footrest bolt Washer Footrest rubber LH Footrest rubber RH PILLION FOOTREST ASSEMBLY Pedal Pedal Rubber Bolt Washer Nut Bolt Washer Hanger to frame LH Hanger P/F-C/W peg Hanger - RH Rear motor plate right Rear motor plate left Bolt Bolt Bolt Rear motor plates to frame Nut Washer Bolt-LH upper and lower Bolt-RH lower Nut Washer Distance piece - left Distance piece - right Bolt Nut Washer Washer Washer Washer Washer	2 1 1 1 2 2 2 2 2 2 2 2 1 1 1 1 1 1 1 1
33 34 35 36 37 38 39 40 42 43	83-8290 83-8289 21-7142 14-1304 60-2332 83-8285 14-0128 60-2419 83-4086	Distance piece - left Distance piece - right Bolt Nut Washer Steady bracket motor to frame Bolt Spring washer Attachment plate Motor fixing front Motor fixing front Bracket to frame Bracket to frame	1 1 1 1 1 1 1
44 45 46 47 48	83-8038 60-7333 14-1303 14-0126 60-2419	Footrest Peg LH/RH Rubber Bush Nut Bolt Hanger To Frame RH Washer	2 2 2 1 1



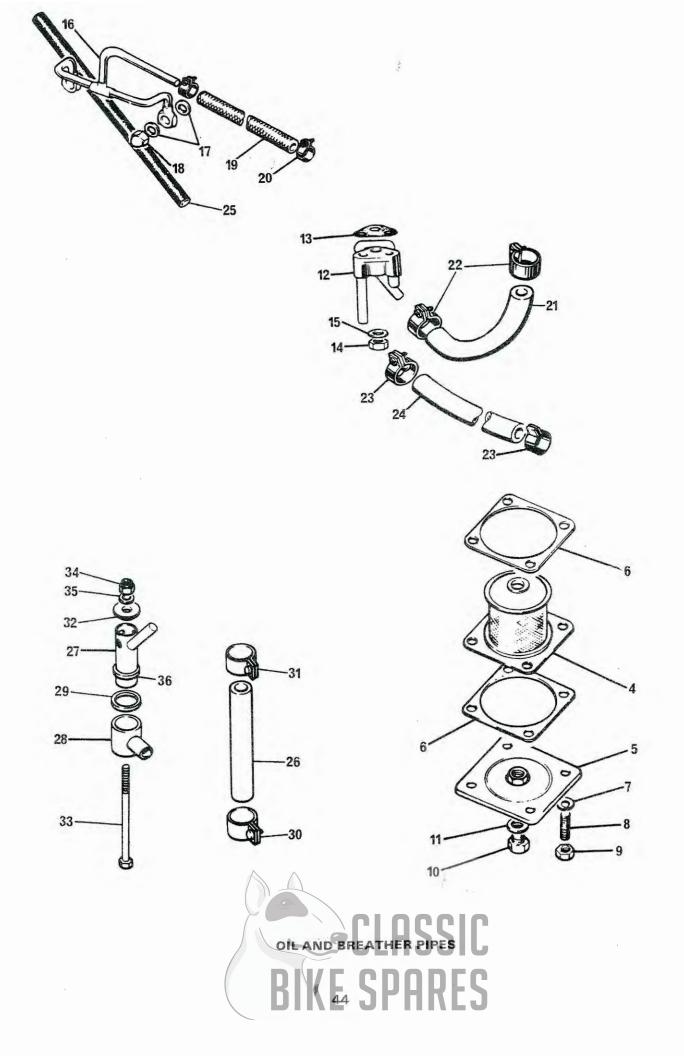

STATE OF THE PARTY OF THE PARTY

THE STATE OF THE S

[

L.

-

h we have the second

.

1 ,

.


Z Z

Erkentik

OIL AND BREATHER PIPES

Part No.	Description	Quantity
	Oil filter	1
	Sump plate	. 1
		2
		2 4
	Stud sump plate to frame	4
		4
		1
	Copper washer - Drain plug	1
	Oil junction block	1
		1
	Nut 7	1
	Washer Junction to block to crankcase	1
	Rocker oil pipe	1
	Washer	4
	Nut	4 2 1 2 1 2 2
71-3551	Rocker feed pipe	1
70-6848		2
		1
60-4429		2
60-4428	Clip - feed pipe	2
71-7015	Oil feed pipe	1
83-7154		1
83-7323	Breather pipe - crankcase to air box	1
83-7703	Breather tower	1
83-7148	Banjo union	1
21-7103	Washer - banjo union	1
60-2252	Clip - breather pipe to adaptor	1
60-7117	Clip - breather pipe to banjo	1
83-7882	Cap - breather tower top	1
14-0213	Bolt - breather tower to air box	1
14-1901	Nut - breather tower to air box	1
70-2441	Washer - breather tower to air box	1
83-7884	Collar	1
	70-6848 71-7058 60-4429 60-4428 71-7015 83-7154 83-7323 83-7703 83-7148 21-7103 60-2252 60-7117 83-7882 14-0213 14-1901 70-2441	83-4783 Oil filter 71-7584 Sump plate 83-2829 Gasket 60-2330 Washer 21-2109 Stud Sump plate to frame 14-1302 Nut 21-1872 Drain plug 70-1335 Copper washer - Drain plug 71-7176 Oil junction block 71-3754 Joint washer 21-1908 Nut 70-3446 Washer Junction to block to crankcase 71-3550 Rocker oil pipe 70-1335 Washer 21-0550 Nut 71-3551 Rocker feed pipe 70-6848 Clip - rocker feed pipe 71-7058 Oil return pipe 60-4429 Clip - return pipe 60-4428 Clip - feed pipe 71-7015 Oil feed pipe 71-7016 Oil feed pipe 83-7154 Oil tank vent pipe - to rocker box 83-7323 Breather pipe - crankcase to air box 83-7103 Washer - banjo union 60-2252 Clip - breather pipe to banjo 60-7117 Clip - breather pipe to banjo 83-7882 Cap - breather tower to air box Nut - breather tower to air box Washer - breather tower to air box Nut - breather tower to air box Nut - breather tower to air box Washer - breather tower to air box Nut - breather tower to air box Nut - breather tower to air box




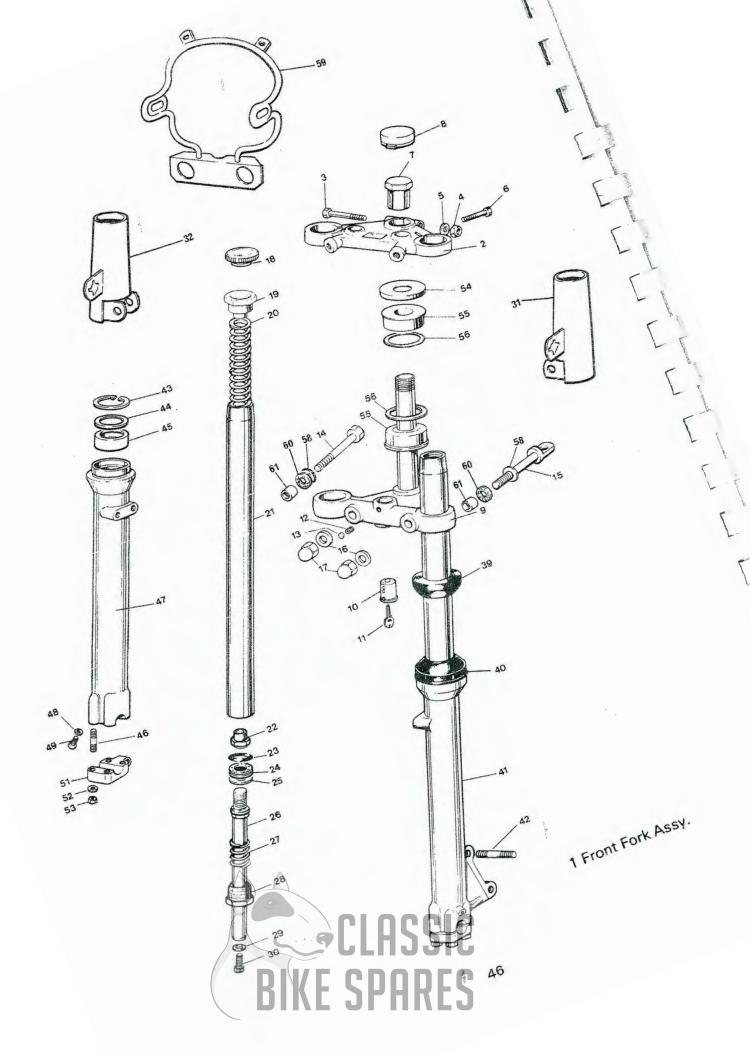

TELESCOPIC FRONT FORK

Ref. No.	Part No.	Description	Quantity
12345678911123145678N/19012234567890129N.I.	97-7240 97-4541 14-0234 14-1303 60-2331 14-1034 97-7070 97-7071 97-7095 60-7271 60-0623 21-0578 97-2266 14-0239 97-7218 60-2331 21-0550 97-7034 97-4259 97-4387 97-4387 97-4011 97-4380 97-4012 97-4003 97-4010 97-4009 97-4009 97-4009 97-4009 97-4004 14-1019 97-7247 97-7246 97-4461 97-4461	Fork Assy Top yoke Pinch bolt Nut Washer Cap screw Steering stem nut Bottom yoke & stem Lock c/w 2 keys neiman type Key (state serial no.) Grub screw lock fixing Sealing washer Pinch bolt - right Eye bolt - left Washer eye bolt Nut - Domed Cap screw assembly c/w insert Insert self adhesive Top nut Main spring Stanchion Nut - damper valve 'O' ring Damper valve Plain washer - damper valve Damper tube Recoil spring End plug Sealing washer Damper fixing screw Top cover assy - LH Top cover assy - RH Rubber ring Washer For Top Nut	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 4 2 2 2 2



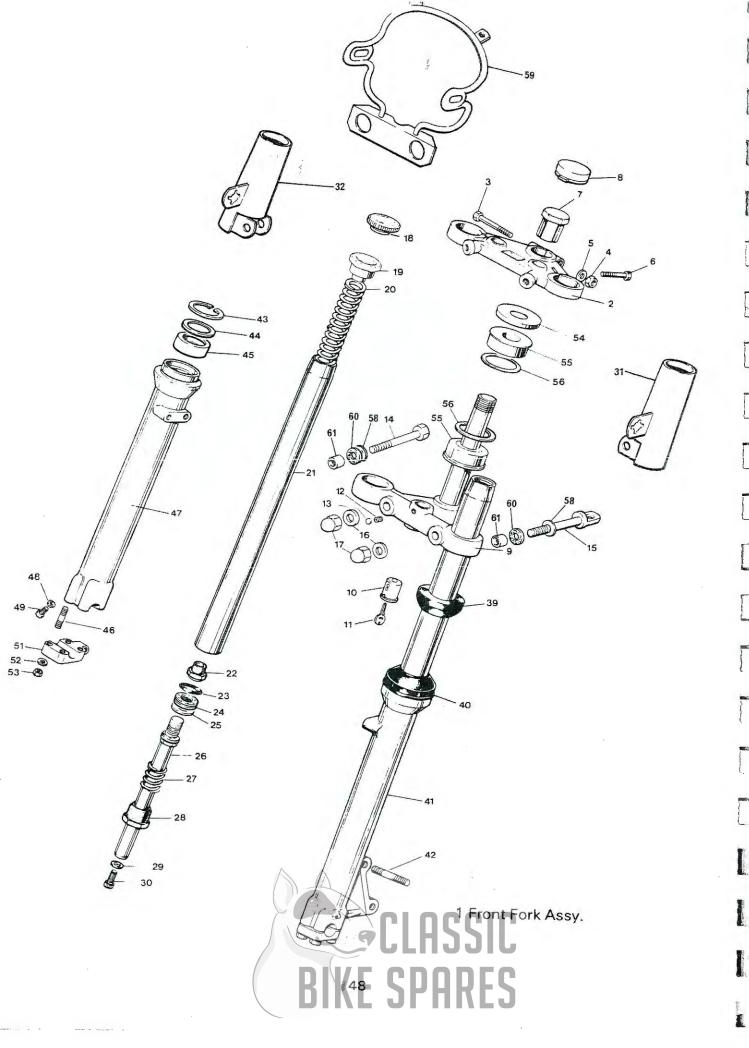


TELESCOPIC FRONT FORK

Ref. No.	Part No.	Description	Quantity
40	97-4002	Scraper sleeve	2
41	97-7020	Bottom member LH	2 1 2 1
42	21-2189	Stud - caliper	2
43	60-7269	Circlip	1 .
44	97-7093	Retainer	1
45 46	97-7079 21-2102	Oil seal Stud - spindle	1
47	97-7147	Bottom member RH	1 2 1
43	60-7269	Circlip	1
44	97-7093	Retainer	i
45	97-7079	Oil seal	1
46	21-2102	Stud - spindle	2
48	97-3893	Washer - drain plug	2
49	97-3894	Drain plug	2
51	97-7062	Cap wheel spindle R.H.	2
52	60-2428	Washer - cap	8
53 54	14-0302 97-4028	Nut - cap Dust cover	8
55	97-4028	Bearing	2
56	83-2007	Backing ring	2
N/I	82-6784	Grommet throttle cable	1 2 2 2 2 8 8 1 2 2
58	97-7219	Spacer- pinch bolts	
59	97-7217	Headlamps mounting bkt.	2 1 2 2
60	82-5753	Grommet - Eye bolts	2
61	97-7248	Spacer - For Grommet	2
	PA	ARTS REQ'D FOR TWIN DISC BRAKE CONDITION	
14	97-7218	Eye bolt	2
NI	97-7253	Front fork assy complete	2
NI	97-7210	Bottom member assy-RH	1



c/w helicoils

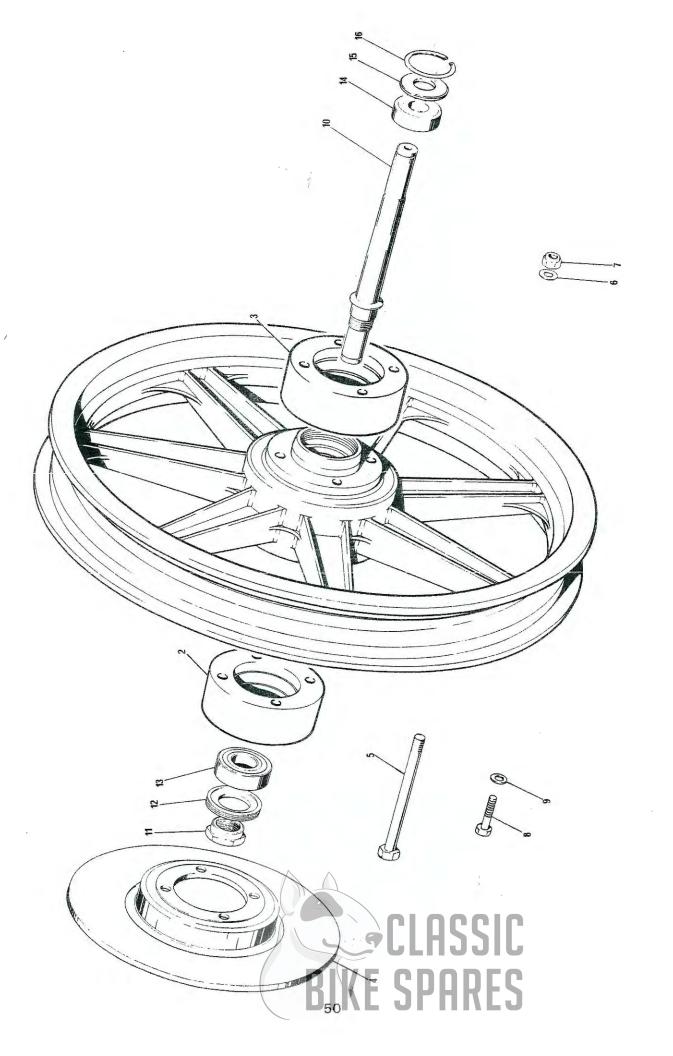


Endocated Endocated Endocated


Commenter of the state of the s

FRONT WHEEL CAST ALLOY

	Ref. No.	Part No.	Description	Quantity
NI	1	37-7239	Front wheel assy c/f 5 hole	1ALT
NI		37-7221	Front wheel assy 4 hole	1ALT
		37-7161	Bearing carrier L.H. 4 hole	1ALT
	2	37-7235	Bearing carrier LH for c/f wheel 5 hole	1ALT
	3	37-7162	Bearing carrier R.H. 4 hole	1ALT
	3	37-7234	Bearomg carroer RH for c/f wheel 5 hole	1ALT
	4	37-7175	Disc-not chromed - 4 hole	. 1ALT
	4	37-7236	Disc 5 hole for c/f wheel	1ALT
	5	21-2207	Bolt	4ALT
	2 2 3 3 4 4 5 6 7 8 9	70-8770	Washer Disc to hub 4 hole	8ALT
	7	14-1203	Nut	4ALT
	8	14-6233	Bolt disc to hub for c/f wheel	10ALT
	9	60-2331	Washer disc to hub for c/f wheel 5 hole	10ALT
	10	37-4132	Spindle	1
	11	37-4133	Nut - wheel spindle	1
	12	37-4134	Lock ring - left	1
	13	37-7041	Bearing-left	1
	14	37-7042	Bearing-right	1
	15	37-1237	Dust cover - right	1
	16	57-0280	Circlip-right	1
			FRONT WHEEL FOR TWIN DISC - CAST ALLOY	
		37-7183	Front wheel assy - 4 hole	1ALT
		37-7175	Disc - 4 hole	2ALT
		21-7085	Bolt - Discs to hub - 4 hole	4ALT
		37-7243	Front wheel assy - 5 hole	1ALT
		37-7236	Disc - 5 hole	2ALT



 


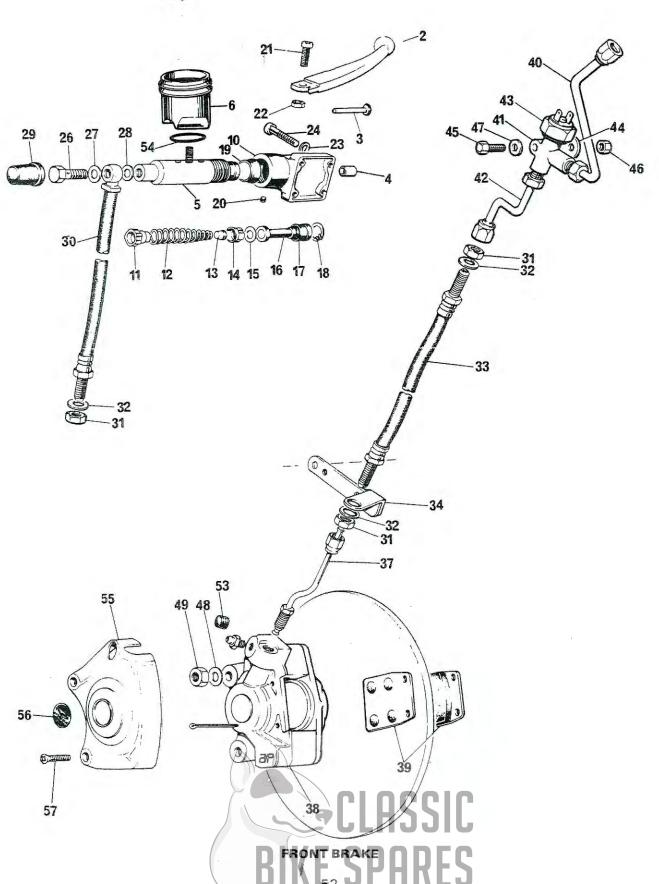

FRONT BRAKE

Ref. No.	Part No.	Makers Part No.	Description	Quantity Remarks
1 2	60-7686 97-7193		MASTER CYLINDER ASSY Brake lever	1
2 3 4 5 6 7 8	60-7158		Push rod	1
4	60-7165		Bush for pushrod	1
5	99-7027	4211-134	Barrel & stud assembly	1
6	60-4397 60-4365	3251-821 3847-248	Body Reservoir Cap	1
0	60-4328	3853-238	Washer	1
9	60-4366	3818-747	Diaphragm	1
10	60-7164		Master cyl mtg body	. 1 _
11	AP.LTD	Use 99-2768	Trap valve	1
12	AP.LTD		Spring	1 /
12	AP.LTD		Spring Springs	1 (
13 14	AP.LTD AP.LTD	1100 00 276	Spring retainer 8 Primary cup	1
15	AP.LTD		8 Piston washer	1 Refonly
16	AP.LTD	00000 270	Piston	1 /
17	AP.LTD		8 Secondary cup	1
18	AP.LTD	K29103	Circlip	1
19	AP.LTD	Use 99-276 3476-209	8 Rubber boot Grub screw	1)
20 21	AP.LTD 21-2191	34/6-209	Pivot screw	1
22	14-1901		Nut	1
23	23-1555		Washer	4
24	21-7038	2000	Screw	4
26	60-4183	30420	Banjo bolt	1
27	60-4182	KL44518 KL44516	Sealing washer Sealing washer	1
28 29	60-4184 60-4626	3817-811	Rubber boot	1
30	60-7174		Hose, master cylinder/top yoke c/w boo	t 1 for high handlebar
31	60-4180	K24103	Locknut	3 3 1
32	70-2288	K19407	Washer	3
33 34	60-4175 83-7064	KL100613L	Hose, bottom yoke/fork leg Bracket - pipe support	1
37	60-4178	7TA2070N	Pipe, fork leg/caliper	1
38	60-7478	21/1/20/014	CALIPER	1
39	60-7437		Brake pad kit	1
Not illus.	99-7006	KL71594	Caliper seal kit	1
40	60-7177	2725 617	Pipe - top lug to 'T'	1
41 42	60-7176 60-7178	3725-617	'T' piece Pipe - 'T' to middle lug	1
43	60-7155	2SH34619		1
Not illus.	70-1335		Washer brake switch	1
44	97-7202		Bracket 'T' piece	1
45	14-0105		Screw - bracket to 'T'	1
46 47	14-1301 60-2329		Nut - bracket to 'T' Washer - bracket to 'T'	1
48	60-2323		Washer	2 \ Caliper to outer
49	14-1303		Nut	2 member
53	60-4266	363-400	Cover, bleed nipple	1
Not illus.	99-2768	SSB930	Front master cyl. seal kit	1
54	60-4374	•	'O' ring	1
55	37-4263		Caliper cover	1
56	60-4156	Α.	Decal - caliper cover	1 2
57	21-2196		Screw - caliper cover	2



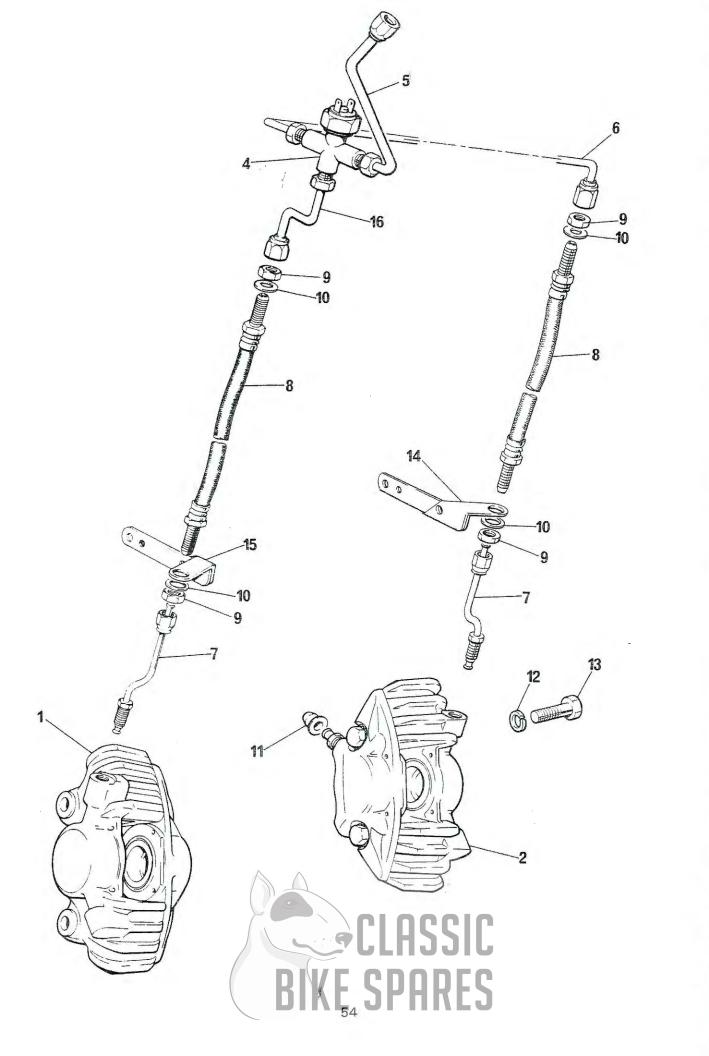

and the second s

THE COLUMN TWO IS NOT THE COLUMN TWO IS NOT

The second second

Section 201


TWIN BRAKE CONDITION

Ref No.	Part No.	Description	QUANTITY
1	60-7484	Caliper LH	1
2	60-7485	Caliper RH Front Master CYL Assy	1
N/1	60-7481 60-7482	Junction Block Assy 4Way	1
4 5 6	60-7494	Brake Pipe	i
6	60-7495	Brake Pipe	1
7	60-7496	Brake Pipe	2
8	60-4175	Hose	2 5 5 2 2 2
8	60-4180	Nut	5
10	70-2288	Serrated Washer	5
11	60-4266	Cover Bleed Nipple	2
12	60-2419	Spring Washer	2
13	21-7119	Bolt Caliper Fixing	2
14	83-8062	Bracket-Pipe RH	1
15	83-7064	Bracket-Pipe LH	1
16	60-7178	Pipe	1
N/I	97-7197	Bracket-4 Way Connector	1
N/I	14-0105/004	Bolt-4 Way Connector	1
N/I		Nut-4 Way Connector	1

WARNING:-

Brake pad 60-7437 must only be used with plain cast iron disc Ref No 37-7175 Under no circumstances must these pads be used with chrome plated finished disc Ref No. 37-4275.



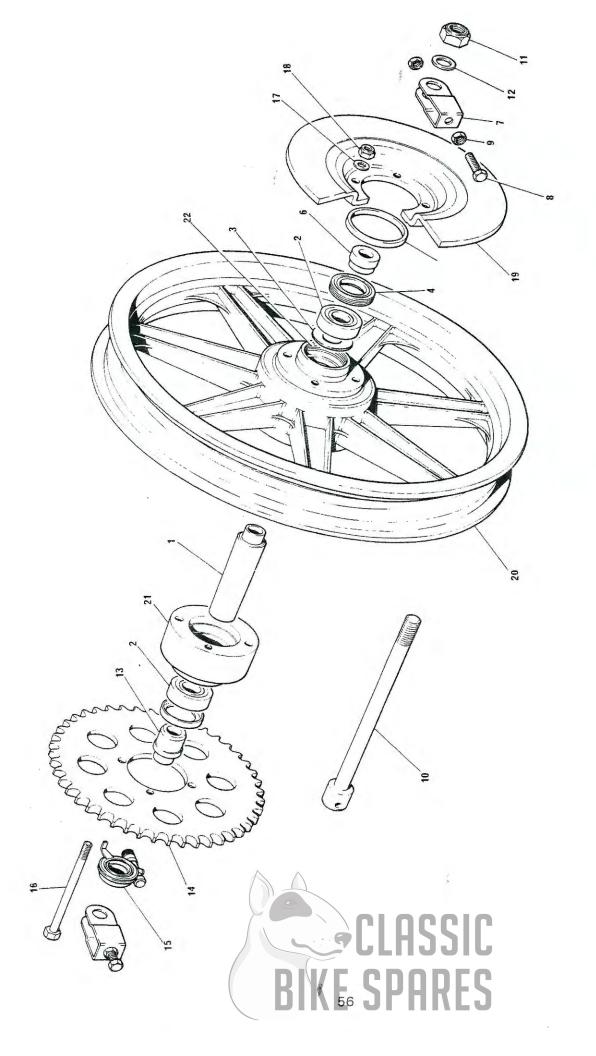


The state of the s

REAR WHEEL CAST ALLOY

Ref. No.	Part No.	Description	Quantity
1	37-7207 37-7041	Spacer tube bearing	1
2	37-4135	Bearing left & right Retaining washer	2 2
4	37-7055	Lock ring RH	1
-	37-7054	Dust cover RH	i
6	37-7111	Spacer RH bearing	1
7	37-7127	Chain adjuster	2
7 8 9	14-0118	Screw - chain adjuster	1 2 2 4
	14-0302	Nut - chain adjuster	4
10	37-7197	Spindle	- 1
11	14-1307	Nut - spindle	1
12	83-2266	Washer - spindle nut	1
13	37-7052	Spacer LH bearing	1
14	37-7064	Sprocket 47 tooth	A 1 4 4 1 4 4 8
15 16	60-7091 21-7134	Speedo drive gearbox	1
17	70-8770	Bolt - disc/sprocket to hub Washer - bolt and nut	4
18	14-1203	Nut - bolt	4
19	37-7175	Disc - Not Chromed	i
NI	14-6234	Bolt - disc to hub for c/f wheel	4
NI	14-6233	Bolt-Sprocket to hub for c/f wheel	4
NI	60-2331	Washer	8
20	37-7205	Rear wheel less fittings	1 ALT
NI	37-7227	Rear wheel less fittings c/f	1 ALT
21	37-7200	Bearing carrier LH	1 ALT
NI	37-7229	Bearing carrier LH c/f	1 ALT
22	37-7164	Bearing carrier RH	1 ALT
NI	37-7230	Bearing carrier RH c/f	1 ALT
NI	37-7206 37-7233	Rear wheel assy less tyre & tube	1 ALT
NI	31-1233	Rear wheel assy c/f less tyre & tube	1 ALT

NOTE:- C/F REFERS TO CRACKLE FINISH PAINTWORK - INDIVIDUAL COMPONENTS ARE NOT INTERCHANGEABLE WHERE LISTED AS "ALT".



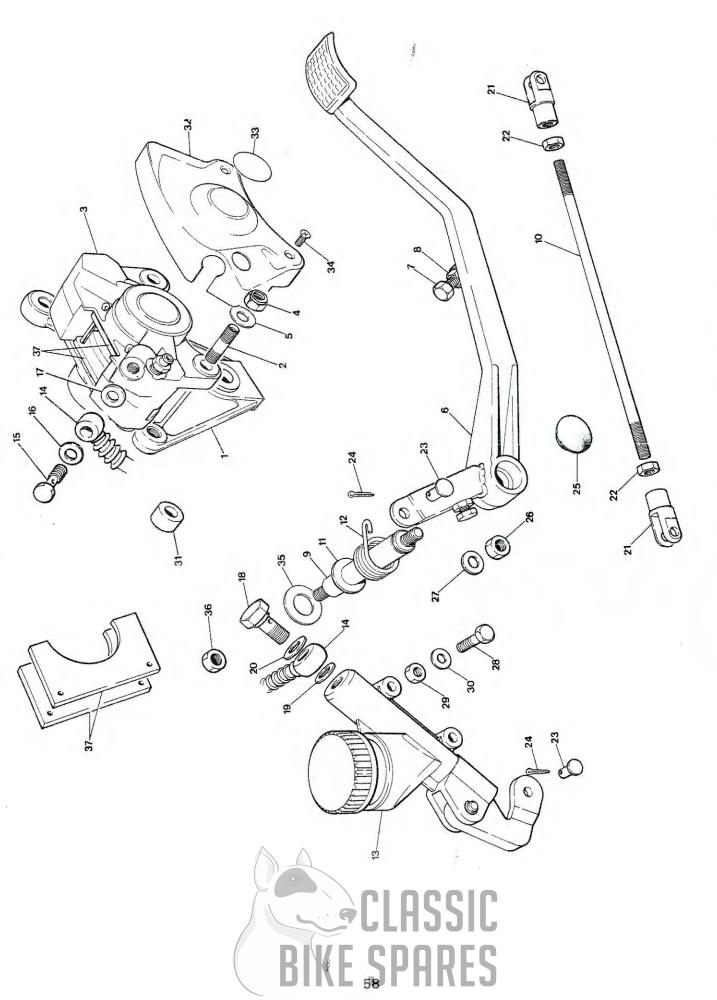

1

Actions of the state of the sta

manufacture of the second of t

parameter of the state of the s

_ ...-


Mary ...

The state of the state of

REAR BRAKE

Ref. No.	Part No.	Description	Quantity
12345678911123456789012345678901234567890123456789012345678901234567	37-7117 21-2189 60-7478 14-1303 60-2331 83-8333 23-1012 23-2001 83-8252 83-8259 21-7135 83-8364 60-7626 60-7695 60-7236 60-4184 37-7100 60-4183 60-4182 60-4184 83-8052 14-0401 83-8052 14-0401 83-8054 60-2683 60-7658 14-0402 60-2428 14-0201 14-1301 60-2329 37-7094 37-4263 60-4156 21-2196 60-2333 14-1305 60-7437	Rear caliper mounting plate Stud-caliper to plate Caliper Nut - caliper to mounting plate stud Washer, for nut Brake pedal assy. Screw, adjuster - stop light Nut, adjuster screw Spindle, rear brake pedal Brake rod Washer, pedal to spindle Return spring, brake pedal Master cylinder complete Brake hose Banjo bolt - caliper Sealing washer - thin Sealing washer - thick Banjo bolt - master cylinder Sealing washer Sealing washer Sealing washer Sealing washer Sealing washer Sealing washer Bolt-Mcyl to frame Nut-B/pedal to spindle Lockwasher Bolt-M/cyl to frame Nut M/cyl to frame Nut M/cyl to frame Dist piece caliper plate Caliper cover Decal caliper cover Screw caliper cover Plain washer - spindle to frame Nut-spindle to frame Brake pad kit	1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1



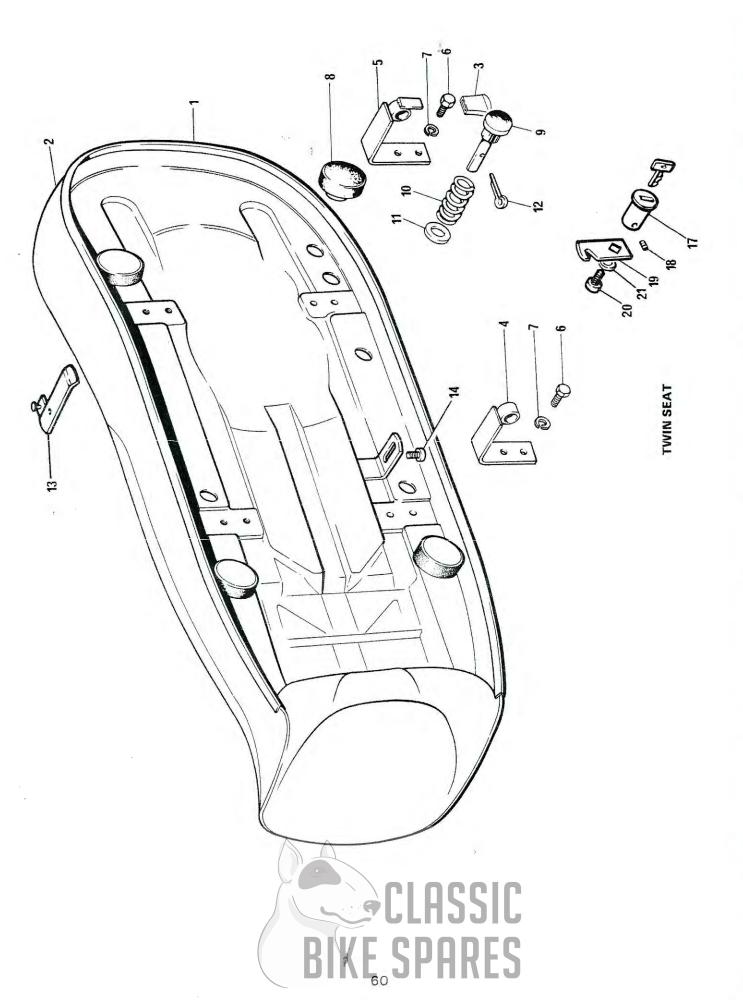

Reputation of the Property and the Prope

The state of the s

mercan and security designations designated as

Contact Ministration (Contact Management of Contact Management of

Babbatt 8

Society and the second

The state of the s


And the state of t

TWIN SEAT

Ref No.	Part No.	Description	Quantity
1	83-8377	Twinseat-Assy	1
3	83-7544	Plastic sleeve - seat hinger rear	1
3 4 5 6 7 8 9	83-4782	Hinge - twinseat front	1
5	83-7542	Hinge - twinseat rear	1
6	14-0101	Bolt - hinge	4
7	60-2417	Washer - spring	4
8	82-9093	Rubber buffer	4
9	82-7560	Plunger & knob	
10	82-4228	Spring	1
11	71-3749	Plain washer	1
12	60-2720	Split pin	1
NI	60-7159	Transfer neg earth	1
NI	60-7716	Data label	•
13	83-7329	Catch plate seat	1
14	83-7276	Screw plate fixing	1
NI	14-1301	Nut	1
NI	60-2329	Washer	1
17	60-7215	Twinseat lock assy c/w keys	1
18	21-7049	Grub screw - lock retaining	1
19	83-7328	Catch plate - lock	1
20	97-3894	Screw - catch plate to lock	1
21	97-1388	Washer	1

j



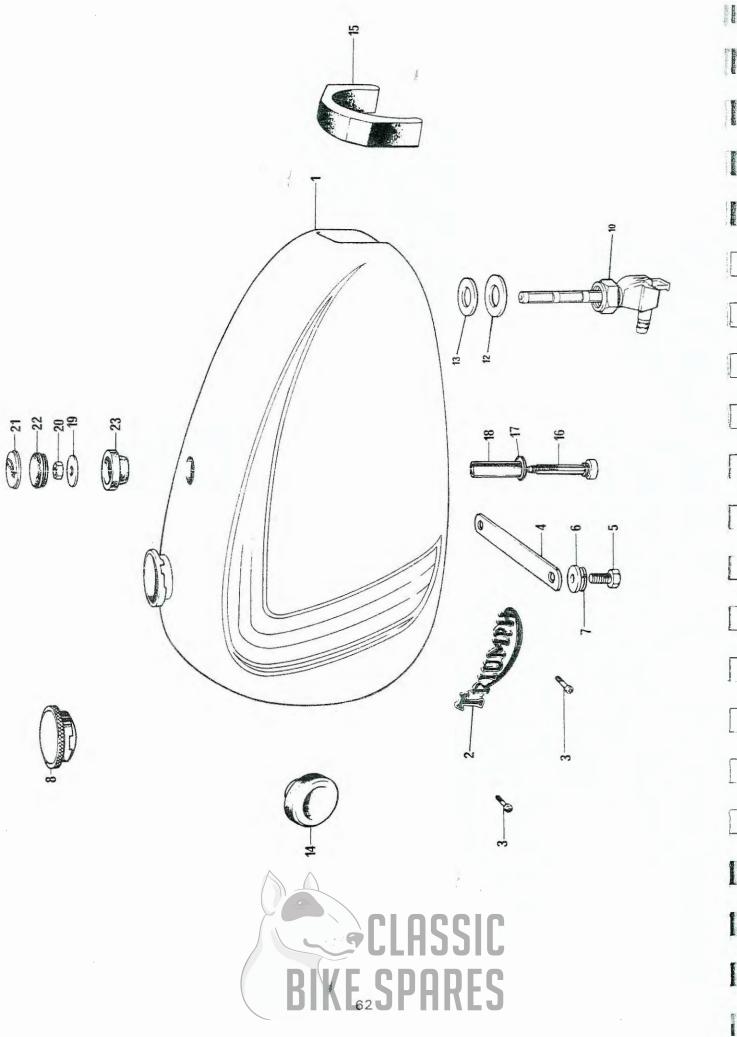

Manual Sec S. Carlos


REEL

PETROL TANK

Ref. No.	Part No.	Description	Quantity
1 1 2 3	83-8427 83-8332 60-7210 21-2064	Petrol tank 2.8 gall black Petrol tank 2.8 gall burgundy Badge Screw-chrome	1ALT 1ALT 2 4
4 5 6 7 8	83-4395 14-0115 60-2321 60-2428 60-7701 60-7508	Tie strap Bolt-Tie Strap Washer plain - bolt Washer spring - bolt Petrol filler cap Petrol tap	1 2 2 2 1 1 ALT
14 15 16 17 18 19 20 21 22	83-4931 83-4932 83-4930 60-2330 82-9063 82-3814 14-0302 83-4776 97-5061	Steady rubber Mounting rubber Centre fixing bolt Washer - lower Distance tube Washer - upper Nut - fixing bolt Badge - centre Grommet for badge	2 2 1 1 1 1 1 1
23 N.I. N.I.	83-4934 82-8245 83-8393	Rubber - centre mounting Retainer Petrol pipe assy	1 1 1
N.I. N.I. N.I. N.I.	60-7557 60-4428 83-8292 60-7557	Clip-petrol pipe to tap 'O' Clip petrol pipe to carb Balance pipe Clip-Balance pipe	1 2 1 2 1ALT
8	60-7657	Petrol filler cap - locking	IOLI

1



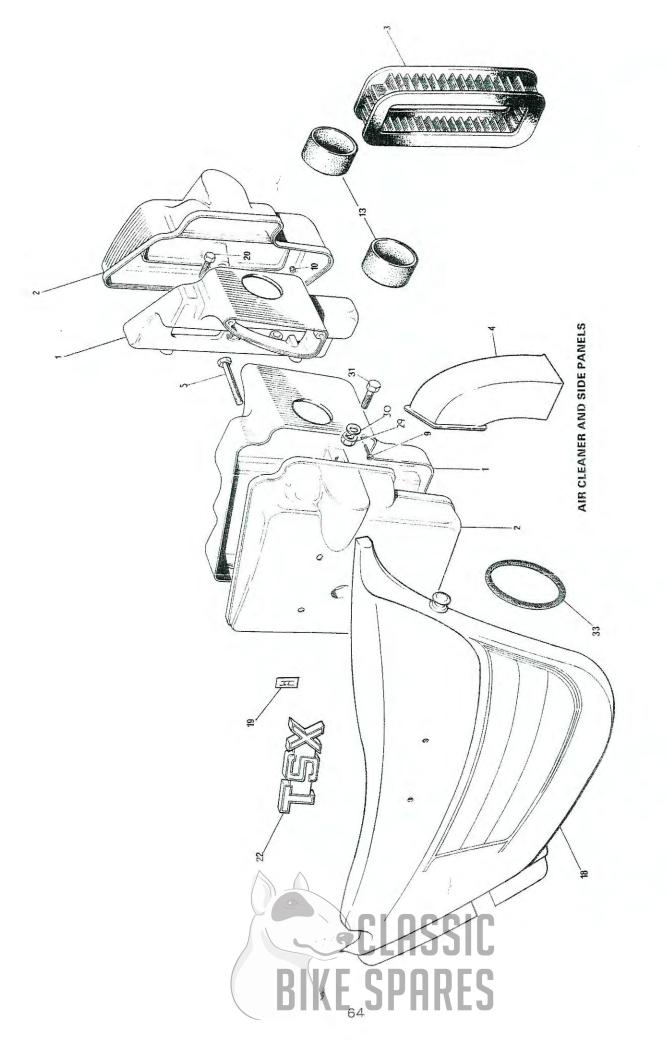

Alternative Control of the Control o


.

444

AIR CLEANER AND SIDE PANELS

Ref. No	Part No.	Description	Quantity
1 1 2 2 3 4 4 5	83-7904 83-7907 83-8244 83-8246 60-4265 83-5448 83-5449	Body - left Body - right Cover - left Cover - right Element Air intake tube, left Air intake tube, right Bolt	1 1 1 1 2 1 1 2 2 2 2 2
9 10 13 17 18 19 20 22 29 30 31 33 NI	60-3539 21-0501 60-7527 83-8384 83-8385 60-7511 14-0102 83-8331 14-1302 60-2321 14-0218 60-7707 83-7910 60-7397 82-9093 60-2321 60-2428 14-0302 60-7628 60-7424	Screw Nut Connector pipe Carb to air box Side panel - left - burgundy Side panel - right - burgundy Push fix - side panel Bolt Name plate TSX Nut Plain washer Bolt Styling panel fixing ring Rubber-panel fixing Retainer-rubber to frame Buffer - side panel Plain washer for item 5 Spring washer for item 5 Nut for item 5 Sealing rubber-air box body Clip-connector pipe	1ALT 1ALT 2 4 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
17 18	83-8428 83-8429	Side panel - left - black Side panel - right - black	1ALT 1ALT



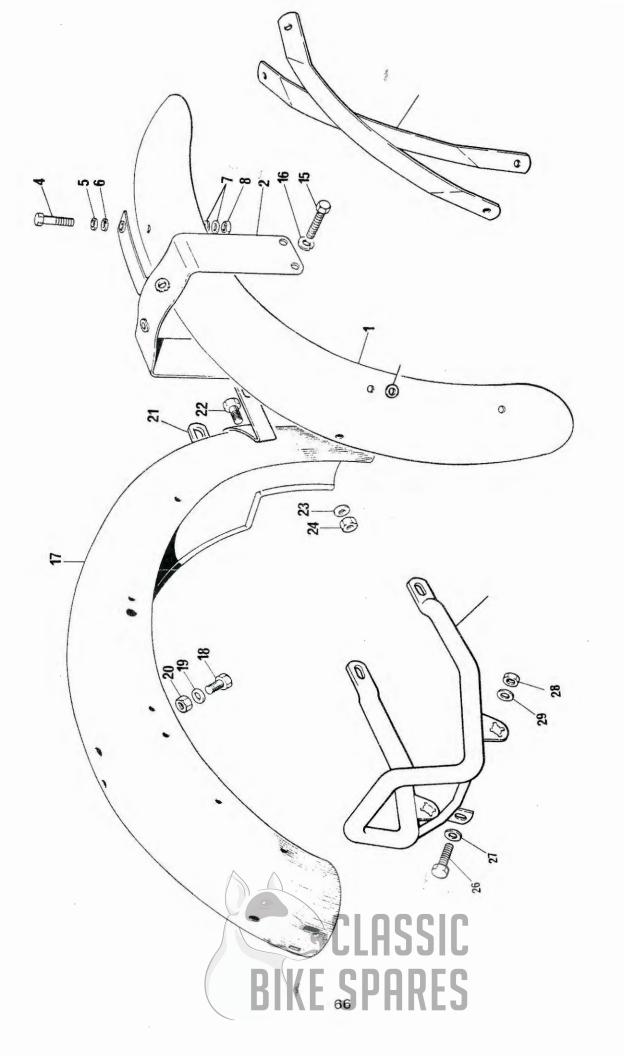

A CONTRACTOR OF THE CONTRACTOR

11

The state of the s

100000

(Janes de

-

1


MUDGUARDS - FIXINGS

Ref. No.	Part No.	Description	Quantity
1 2 4 5 7 8 15 16 17 18 19 20 21 22 23 24 25 26 27 28 N.I.	97-7221 97-7004 14-2205 21-7025 60-2338 21-7050 14-0103 60-2427 83-8300 14-0101 60-2329 14-1301 83-2796 14-0101 60-2329 14-1301 83-8294 14-0102 60-2329 14-1301 97-2209 60-2340 97-7241 83-7077	Front mudguard - burgundy Bridge piece assembly Screw, bridge piece to blade Washer plastic Plain washer Nut - screw, bridge to blade Bolt, bridge piece to fork leg Washer spring Rear mudguard - burgundy Bolt Washer Nut Lower front bracket Bolt Washer Nut Grab rail Bolt Washer Nut Grab rail Bolt Washer Nut Washer Coil Tray to Mudguard Washer grab rail L/H side Stiffener assy front m'guard Plastic washer bridge piece outer	1ALT 1 5 5 4 4 1 4 1ALT 2 2 2 1 1 2 2 1 1 1 1 1
17 1	83-8430 97-7252	Rear mudguard - black Front mudguard - black	1ALT 1ALT






C 20

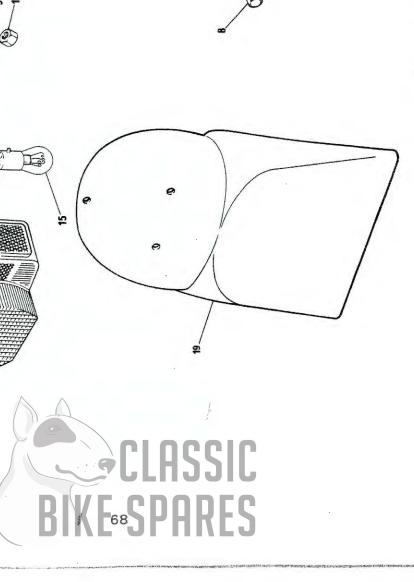


TAIL LAMP AND SUPPORT

Ref. No.	Part No.	Makers Part No.	Description	Quantity
1 2 3 4 5 8 9 10 11 12 13 14 15 16 17 18 NI	83-8298 21-2225 60-2427 14-0301 83-8359 14-0102 60-2329 14-1301 60-4110 06-8058 99-7065 99-7066 99-0542 83-4800 14-7804 70-1612 83-4806 60-4103	56515 54585314 54584931 54583924 380	Tail lamp carrier Stud Washer Nut Support plate Bolt Washer Nut STOP TAIL LAMP Lens Base assembly Gasket Bulb Sleeve nut, lamp to back plate Screw support plate to carrier Serrated washer Wiring protector Grommet, flasher wire	Tail lamp support to fender No. plate brackets and support plate to fender less side reflex Less side reflex Not illustrated
NI NI NI N.I.	83-5105 97-0961 60-4440 60-4256	Ì	'U' grommet, lamp carrier Grommet, mudguard for wiring Grommet, flasher wires Serrated Washer Used With 83-4800	2 2 2
19	83-8301		No. plate mounting	1



 


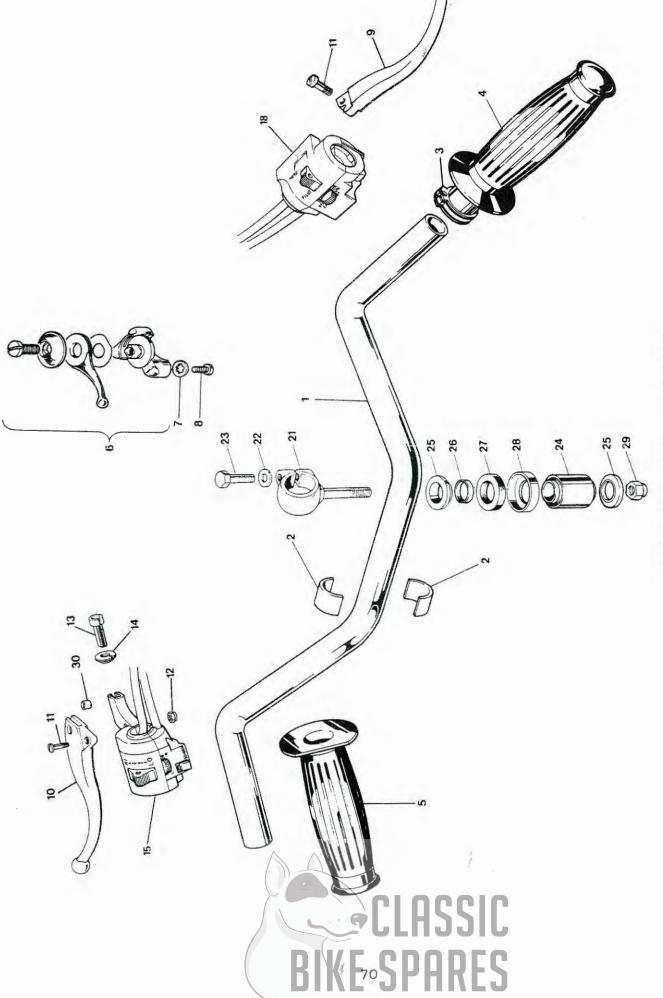



HANDLEBARS AND CONTROL LEVERS


	D . 61	Makers	Description	O
Ref. No.	Part No.	Part No.	Description	Quantity
1	97-7205		Handlebar	1
	97-1425		Sleeve, handlebar mounting	4
3	60-7144		TWIST GRIP c/W GRIP	1
2 3 4 5	97-2125		Grip, right hand	1
5	97-2142		Grip, left hand	1
6 7	60-3246		Cold start control lever	1
7	70-1612		Shakeproof washer	2
9	97-7193		Front brake lever blade	1
10	97-7191		Clutch lever blade	1
11	21-7036		Pivot pin - clutch lever	1
11	21-2191		Pivot pin - brake lever	1
12	14-1901		Nut-Pivot pin	2
13	60-3585		Adjuster	1 .
14	60-3586		Lockring	1
15	60-7464		Handlebar switch L.H.	1 5/0
18	60-7462		Handlebar switch RH	1 E/S only
21	97-2291		Handlebar eye bolt	2
22	82-1335		Washer	2 2 2 4 2 2 2 2
23	21-0589		Bolt	2
24	97-1527		Metalastik bush	2
25	97-1529		Hemispherical washer	4
26	97-1581		Distance piece	2
27	97-1580		Rubber washer	2
28	97-2221		Cup	2
29 30	14-1303 97-7053		Nut Pivot bush - clutch lever	1
N.I.	60-7249		Mirror L & R.H.	1
N.I.	60-7201		Cable tie	4
18	60-7463		Handlebar switch RH	1 K/Start Only



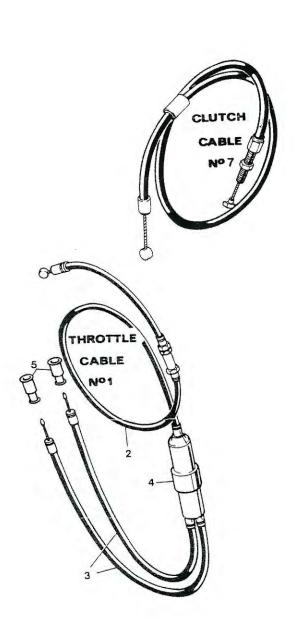

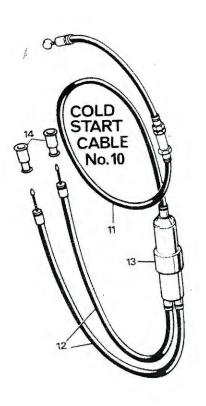

 

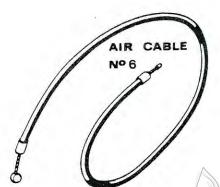


CONTROL CABLES CLASSIC BIX F₂ SPARES

CONTROL CABLES

Ref. No.	Part No.	Description	Quantity
1	60-7550	Throttle cable cte	1
2	60-7427	Throttle cable T/Grip to jucnt block	1
3	60-7505	Throttle cable junct block to carb	2
4	60-0685	Throttle cable Junction block	1
5	60-7118	Sheath - Throttle cable adjstr	2
7	60-3925	Clutch cable	1
8	60-4254	Cable clip aluminium	8
9	60-7202	Cable clip plastic	18
10	60-7551	Cold start cable CTE	1
11	60-7430	Cold start cable-lever to junction box	1
12	60-7505	Cold start cable-junction box to carb.	2
13	60-0685	Junction box	1
14	60-7118	Sheath-cable adjuster	2
N.I.	60-0978	Cable Tie	2




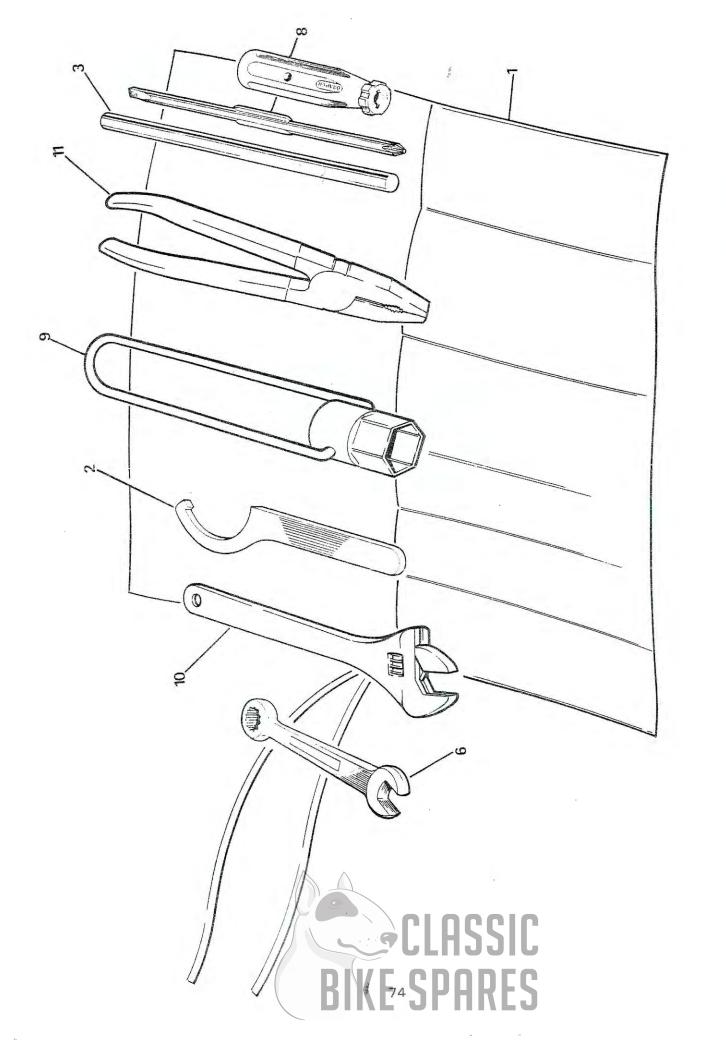

TOOLKIT

Ref. No.	Part No.	Description	Quantity
1 1 2 3	60-7649 60-7661 60-2184 60-7041	TOOLKIT COMPLETE Tool roll Damper unit spanner Tommy bar, for rear wheel	1 1 1
6 8 9 10	60-7662 60-0767 60-1050 60-7664 60-7665	Ring spanner ½" A/F Screw driver Plug spanner Adjustable spanner Pliers	1 1 1 1
NI	60-7700	Owners handbook	




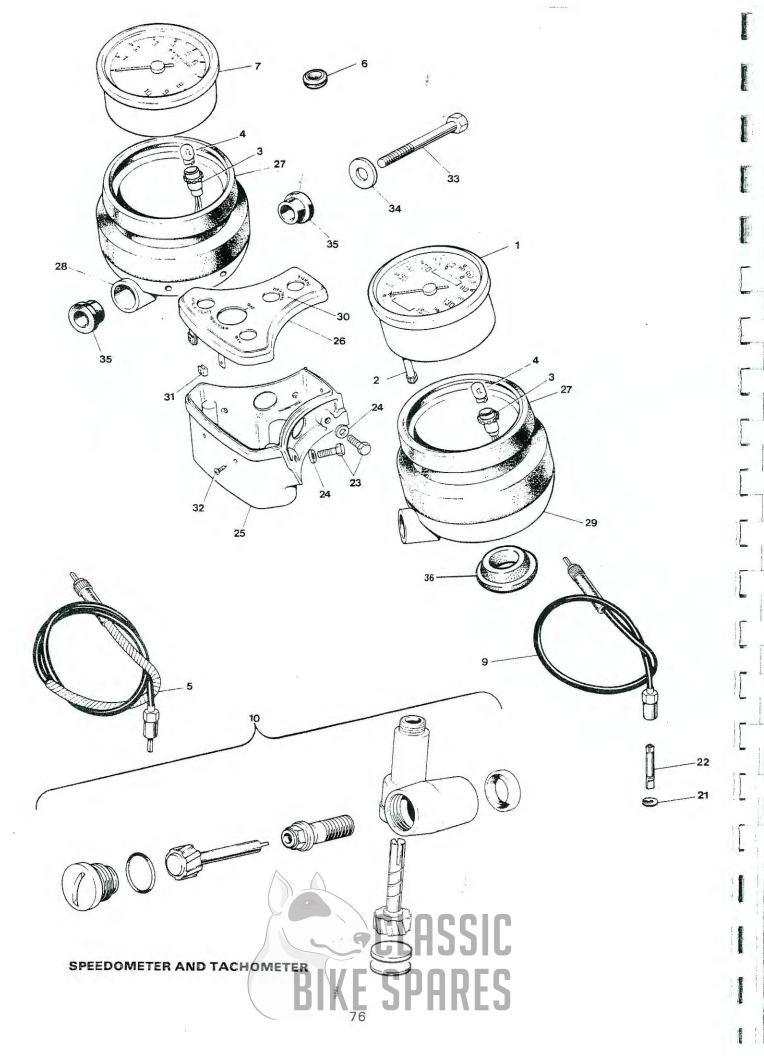

SPEEDOMETER AND TACHOMETER

Ref. No.	Part No.	Makers Part No.	Description	Quantity
1 1 1 2 4 5 6 7 9 10 12 22 32 4 5 6 7 9 10 22 22 22 22 22 22 22 23 23 23 23 23 23	60-7222 60-7270 60-7207 99-7050 60-7306 60-7221 60-7223 60-0578 71-7609 60-0494 99-0173 14-6104 60-2427 97-4577 97-4577 97-4573 97-4574 97-4575 60-4622 60-4503 21-0762 14-0235 60-2340 97-4588 97-7208	504 31-371-39	Speedometer head MPH150 - veglia Speedometer head KPH250 - veglia Trip control Bulb Speedo cable assy Grommet - bulb holder Tachometer head - veglia Tachometer cable TACHOMETER GEARBOX Circlip 98 Spade Bolt carrier to s/w box Spring washer Switch box Panel assy - includes line 30 Rubber cup Instrument carrier LH Instrument carrier RH Identification sheet Spire nut Screw - panel to s/w box Bolt Plain washer Rubber bush Grommet inst. carrier	1ALT 1ALT 1 1 1 1 2 1 1 1 1 1 1 2 1 1 1 1 2 1 1 1 1 2 1 1 1 1 1 2 1 1 1 1 2 1



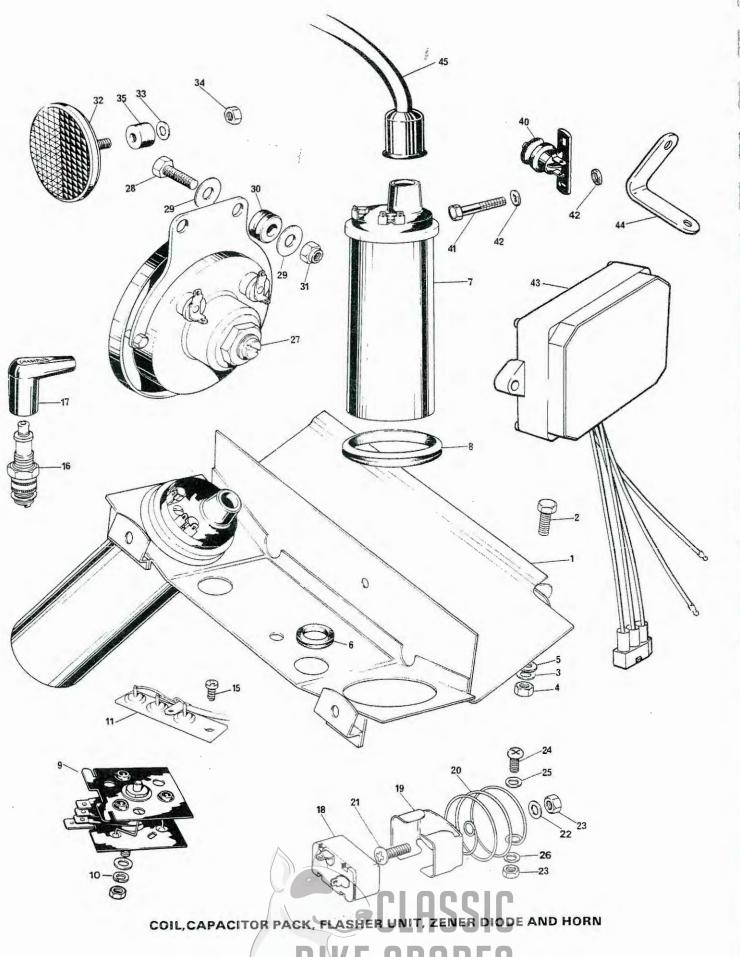


BIKE, SPARES

ELECTRICAL COMPONENTS

Ref. No.	Part No.	Makers Part No.	Description	Quantity	Remarks
1	83-7502	-	Coil and tool tray assembly	1	
	14-0102	**	Bolt	17	
3	60-2329		Washer	2 (Coil and tool tray
4	14-1301		Nut.	1 (attachment, rear.
5	70-7554	1	Rubber washer	1 7	
6	82-6784	1 <u>.</u> 2	Grommet, wiring harness	2	
7	60-7131	45220	Ignition coil (17-M-6)	2	
2 3 4 5 6 7 8	82-9561	-	Coil grommet	1 J 2 2 2 1	
9	60-7152	83539	Rectifier complete with nut	1	negative earth
10	70-3887	-	Shakeproof washer	1	
11	60-7326	-	Diode pack-zener	1	
15	21-7084	49589	Screw-zener fixing	2	
16	60-7237	N5	Sparking plug	2	
17	60-0262	WC200	Plug cover	1 2 2 2 2 2	
17	60-7124		Plug cap - screened	2	
17	60-7125		Cover - for cap screened	2	
18	99-1201	35048	Flasher unit	1	·:
19	99-1204	54385091	Clip, flasher unit	1_	
20	60-3614	54386637	Spring	17	
21	21-2079	-	Screw	1 }	Flasher unit
22	60-2391	-	Washer	1 5	attachment
23	21-7009	-	Nut	1	
24	21-2079		Screw - spring to tool tray	1	
25	97-1388	-	Plain washer	2	
26	60-2416	70276	Washer Horn	2	
27	60-7067	10276	Bolt .	2 7	
28 29	14-0103 60-2347	-	Washer	4	Horn attachment
30	60-2347	-	Grommet	2 }	· ·
31	14-1301		Nut	2	
32	60-3042	57183	Reflector - amber	2	
33	60-2416	37105	Washer	2 4 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	
34	82-3799	-	Nut	2 }	Reflector
35	83-3522	_	Mounting rubber	2)	Mounting
40	60-0990	34815A	Rear stop light switch 118SA	1	
41	21-7010	-	Screw, rear stop switch	2	
42	97-1388	-	Plain washer	4	
43	60-7130	-	Amplifier unit	1	
44	83-7869		Bracket-amplifier unit fixing		
NI	14-0102		Bolt-bracket fixing	2	
NI	60-2329		Washer-bracket fixing	2	
NI	14-1301		Nut	2	
NI	14-0102		Bolt-amplifier to bracket	2 2 2 2 2 2 2 2	
NI	14-1301		Nut-amplifier to bracket	2	
45	60-3923		HT cable	2	Non-screened
45	60-7120		HT cable-use with screened cap	2	C/W rubber sleeve




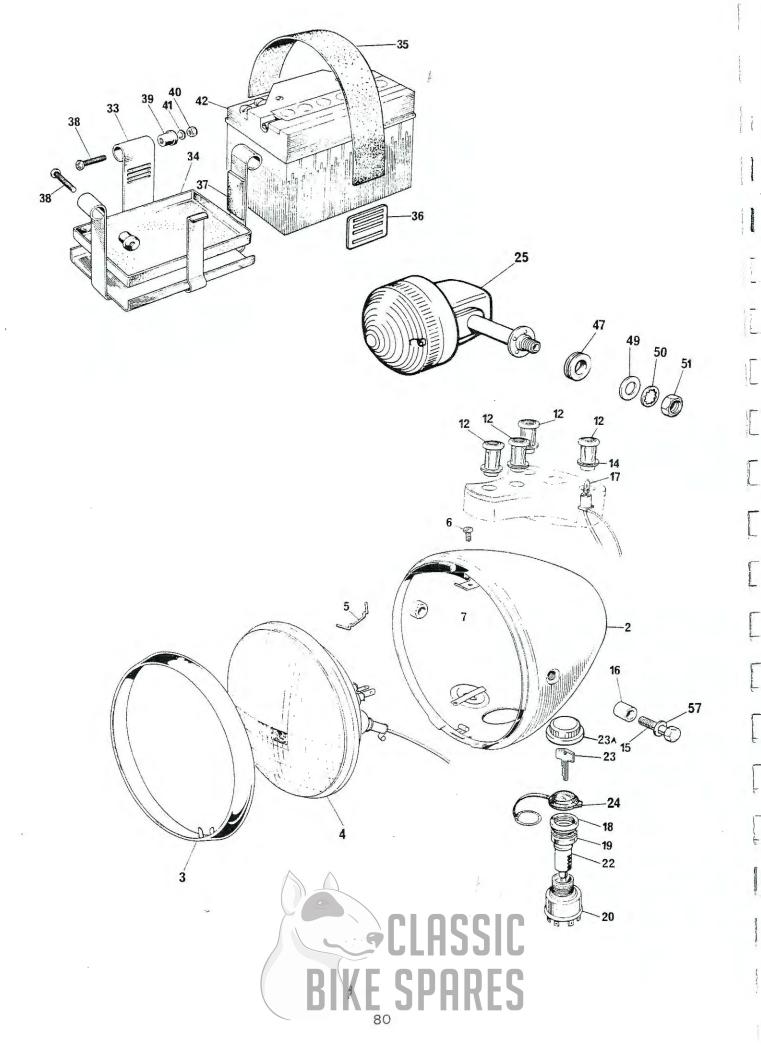

ELECTRICAL COMPONENTS

		Makers			
Ref. No.	Part No.	Part No.	Description		emarks
1	60-7331		Headlamp cte RH dip		ght hand dip
1	60-7330		Headlamp cte LH dip	1 le	ft hand dip
2 3 5 6	99-7098	550040	Headlamp shell only	1	
3	99-0692	553248	Headlamp rim	6	
5	99-0683 99-1189	504665 144921	Fixing wire Screw	1	
7	99-0690	534296	Plate	1	
12	99-1208	54363454		1	
12	99-1209	54363455	Warning light, green	i	
12	99-1207		Warning light, amber	1	
12	99-7054		Warning light, blue	1	
14	99-1210	54140331	Sealing washer	3	
15	99-7012	54115106		2	
16	97-7220		Distance piece, headlamp bolt	3 2 2 3	
17	99-0537	281	Bulb, warning light	3	
18	97-7120	142006	Ignition switch nut	1	
19 20	97-4596 99-7055	143086 54531899	Ignition switch spacer Ignition switch	1	
22	82-6981	-	IGNITION LOCK WITH KEY	1	
23	60-0622		Ignition key	1 5	ate serial No.
23A	97-7123		Cap-ignition key	1	ato seriar 140.
24	60-7335	-	Cover, ignition switch	1	
25	60-7172		FLASHER LAMP REAR & FRONT	4 C/W st	em
33	83-7504	-	Battery carrier assembly	1	
34	82-8091		Battery tray moulding	E/S model 2 (1 off	K/S model)
35	82-9353	-	Retaining strap	1	
36	82-9355		Buckle	4	
37 38	83-7235 83-2508	-	Protective strip Shoulder screw	3 7	
39	82-6039	-	Rubber bush	3 3	attery carier
40	21-7050	-	Nut		nounting
41	60-2329	-	Plain washer	1, 1	
42	60-7317		Battery - YB14L	1 E,	/S model
Ní	60-7465		Main wiring harness	1	
NI	60-7300		Earth lead - amplifier box	1	
NI	60-7198		Rear sub harness	1	
46	83-7558		Dimpled washer	4	
47	82-5753		Grommet	4 (5	
48	83-7559		Distance tube	4 \ FI	asher lamp
49	60-2350		Washer plain		anchion
50 51	60-2332 14-0404		Washer plain Nut	8	
54 NI				4	
55 NI	60-7501 60-7279		Wire indicator lamp Front/Rear Earth wire indicator lamp front/re		
57	21-7141		Washer H'lamp bolt	2	
NI	60-7714		Extension lead R/H rear ind. lamp	1	
42	60-7088		Battery - 12N9 - 4B - 1	1 K/Start	only
4	99-7509		Light unit only - LH dip	1 Glass/i	
4	99-7510		Light unit only - RH dip	1 Glass/r	



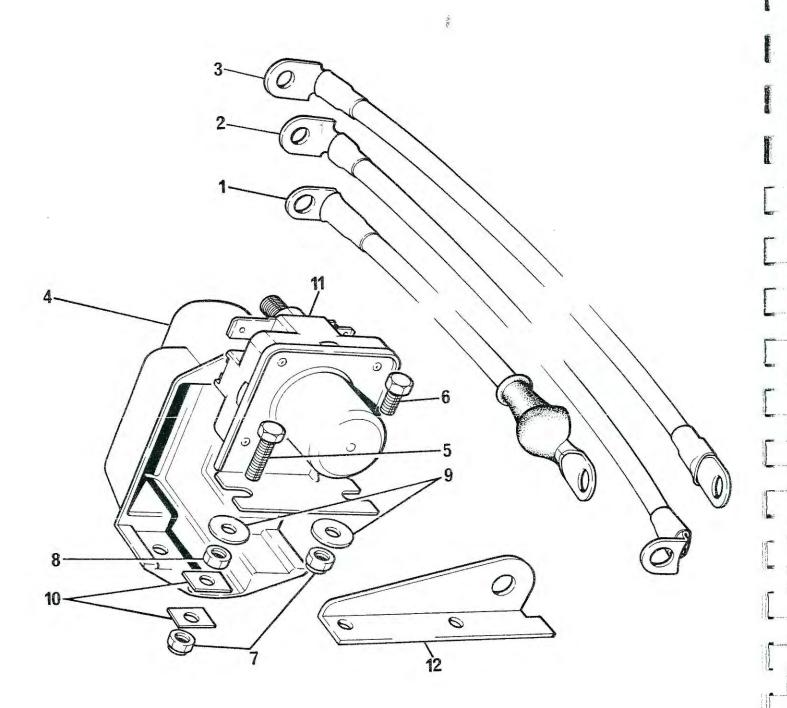



and the same

ELECTRICAL COMPONENTS

Ref. No.	Part No.	Description	Quantity
1	60-7320	Lead-starter to solenoid	1
2	60-7321	Lead-battery to solenoid	1
3	60-7322	Lead-battery to earth	1
4	83-7644	Cover-solenoid switch	1
5	23-1015	Screw-upper solenoid fixing	1
6	23-1012	Screw-lower solenoid fixing	1
7	23-2161	Nut-Solenoid cover and fixing	. 2
8	23-2001	Nut ·	1
9	97-1388	Washer	2
10	21-7105	Washer-cover fixing	2
11	60-7318	Solenoid starter switch	1
12	83-7737	Bracket-solenoid fixing	1

