20-10173C

CATALOGUE OF



Model B25 Starfire

ISSUED BY

B.S.A. MOTOR CYCLES LTD.

Service Department, Armoury Road,
Birmingham II

TELEPHONE

021-772-2381

TELEGRAMS

"SELMOTO BIRMINGHAM"

B.S.A. MOTOR CYCLES LTD.

Registered Offices and Works: ARMOURY ROAD, BIRMINGHAM II

Telephone: 021-772-2381

Telegrams and Cables: "SELMOTO BIRMINGHAM"

Contractors to Her Majesty's Government, the War Office, the Admiralty, the Post Office, the Colonial and Foreign Government

Publication Reference 00-5709-October, 1969.

Printed in England by B.S.A. Press

Please Note!

Replacement parts or accessories must be of B.S.A. origin or as approved by B.S.A. Motor Cycles Ltd.

In this respect your attention is drawn to the Terms and Conditions of B.S.A. Guarantee.



SUFFIX NUMBERS TO BE USED TO IDENTIFY VARYING FINISHES

When ordering components with varying finishes, please state finish required by adding the appropriate number to part number.

EXAMPLE: Front Mudguard, Chrome 90-6580/003.

PETROL TA	NK (I	J.S.A.)	Flamb	oyant	Aireral	ft Blue,	White	Stripes,	Red	Lining		••	••	/280
PETROL TA	NK (s	tandar	d) Flam	boyan	t Aircr	aft Blue		••	••	• •		••	• •	/227
SIDECOVER	S (U.S	s.A.) W	'hite		.,	• •								/69
SIDECOVER	S (star	ndard)	Black			• •			••	•••	••		••	/007
OTHER PAI	RTS:													
CHROME										• •				/003
BLACK									••			• •	••	/007
SILVER						• •				• •	• •			/165

PRICES:

No price codes are quoted in this list. For prices please refer to the Master Price List No. 00-5125.

Wherever possible details of thread form and size are quoted after description of nuts, bolts, screws, studs and washers. Such as: 14-7006 Socket screw ($\frac{1}{4}$ " UN.C. \times 1") = $\frac{1}{4}$ " diameter unified coarse thread 1" long under head.

Vital components, which are manufactured from special material, are indicated by a sign and the British Standard symbol for the material is quoted at the foot of the page.

ABBREVIATIONS:

B.A. = British Association screw threads.

B.S.C. = British Standard Cycle screw threads.

B.S.F. = British Standard Fine screw threads.

W.F. = Whitworth Form screw threads.

UN.F = Unified Fine screw threads.

UN.C.

Unified Coarse screw threads.



CARBURETTERS

AMAL LIMITED, HOLDFORD ROAD, WITTON, BIRMINGHAM 6.



CHAINS

RENOLDS LIMITED, WYTHENSHAWE, MANCHESTER.

ELECTRICAL EQUIPMENT

J. LUCAS LIMITED, GREAT HAMPTON STREET, BIRMINGHAM 18.

SPEEDOMETERS

SMITH'S MOTOR ACCESSORIES LIMITED, CRICKLEWOOD WORKS, LONDON N.W.2.

TYRES

DUNLOP COMPANY LIMITED, FORT DUNLOP, BIRMINGHAM 24.

SPARKING PLUGS

CHAMPION SPARKING PLUG COMPANY LIMITED, FELTHAM, MIDDLESEX.



ASSEMBLIES COMPLETE

Spares No.	Description	
00-3168	TOP OVERHAUL OR DECOKE GASKET SET.	
00-3310	FULL OVERHAUL GASKET SET.	
00-4403	CAPACITOR KIT.	
00-5195	TACHOMETER KIT.	
71–1087	ENGINE/GEARBOX UNIT LESS CARBURETTER AND EXHAUST SYSTEM.	
71–1119	CRANKCASE COMPLETE WITH FIXED FITTINGS.	3
71–1133	OIL PUMP COMPLETE.	
70-9848	CRANKSHAFT AND FLYWHEEL ASSEMBLY.	
57-4016	CLUTCH COMPLETE.	
82-9213	FRAME COMPLETE.	
83–1607	FRAME COMPLETE (U.S.A.).	
97-3895	FRONT FORK COMPLETE.	
37–3463	FRONT WHEEL WITH SPINDLE AND BEARINGS.	
37–3466	FRONT HUB WITH SPINDLE AND BEARINGS.	
40-6078	REAR WHEEL WITH SPINDLE AND BEARINGS.	
41–6022	REAR HUB WITH SPINDLE AND BEARINGS.	



PISTON CHART

	PISTON (COMPLETE						
Compression Ratio	Standard	'+ ½ mm.	+ 1 mm.					
10 to 1	40-0970	40-0972	40-0974					
	CO	MPRESSION RIN	IGS					
	Top (plain) 70-8276	Top (plain) 70-8277	Top (plain) 70-8278					
	Centre (taper) 70-6838	Centre (taper) 70-9017	Centre (taper) 70-9018					
	SCRAPER RINGS							
	70-6839	70–9021	70-9022					

CARBURETTER


Spares	Makers Main		Pilot	Throttle	Needle	Needle		
Number	Number Jet		Jet	Slide	Jet	Position		
19–2419	R.928/4	170	622/107	3	-106	1		



INDEX


		•							rage
	ASSEMBLIES COMPLETE	• •			••		• •	••	5
Plate 1	CYLINDER AND CRANKSHAFT			• •	••	••	••		8 - 11
Plate 2	CRANKCASE	••	• •	••	••		• •	• •	12 - 15
Plate 3	GEAR CLUSTER	••	• •	••	••	• •			16 - 19
Plate 4	CLUTCH						£.•	••	20 - 21
Plate 5	FRAME		••		••				22 - 25
Plate 6	SWINGING ARM	••	• •	••	• •	••,	.:	••	26 - 2 7
Plate 7	OIL TANK, SIDECOVERS, SILENC	CER	• •		• •	·•	••		28 - 29
Plate 8	FOOTRESTS AND BRAKE LINKAG	GE			••	••	••		30 - 31
Plate 9	FRONT FORK	• •	••	••	• •	••	••		32 - 35
Plate 10	FRONT WHEEL			• •	••	••			36 - 37
Plate 11	REAR WHEEL	••	• •		• •		••	••	38 - 39
Plate 12	MUDGUARDS	••		• •	• •	••	* * j+.		40 - 43
Plate 13	PETROL TANK, TWINSEAT AND	CONT	ROLS	S	• •	••	••		44 - 47
Plate 14	ELECTRICAL EQUIPMENT	••			••			••	48 - 51
Plate 15	TOOLS				• •				52 - 53
DI-4-16	CADDIDETTED								54 - 55



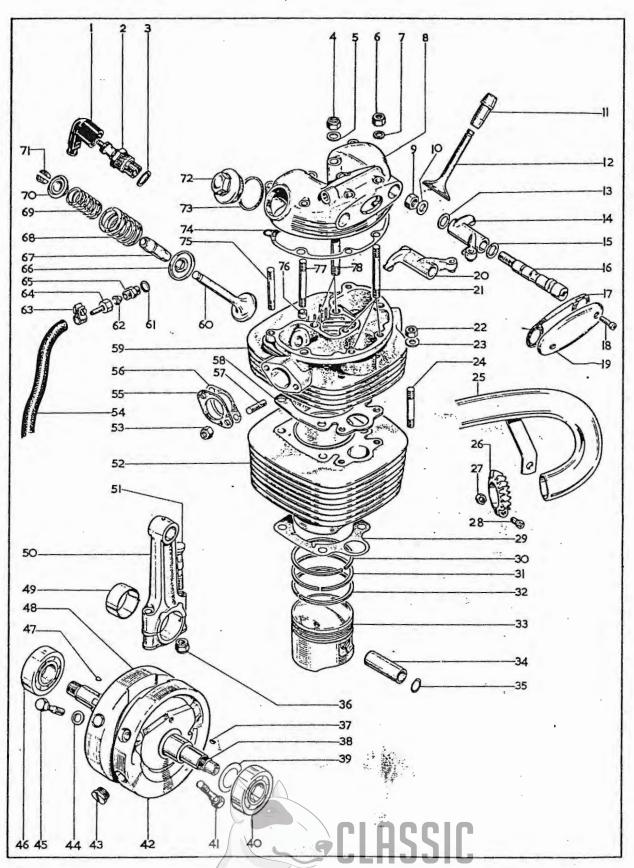

CYLINDER AND CRANKSHAFT

Plate Ref.	Spares Number	Description	Pei Sei	
1.	19-7625	Spark plug cover		
2.	19-7606	Spark plug (Champion N3)		
3.	66-0102	Washer, spark plug		
4.	24-6040	Nut, rocker box to head (\frac{5}{16}" B.S.C.)	. 2	
5.	02-0923	Washer, rocker box to head $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$	2	
6.	40-0209	Nut, rocker box to head (‡" B.S.C.)	7	
7.	02-0525	Washer, rocker box to head $(\frac{1}{4}" \times \frac{1}{2}" \times .048")$	~	
8.	70-7911	Rocker box		
9.	14-0403	Nut, rocker spindle $\binom{3}{8}$ U.N.F.)	2	
10.	02-2138	Washer, rocker spindle nut $(\frac{1}{3}" \times \frac{1}{4}" \times \frac{1}{16}")$	2	
11.	40-0932	Exhaust valve guide		
12.	70-7777	Exhaust valve		
13.	40-0157	Thrust washer, rocker spindle (\frac{1}{8}" I/D)	2	
14.	70-7791	Exhaust rocker		
15.	40-0158	Thrust washer, rocker spindle (½" I/D)	^	
16.	70–7787		•	
17.	40-0967	Color formation assessed in the first color of the color		
18.	40-0965	C (3 " D C V 11 ")	2	
	40-0965	Toward an agent makes how		
19.				
20.	70-7790		. 3	
21.	70-7996	Stud, cylinder head	2	
22.	24-5160	Nut, cylinder head (16" B.S.C.)	2	
23.	76-0012	Washer, cylinder head nut $((\frac{21}{61}'' \times \frac{9}{16}'' \times \frac{3}{32}'')$	2	
24.	40-0020	Stud, cylinder head (16" B.S.C./B.S.F.)	2	
25.	71–1178	Exhaust pipe (U.S.A. models)		
25.	70-9724	Exhaust pipe (standard)		
26.	40-2710**	Exhaust pipe collar		
27.	40-2712**	Nut, exhaust pipe collar (2 B.A.)		
28.	40-2711**	Screw, exhaust pipe collar (2 B.A. × 13")		
29.	70–7728	Cylinder base gasket		
30.	70-8276†	Piston ring (top)		
31.	70-6838†	Piston ring (centre, taper)		
32.	70-6839†	Piston ring (scraper)		
33.	40-0970†	Piston complete		
34.	40-0978	Gudgeon pin	•	
35.	40-0979	Circlip, gudgeon pin	2	
36.	40-0915	Nut, connecting rod bolt (16" B.S.C.)	. 2	
37.	41-0560	Key, crankshaft pinion	,	
38.	70-9848	Crankshaft and flywheel assembly		
39.	40-0064	Shim, crankshaft (.003") .0762 mm	as regd.	
39.	40-0065	Shim, crankshaft (.005") .127 mm	as read.	
39.	40-0066	Shim, crankshaft (-010") 254 mm.	as read.	
39.	40-0069	Shim, crankshaft (015") 381 mm	as reqd	
40.	24-0732	Bearing, crankshaft gear-side (Hoffman) 325		
41.	40-1031*	Bolt, flywheel $\binom{3}{8}$ U.N.F. \times 2")	4	

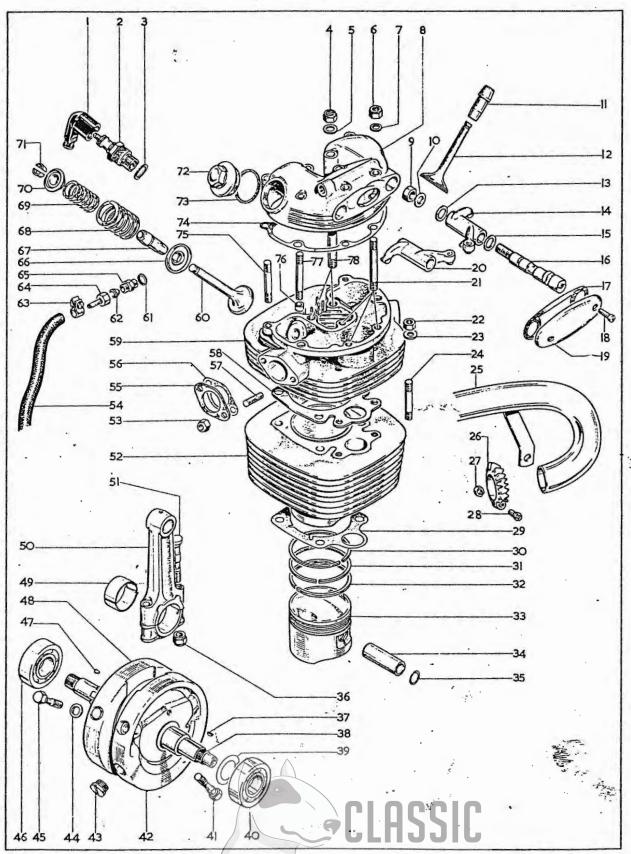


CYLINDER AND CRANKSHAFT

Plate Ref.	Spares Number	Description	Per Sei
42.	70-9907	Flywheel, gear-side	
43.	40-0892	Screwed plug, gear-side flywheel	
44.	71–1003		8
45.	40-1030*		4
46.	24-0724	Bearing, crankshaft drive-side (Hoffman R325L)	
47.	41–0673	Key, alternator rotor	
48.	70-9906	Thoubal daire aide	
49.	40-0907		2
49.	40-0917		2
49.	40-0918		2
49.	40-0919	T: 111/ 020m	2
50.	70-8836		-
51.	40-0913*		2
52.	70–9263		2
			2
53.	42-4476		2
54.	40-1037	Flexible oil pipe, to rocker box	
55.		"Tufnol" spacer, carburetter flange	
56.	65–1232	Paper gasket, carburetter flange	2
57.	68-0018*	5 (10	2
58.	40-0933	Cylinder head gasket	
59.	40-0929	Cylinder head with fixed fittings	
60.	68-0661	Inlet valve	
61.	76-0378	Fibre washer, oil pipe union	
62.	40-0993	Oil pipe, feed to rocker box	
63.	62-0263	Clip, flexible oil pipe	
64.	29-2089	Nut, oil pipe union	
65.	76-0308	Oil pipe union, rocker box	
66.	40-1018		2
67.	40-0931	Inlet valve guide	
68.	40-1009		2
69.	40-1007		2
70.	71-1165		2
71.	71-1166		4
72.	40-0968		2
73.	40-0969		2
74.	70-7858	Gasket, rocker box	
75.	40-0939*	Stud, cylinder head ($\frac{1}{4}$ " B.S.C./B.S.F. $\times 2\frac{7}{16}$ ")	2
76.	66-3074	Dowel, cylinder head	2
77.	40-0942*	Stud, cylinder head, dowel position (\frac{1}{4}" B.S.C./B.S.F. \times 2\frac{11}{16}")	2 2 2
78.	40-0127	Stud, rocker box	2
	pecial material:	41.—EN24. 45.—EN24. 51.—BS.3111. 75.—EN14B. 77.—EN14B.	

**Except U.S.A. models

†See page 6. = DCC

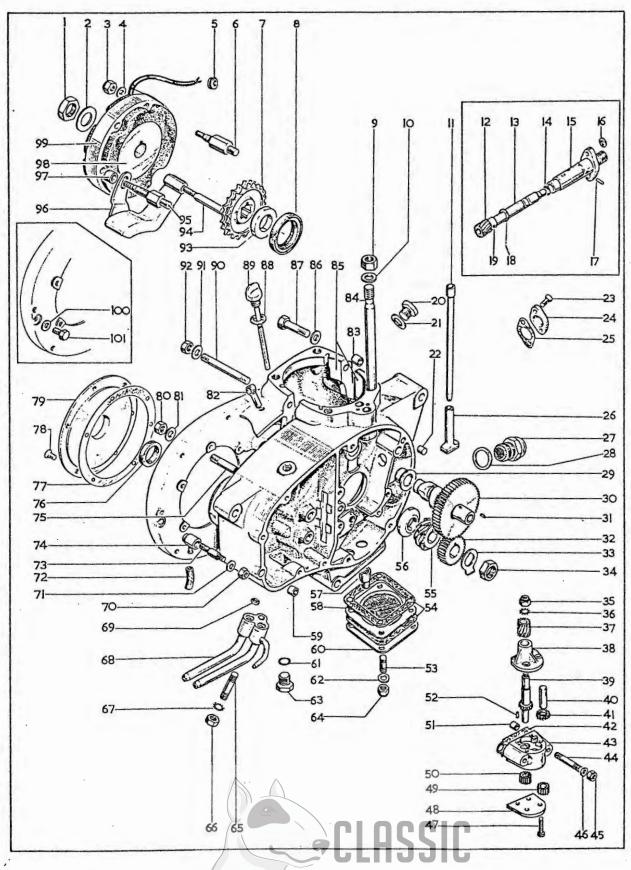

CRANKCASE

Plate Ref.	Spares Number	Description					Per Set
1.	29-2053	Rotor mounting nut					
2.	29-2054	Rotor mounting washer				• •	
3.	14-1901	Stator mounting nut (‡" UN.F.)					3
4.	02-0525	Stator mounting washer $(\frac{1}{4}" \times \frac{1}{2}" \times .048")$			• •		3
5.	40-0705	Grommet, alternator leads			• •	• •	
6.	21-1895*	Front stud, stator mounting (‡" UN.F. X 16" UN.C	$\times 2\frac{1}{3}$	§")			
7.	40-0210	Engine sprocket (23T)					
8.	40-0025	Oil seal, crankcase drive-side	••	••			
9.	14-0303	Nut, cylinder to crankcase (3" UN.F.)					4
10.	02-0130	Washer, cylinder to crankcase (3" × 116" × .080")				.,	4
11.	40-1010	Inlet push rod		• •			
11.	40-1021	Exhaust push rod					
12.	70-9428	Tachometer drive assembly complete					
12.	70-9382	Tachometer drive gear					_
13.	70-9381	Tachometer drive shaft					
14.	70-9430	Drive shaft "O"-ring					
15.	70-9517	Tachometer drive body			• • *		
16.	24-0036	Tachometer cable seal washer					
17.	70-9431	Drive shaft locating pin					
18.	70-9383	Tachometer drive thrust washer					
19.	70-9429	Drive gear retaining pin					
20.	21-1872	Timing hole plug $(\frac{1}{2}^n \times 13 \text{ un.c.} \times \frac{1}{2}^n)$					
21.	70-8896	Washer, timing hole plug					
22.	40-0394	Dowel, inner timing cover to crankcase					2
23.	40-0242*	Screw, tachometer drive and cover (2 B.A. X 27)					2
24.	70-9384	Sealing plate		• •			
25.	70-9432	Joint washer					
26.	70-7739	Tappet, inlet and exhaust					2
27.	71-1155	Pressure release valve assembly					
28.	70-9737	Washer, pressure release valve					
29.	70-8315	Camshaft bush					
30.	71-1276	Camshaft complete					



Plate 2-continued


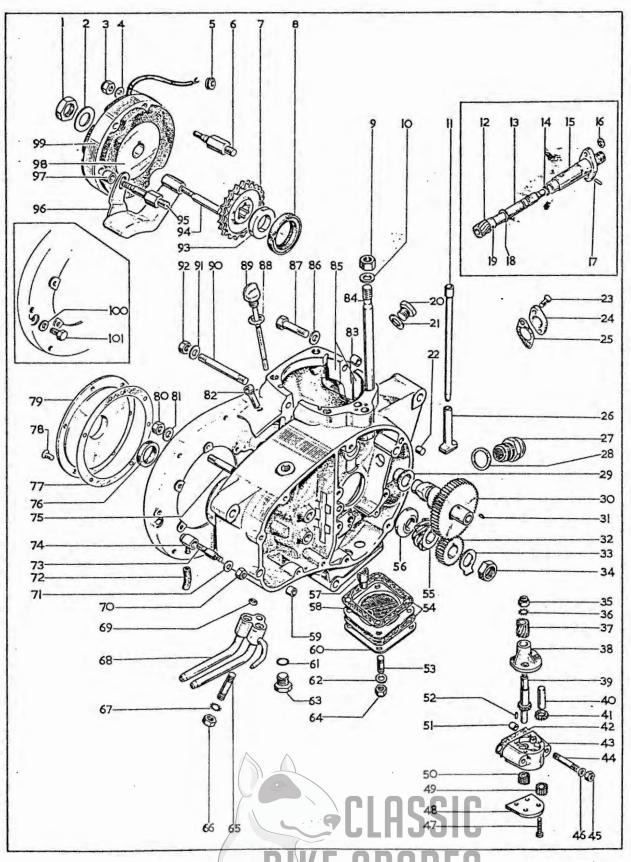


Plate 2—continued

CRANKCASE

Plate Ref.	Spares Number	Descriptio	n					Per Set
31.	40-0118	Camshaft pinion key		••		• •	:.	
32.	41-0569	Crankshaft pinion						
33.	40-0455	Lockwasher, crankshaft nut			.:	• •		
34.	37-1798	Nut, crankshaft pinion (5" B.S.C.)				• •	• •	
35.	40-0414	Nut, oil pump spindle (4" B.S.C.)		141	1			
36.	29-0541	Lockwasher, spindle nut	• •				• •	
37.	41-0603	Oil pump spindle gear	4.	• •	••			
38.	71-1139	Oil pump spindle housing						
39.	71-1142	Oil pump driving spindle		• •				
40.	71-1147	Oil pump driven spindle			.,			
41.	40-1016	Oil pump driven feed gear				• •		
42.	41-0804	Gasket, oil pump to crankcase				• •		
43.	71-1136	Oil pump body	• • 1		• •			
44.	21-1893*	Stud, oil pump to crankcase (‡" UN.F./UN.C.	$\times 2^{\frac{3}{16}}$	-)				2
45.	14-1901	Nut, oil pump to crankcase (4" UN.F.)						2
46.	68-0938	Washer, oil pump stud nut $(\frac{17}{64}" \times \frac{5}{8}" \times \frac{1}{16}"$)				• •	2
47.	41-0609	Screw, oil pump bottom plate (3 B.S.C. ×	157					4
48.	67-1391	Oil pump bottom plate				• •	• •	
49.	41-0605	Oil pump driven scavenge gear						
50.	71-1143	Oil pump driving scavenge gear						
51.	41-0706	Dowel, oil pump to crankcase			• •			2
52.	71-1148	Dowel, oil pump body to housing		٠.				2
53.	14-1401	Stud, crankcase sump cover (4" UN.F./UN.C.	× 1")					4 .
54.	67-1288	Gasket, crankcase sump cover					4.4	2
55.	41-0567	Crankshaft oil pump drive worm gear						
56.	41-0565	Oil pump drive distance washer						
57.	41-0624	Crankcase scavenge valve						
58.	70-9979	Crankcase filter assembly						
59.	66-3074	Dowel, inner timing cover to crankcase						2
60.	67-1286	Crankcase sump cover						
61.	68-3168	"O"-ring, gearbox drain plug					• •	
62.	02-0525	Washer, sump cover stud ($\frac{1}{4}$ " $\times \frac{1}{2}$ " $\times \cdot 048$ ")						4



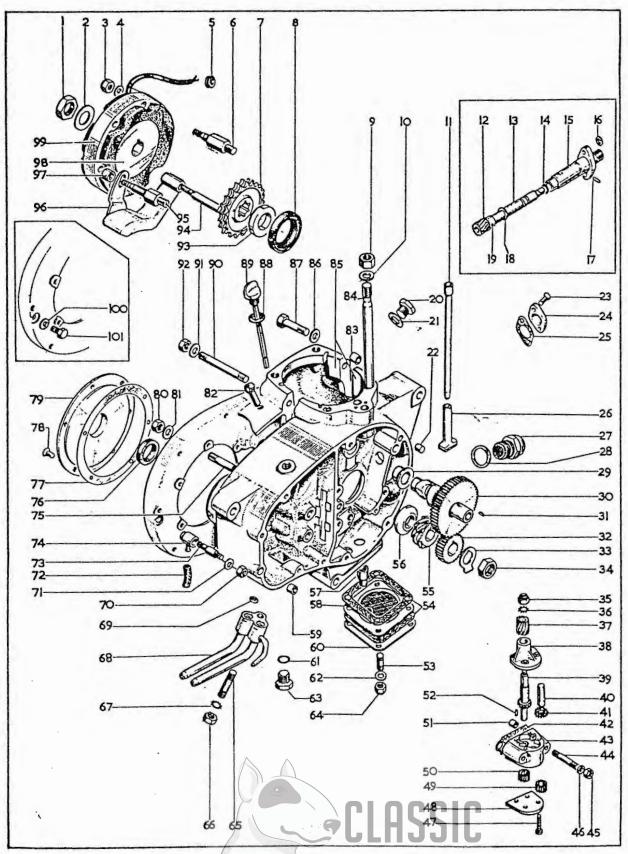

TO THE

CRANKCASE

Plate Ref.	Spares Number	Description	Per Se
63.	21-1857	Gearbox drain plug	
54.	14-1901	Nut, crankcase sump cover (‡" UN.F.)	4
55.	21-1891	Stud, crankcase oil pipe union (5 UN.F./UN.C. × 17)	
56.	14-0302	Nut, crankcase union stud (10 UN.F.)	
57.	36-0382	Lockwasher for nut line $66\left(\frac{5}{16}\right)$	
58.	40-1035	Crankcase oil pipe union	
59.	70-8259	"O"-ring, crankcase oil pipe union	
70.	14-1901**	Nut, chain oiler stud (‡" UN.F.)	
71.	02-0525**	Washer, rear chain oiler $(\frac{1}{4}" \times \frac{12}{32}" \times \frac{5}{64}")$	
72.	40-0375**	Oil pipe, rear chain oiler	
73.	21-1985**	Stud, rear chain oiler (‡" UN.C./UN.F. × 1½")	
14.	68-0383**	Rear chain oiler	
75.	21-1890	Stud, crankcase rear $(\frac{5}{10}$ UN.C./UN.F. $\times 2\frac{11}{10}$)	2
76.	40-0243	Oil and primary chainease	_
77.	40-0241	C. I. i. i I. i I.	
78.	40-0246	Communication and the income back (2 p. 4 × 5 m)	6
79.	70-3789		,
30.	14-0302		2
31.	02-0923	*** * * * * * * * * * * * * * * * * * *	2
32. •	40-9190		2
		Clip, alternator leads	
33.	67-1236		4
34.	40-0865*	Cylinder barrel stud ($\frac{2}{8}$ " UN.F. $-\frac{7}{16}$ " UN.C. \times 5 $\frac{1}{2}$ ")	4
35.	71-1119	Crankcase complete	-
36.	02-0923	Washer, crankcase bolt $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$. 3
37.	21-1892	Bolt, crankcase $\binom{5}{16}$ UN.C. $\times 1\frac{1}{2}$	3
38.	57-0948	Washer, gearbox dipstick	
39.	40-1033	Gearbox dipstick	
0		Stud, crankcase top $(\frac{1}{16}$ UN.F./UN.C. $\times 2\frac{11}{16}$)	2
1.	02-0923	Washer, crankcase stud $(\frac{5}{16}" \times \frac{1}{8}" \times \frac{1}{16}")$	2
2.	14-0302	Nut, crankcase stud (16" UN.F.)	2
3.	40-0325		reqd
3.	40-0326	Spacer ·309 ³ 7·312* (7·848/7·924 mm.) as	reqd
3.	40-0327	Spacer ·294"/·297" (7·467/7·543 mm.) as	regd
4.	21-1896*	Bottom stud, stator mounting ($\frac{1}{4}$ " UN.F. $\frac{5}{16}$ " UN.C. $\times 2\frac{9}{16}$ ")	
5.	21-1894*	Rear stud, stator mounting $(\frac{1}{4}"$ UN.F. $\frac{5}{16}"$ UN.C. $\times 2\frac{19}{32}"$)	
6.	41-0143	Primary chain tensioner	
7.	41-0146	Tensioner distance piece	
8.	19-8019	Alternator rotor (Lucas 54213901)	
9.	19-1262	Alternator stator (Lucas 47205)	
0	66-7518	Fibre washer, primary case back (U.S.A.)	
1.	14-6102	Bolt, primary case back (U.S.A.)	

*Special material: 6.—EN14B. 23.—EN8R. 44.—EN14B. 84.—EN15. 94.—EN8. 95.—EN14B.




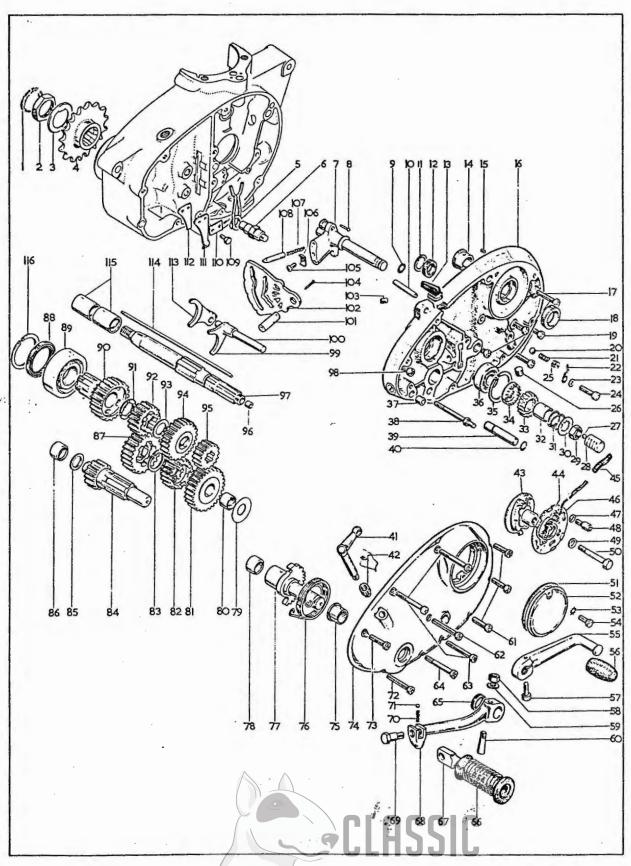


Plate 3

GEAR CLUSTER

Plate Ref.	Spares Number	Des	cripti	on					Per Sei
1.	90-6074	Felt washer, final drive sprocket							
2.	40-3051*	Nut, final drive sprocket (13 w.f.)							
3.	40-3121	Lockwasher, final drive sprocket							
4.	41-3095	Final drive sprocket (16 teeth)							
5.	40-3061	Gearchange return spring							
6.	57-3763	Anchor bolt, gearchange return spring						• •	
7.	40-3321	Gearchange quadrant							
8.	40-3059	Rivet, quadrant plunger							2
9.	68-0289	"O"-ring, oil feed							
10.	75-0257	Breather pipe, inner timing cover							
11.	40-0862	Circlip, crankshaft oil seal			4.				
12.	40-0977	Oil seal, crankshaft							
13.	41-0715	Grommet, contact breaker leads							
14.	40-0222	Camshaft bush							
15.	40-0028	Peg, camshaft bush							
16.	71–1059	Inner timing cover							
17.	14-6610	Screw, inner cover to crankcase (‡" un							3
18.	40-0679	Camshaft oil seal		. 12 /					-
19.	14-6606	Screw, front, inner cover to crankcase		IN C Y	2")	• • •	1.	-	2.
20.	97-2704	Ball, non-return valve (4" diameter)	(4		4 /		••	• •	
21.	40-0381					• •	• •	• •/**	
22.	90-5268	OT I I I I I	• •	• •	• •		• •	• •	,
23.	02-0525	Washer, contact breaker leads (4" × 3		.048*)	• •			• •	
	14-6610	Screw, inner cover to crankcase (4" un			• •		• •	• •	
24.		Screwed plug, non-return valve (\frac{1}{2}" UN			• •		• •	• •	
25.	21-1898		.C.)	••	••	• •	• •	• •	
26.	70-9526 .	Sealing plug	• •	• •	• •	• •	• •	• •	
27.	65-2593	Ball, clutch thrust (7/32" diameter)	• •	• •	• •			• •	
28.	40-3282	Rack, clutch operating	• •		• •	• •	• •	• •	
29.	76-0271*	Mainshaft nut (½" B.S.C.)	• •	• •	• •	• •	• •	• •	
30.	40-3257	Lockwasher, mainshaft	• •	• •	• •	• •	• •	• •	
31.	40-3273	Spring, kickstart ratchet	• •	• •	• •	• •			
32.	40-3272	Bush, kickstart ratchet pinion						• •	
33.	40-3271	Pinion, kickstart ratchet	• •	• •	• •	• •		• •	
34.	40-3279	Ratchet, kickstart		• •	• •		• •	• •	
35.	76-0528	Circlip, mainshaft bearing	• •	• •	••	• •	• •	• •	
·36.	90-0011	Mainshaft bearing (Hoffman LS.7)	• •	• •	• •	• •	• •	• •	2
37.	66-3074	Dowel, outer timing cover		• •	••	• •			2
38.	57-3764	Anchor bolt, kickstart return spring	• •	• •	•••		• •		
39.	40-3276	Stop, kickstart quadrant	• •	• •	• •	• •	• •	• •	



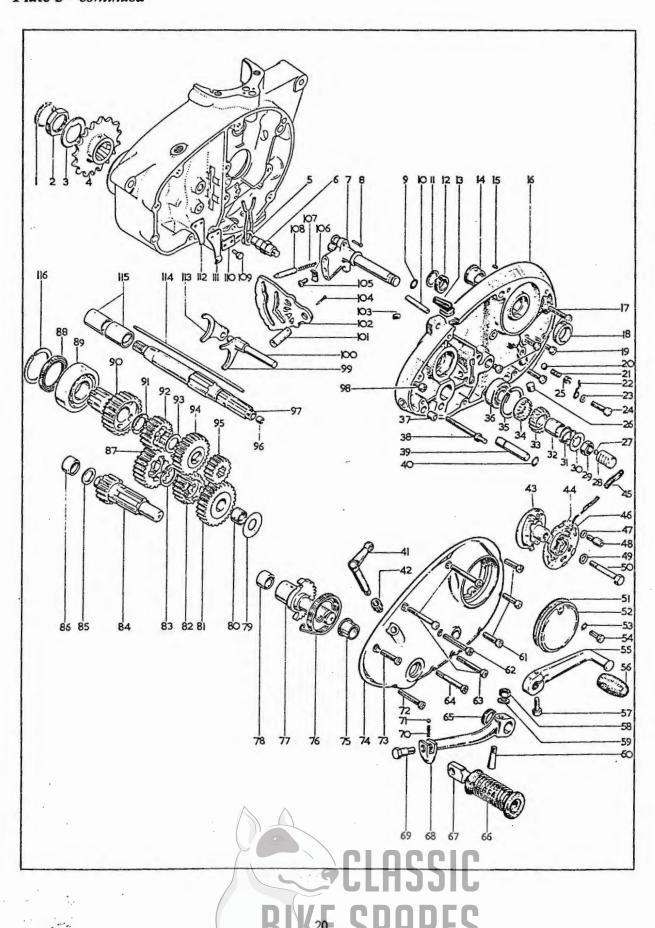


1 in

Plate 3—continued

GEAR CLUSTER


Plate Ref.	Spares Number	Description	n					Per Set
40.	40–3277	Circlip, kickstart stop				•••		
41.	57-2750	Clutch operating lever						
42.	40-3283	Clutch operating pinion		• •				
43.	19-1853	Auto-advance unit (Lucas 54419653)						
44.	19-1849	Contact set (Lucas 54419827)						
45.	40-0723	Sleeve, contact breaker leads			• •			
46.	19-1852	Contact breaker plate (Lucas 54419645)						
47.	40-0682	Washer, contact breaker						2
48.	40-0683	Pillar bolt, contact breaker						2
49.	68-0331	Washer, auto-advance unit						
50.	14-0208	Bolt, auto-advance unit ($\frac{1}{4}$ " U.N.F. $\times 2\frac{1}{4}$ ")						
51.	70-7882	Gasket, contact breaker cover						
52.	70-8737	Contact breaker cover						
53.	29-3319	Lockwasher, cover screw line 54						2
54.	70-7354	Screw, contact breaker cover (2 B.A. $\times \frac{1}{2}$ ")						2
55.	40-3073	Gearchange lever						
56.	89-3208	Rubber, gearchange lever						
57.	42-6554	Bolt, gearchange lever $(\frac{1}{4}$ B.S.C. $\times \frac{3}{4}$)						
58.	02-2578	Nut, Kickstart crank cotter (.266" B.s.c.)						
59.	02-2580	Washer, kickstart crank cotter						
60.	02-2579	Cotter, kickstart crank (.266" B.S.C.)						
61.	40-0236	Screw, outer timing cover (2 B.A. × 1/8")						3
62.	14-6611	Screw, outer timing cover $(\frac{1}{4}"$ UN.C. $\times 1\frac{3}{4}")$						
63.	14-6612	Screw, outer timing cover $(\frac{1}{4}"$ UN.C. \times 2")						3
64.	14-6614	Screw, outer timing cover $(\frac{1}{4}" \text{ UN.C.} \times 2\frac{1}{2}")$						
65.	57-2641	Oil seal, kickstart spindle						
66.	57-2759	Pedal rubber, kickstart crank				• • .		
67.	57-2646	Folding pedal, kickstart crank						
68.	57-2764	Kickstart crank complete						
69.	40-3084	Bolt, kickstart pedal						
70.	40-3085	Spring, kickstart pedal						
71.	97-2704	Ball, kickstart pedal (4" diameter)			.,			
72.	14-6610	Screw, outer timing cover (4" UN.C. × 14")						
73.	14-6606	Screw, outer timing cover $(\frac{1}{4}"$ UN.C. $\times \frac{3}{4}")$						•
74.	70-9433	Outer timing cover					* *	
75.	57-2642	Bush, kickstart spindle						
76.	40-3275	Spring, kickstart return						
77.	57-4070	Kickstart spindle complete						
78.	40-3292	Bearing, layshaft (Torrington B.108)						



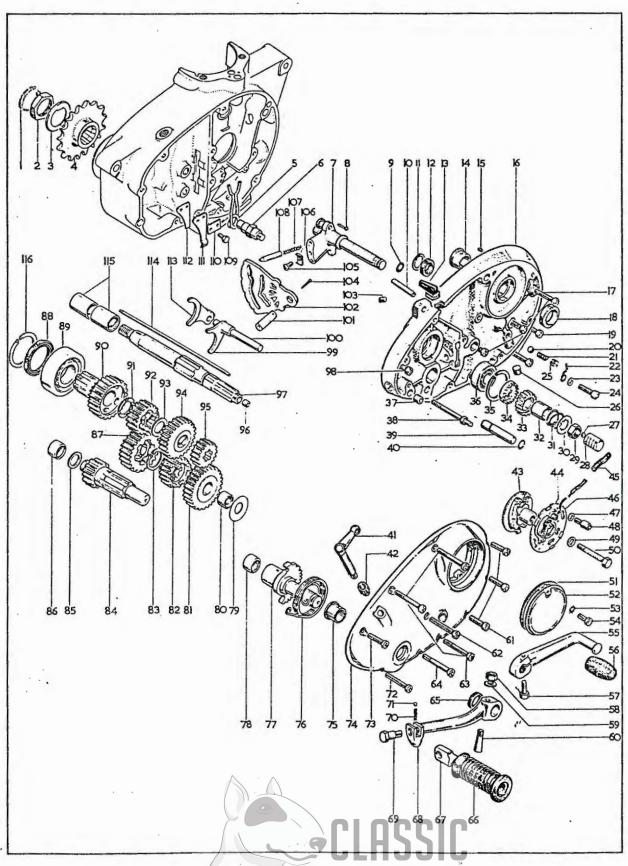

GEAR CLUSTER


40-3258 Shim, layshaft 40-3262 Bush, layshaft first gear 57-3874 Pinion, layshaft first gear (27 teeth) 57-3877 Pinion, layshaft third gear (19 teeth) 41-3078 Circlip, layshaft 41-3078 Layshaft with top gear pinion (14 teeth) 41-3074 Thrust washer (-083—085") 41-3072 Thrust washer (-078—080") 40-3292 Bearing, layshaft (Torrington B.108) 41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pioneer 20615618) 29-3857 Bearing, mainshaft (Poper 20615618) 29-3857 Bearing, mainshaft (top gear (22 teeth) 40-3020 Spacer (-093—094") 40-3126 Spacer (-098—099") 40-3127 Spacer (-098—099") 40-3126 Spacer (-098—099") 40-3127 Spacer (-0103—104") 57-3876 Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (-075—076") 40-3119 Spacer (-070—071") 40-3120 Spacer (-080—081") 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft third gear (16 teeth) 40-3097 Bush, mainshaft with bush 41-3089 Pinion, mainshaft with bush 40-3033 Selector fork, layshaft 40-3254 Mainshaft with bush 41-6608 Screw, inner timing cover (½" UN.C. × 1") 40-3325 Spindle, selector forks 40-3321 Cam plate pivot 57-3850 Cam plate 57-3850 Screw, keeper plate (5 B.A. × ½") 40-3193 Plunger, gear control plunger 40-3194 Keeper plate, control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½") 40-3043 Spring, cam plate 40-3043 Spring, cam plate 57-3854 Selector fork, mainshaft 57-3855 Spring, cam plate 57-3854 Selector fork, mainshaft 57-3854 Selector fork, mainshaft 57-3854 Selector fork, mainshaft 57-3854 Selector fork, mainshaft	Plate Ref.	Spares Number	Description Pe
40-3262 Bush, layshaft first gear 57-3874 Pinion, layshaft first gear (27 teeth) 57-3877 Pinion, layshaft third gear (19 teeth) 41-3078 Circlip, layshaft 41-3068 Layshaft with top gear pinion (14 teeth) 41-3074 Thrust washer (083—085") 41-3072 Thrust washer (078—080") 40-3292 Bearing, layshaft (Torrington B.108) 41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pionere 20615618) 29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (093—094") 40-3126 Spacer (098—099") 40-3127 Spacer (103—104") 57-3876 Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (075—076") 40-3119 Spacer (070—071") 40-3120 Spacer (070—071") 40-3120 Spacer (080—081") 41-3063 Pinion, mainshaft first gear (16 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-321 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (½" × 1") 40-3323 Screw, keeper plate (5 B.A. × ½") 40-3194 Keeper plate, control quadrant 40-304 Bolt, cam plate spring (2 B.A. × ½") 40-3045 Lockplate, for bolt line 109 40-3043 Spring, gam plate 59-3043 Spring, gam plate 59-7043 Spring plate	79.	40. 3259	Shim laychaft
57-3874 Pinion, layshaft first gear (27 teeth) 57-3877 Pinion, layshaft third gear (19 teeth) 41-3078 Circlip, layshaft 41-3068 Layshaft with top gear pinion (14 teeth) 41-3074 Thrust washer (083—085°) as regal 41-3072 Thrust washer (708—080°) os regal 40-3292 Bearing, layshaft (Torrington B.108) 41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pioneer 20615618) 29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (093—094°) as regal 40-3126 Spacer (093—094°) as regal 40-3127 Spacer (103—104°) as regal 40-3127 Spacer (103—104°) as regal 40-3019 Spacer (075—076°) as regal 40-319 Spacer (070—071°) as regal 40-3100 Spacer (080—081°) as regal 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3063 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft first gear (16 teeth) 40-3031 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate 57-3850 Cam plate 57-3850 Cam plate 57-3850 Cam plate 57-3850 Screw, keeper plate (5 B.A. × ½°) 40-3193 Plunger, gear control quadrant 40-3194 Keeper plate, control quadrant 40-3195 Spring, gear control quadrant 40-3045 Lockplate, for bolt line 109 40-3043 Spring, cam plate 40-3043 Spring, cam plate 59-710 Spring, cam plate 50-710 Spring plate	80.		
57-3877 Pinion, layshaft third gear (19 teeth) 41-3078 Circlip, layshaft 41-3068 Layshaft with top gear pinion (14 teeth) 41-3074 Thrust washer (-083—-085")	81.		
41-3078 Circlip, layshaft 41-3068 Layshaft with top gear pinion (14 teeth) 41-3074 Thrust washer (-083—085")	82.		
41-3068 Layshaft with top gear pinion (14 teeth) 41-3074 Thrust washer (083—085")	83.		
41-3074 Thrust washer (-083—085") 41-3072 Thrust washer (-078—080") 40-3292 Bearing, layshaft (Torrington B.108) 41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pioneer 20615618) 29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (-098—099") 40-3126 Spacer (-098—099") 40-3127 Spacer (-103—104") 57-3876, Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (-075—076") 40-3019 Spacer (-075—076") 40-3119 Spacer (-070—071") 40-3120 Spacer (-080—081") 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (\frac{1}{4}" UN.C. × 1") 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate 57-3850 Cam plate 53-3049 Screwd plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (\frac{1}{22}" × 1") 40-3323 Screw, keeper plate, control quadrant 40-3193 Plunger, gear control quadrant 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × \frac{1}{4}") 40-3045 Lockplate, for bolt line 109 40-3043 Spring plate	84.		
41-3072 Thrust washer (-078—080") 40-3292 Bearing, layshaft (Torrington B.108) 41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pioneer 20615618) 29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (-093—094") 40-3126 Spacer (-098—099") 57-3876 Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (-075—076") 40-3019 Spacer (-075—076") 40-3119 Spacer (-070—071") 40-3120 Spacer (-080—081") 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3063 Pinion, mainshaft first gear (16 teeth) 40-3070 Bush, mainshaft first gear (16 teeth) 40-3033 Selector fork, layshaft 40-3033 Selector fork, layshaft 40-3030 Spindle, selector forks 40-3291 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Spiti pin, cam plate pivot (\frac{1}{22}" \times 1") 40-3193 Plunger, gear control quadrant 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. \times \frac{1}{2}") 40-3045 Lockplate, for bolt line 109 40-3043 Spring plate 40-3043 Spring plate	85.		
40-3292 Bearing, layshaft (Torrington B.108) 41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pioneer 20615618) 29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (·093—094') as req 40-3126 Spacer (·098—099') as req 40-3127 Spacer (·103—104') 57-3876, Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (·075—076') as req 40-3119 Spacer (·070—071') as req 40-3120 Spacer (·080—081') as req 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3070 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (‡' UN.C. × 1') 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (½" × 1") 40-3323 Screw, keeper plate, control quadrant 40-3193 Plunger, gear control quadrant 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½") 40-3045 Lockplate, for bolt line 109 40-3043 Spring plate	85.		
41-3070 Pinion, layshaft second gear (22 teeth) 41-3054 Oil seal, mainshaft (Pioner 20615618) 29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (-093—-094*) 40-3126 Spacer (-098—099*) 3s req 40-3127 Spacer (-103—104*) 57-3876, Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (-075—076*) 40-3019 Spacer (-070—071*) 40-3120 Spacer (-080—081*) 40-3120 Spacer (-080—081*) 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft with bush 40-3032 Spindle, selector fork, layshaft 40-3032 Spindle, selector forks 40-3031 Screw, inner timing cover (\frac{1}{4}" UN.C. × 1") 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (\frac{1}{2}" × 1") 40-3323 Screw, keeper plate (5 B.A. × \frac{1}{16}") 40-3194 Keeper plate, control quadrant 40-3195 Spring, gear control quadrant 40-304 Bolt, cam plate spring (2 B.A. × \frac{1}{2}") 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	86.		
11-3054	87.		
29-3857 Bearing, mainshaft (Hoffman 130) 57-3872 Pinion, mainshaft top gear (22 teeth) 40-3020 Spacer (-093—-094")	88.		
57–3872 Pinion, mainshaft top gear (22 teeth) 40–3020 Spacer (·093—·094*)	89.		
40-3020 Spacer (·093—·094")	90.		
40-3126 Spacer (·098—099°)	91.		
40-3127 Spacer (·103—·104") 57-3876, Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (·075—·076") 3s req 40-3119 Spacer (·070—·071") 40-3120 Spacer (·080—·081") 41-3089 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (¼" UN.C. × 1") 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (⅓²" × 1") 40-3323 Screw, keeper plate (5 B.A. × ⅓²") 40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control quadrant 40-3193 Plunger, gear control quadrant 40-3194 Bolt, cam plate spring (2 B.A. × ⅓²") 40-3045 Lockplate, for bolt line 109 40-3043 Spring plate	91.		
57-3876 Pinion, mainshaft second gear (21 teeth) 40-3019 Spacer (·075—076") as req. 40-3119 Spacer (·070—071") as req. 40-3120 Spacer (·080—081") as req. 41-3063 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (½" UN.C. × 1") 40-3031 Selector fork, layshaft 40-3022 Cam plate pivot 57-3850 Cam plate pivot 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (½" × 1") 40-3323 Screw, keeper plate (5 B.A. × ½") 40-3194 Keeper plate, control quadrant 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½") 40-3045 Lockplate, for bolt line 109 40-3043 Spring plate	91.		
40-3019 Spacer (·075—076")	92.		
40-3119 Spacer (-070—-071") as req 40-3120 Spacer (-080—-081") as req 41-3063 Pinion, mainshaft third gear (24 teeth)	93.		
40-3120 Spacer (*080—*081") as reg 41-3063 Pinion, mainshaft third gear (24 teeth)	93.		
41-3063 Pinion, mainshaft third gear (24 teeth) 41-3089 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (½" UN.C. × 1") 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (½" × 1") 40-3323 Screw, keeper plate (5 B.A. × ½") 40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control plunger 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½") 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	93.		a (000 0010)
41-3089 Pinion, mainshaft first gear (16 teeth) 40-3007 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (½" UN.C. × 1") 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (½" × 1") 40-3323 Screw, keeper plate (5 B.A. × ½") 40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control quadrant 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½") 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	94.		Pit and the still and the stil
40-3007 Bush, mainshaft push rod 40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (¼" UN.C. × 1") 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (½" × 1") 40-3323 Screw, keeper plate (5 B.A. × ½") 40-3194 Keeper plate, control quadrant 40-3195 Spring, gear control plunger 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½") 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	95.		
40-3254 Mainshaft with bush 14-6608 Screw, inner timing cover (‡" UN.C. × 1") 40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (\$\frac{32"}{32"} \times 1") 40-3323 Screw, keeper plate (5 B.A. \times \frac{16"}{16"}) 40-3194 Keeper plate, control quadrant 40-3195 Spring, gear control quadrant 40-3040 Bolt, cam plate spring (2 B.A. \times \frac{3}{8"}) 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	96.		
14-6608Screw, inner timing cover ($\frac{1}{4}$ " UN.C. × 1")40-3033Selector fork, layshaft40-3032Spindle, selector forks40-3291Cam plate pivot57-3850Cam plate53-3049Screwed plug, mainshaft oil feed60-2724Split pin, cam plate pivot ($\frac{3}{32}$ " × 1")40-3323Screw, keeper plate (5 B.A. × $\frac{5}{16}$ ")40-3194Keeper plate, control quadrant40-3155Spring, gear control plunger2240-3044Bolt, cam plate spring (2 B.A. × $\frac{3}{8}$ ")40-3045Lockplate, for bolt line 10940-3042Spring, cam plate40-3043Spring plate	97.		26.1.1.6.14.1.1
40-3033 Selector fork, layshaft 40-3032 Spindle, selector forks 40-3291 Cam plate pivot 57-3850 Cam plate 53-3049 Screwed plug, mainshaft oil feed 60-2724 Split pin, cam plate pivot (3½" × 1") 40-3323 Screw, keeper plate (5 B.A. × ½") 40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control plunger 20-3193 Plunger, gear control quadrant 20-3044 Bolt, cam plate spring (2 B.A. × ½") 20-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	98.		
$40-3032$ Spindle, selector forks $40-3291$ Cam plate pivot $57-3850$ Cam plate $53-3049$ Screwed plug, mainshaft oil feed $60-2724$ Split pin, cam plate pivot $\left(\frac{3}{32}^{"} \times 1^{"}\right)$ $40-3323$ Screw, keeper plate $(5 \text{ B.A.} \times \frac{1}{16}^{"})$ $40-3194$ Keeper plate, control quadrant $40-3155$ Spring, gear control plunger 2 Plunger, gear control quadrant 2 Plunger, gear control quadrant 2 Lockplate, for bolt line 109 2 Lockplate, for bolt line 109 2 Spring, cam plate 2 Spring plate	99.		
40-3291Cam plate pivot57-3850Cam plate53-3049Screwed plug, mainshaft oil feed60-2724Split pin, cam plate pivot $(\frac{3}{2}z'' \times 1'')$ 40-3323Screw, keeper plate (5 B.A. $\times \frac{5}{10}z''$)40-3194Keeper plate, control quadrant40-3155Spring, gear control plunger2240-3193Plunger, gear control quadrant2240-3044Bolt, cam plate spring $(2 B.A. \times \frac{3}{8}z'')$ 40-3045Lockplate, for bolt line 10940-3042Spring, cam plate40-3043Spring plate	00.		
57-3850Cam plate53-3049Screwed plug, mainshaft oil feed60-2724Split pin, cam plate pivot $(\frac{3}{32}" \times 1")$ 40-3323Screw, keeper plate (5 B.A. $\times \frac{5}{16}")$ 40-3194Keeper plate, control quadrant40-3155Spring, gear control plunger2240-3193Plunger, gear control quadrant40-3044Bolt, cam plate spring $(2 B.A. \times \frac{3}{8}")$ 40-3045Lockplate, for bolt line 10940-3042Spring, cam plate40-3043Spring plate	01.		
53-3049Screwed plug, mainshaft oil feed60-2724Split pin, cam plate pivot $(\frac{3}{32}" \times 1")$ 40-3323Screw, keeper plate $(5 \text{ B.A.} \times \frac{5}{16}")$ 40-3194Keeper plate, control quadrant40-3155Spring, gear control plunger2Plunger, gear control quadrant40-3044Bolt, cam plate spring $(2 \text{ B.A.} \times \frac{3}{8}")$ 40-3045Lockplate, for bolt line 10940-3042Spring, cam plate40-3043Spring plate	02.		
60-2724 Split pin, cam plate pivot $(\frac{3}{32}" \times 1")$ 40-3323 Screw, keeper plate $(5 \text{ B.A.} \times \frac{3}{16}")$ 40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control plunger 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring $(2 \text{ B.A.} \times \frac{3}{8}")$ 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	03.		
40-3323 Screw, keeper plate (5 B.A. × ½°) 40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control plunger 2 40-3193 Plunger, gear control quadrant 2 40-3044 Bolt, cam plate spring (2 B.A. × ½°) 2 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	04.		
40-3194 Keeper plate, control quadrant 40-3155 Spring, gear control plunger 40-3193 Plunger, gear control quadrant 40-3044 Bolt, cam plate spring (2 B.A. × ½) 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	05.		
40-3155 Spring, gear control plunger	06.		
40-3193 Plunger, gear control quadrant 2 40-3044 Bolt, cam plate spring (2 B.A. × ½°) 2 40-3045 Lockplate, for bolt line 109 40-3042 Spring, cam plate 40-3043 Spring plate	07.		
40-3044 Bolt, cam plate spring (2 B.A. × ½)	08.		
40-3045 Lockplate, for bolt line 109	09.		
40-3042 Spring, cam plate	10.	40-3045	
40-3043 Spring plate	11.		
	12.		
	13.	57-3854	Salastas fack seeinghaft
40-3265 Clutch push rod	14.		
41-3045 Bush, mainshaft top gear 2	15.		
70-6026 Circlip, mainshaft oil seal	16.		

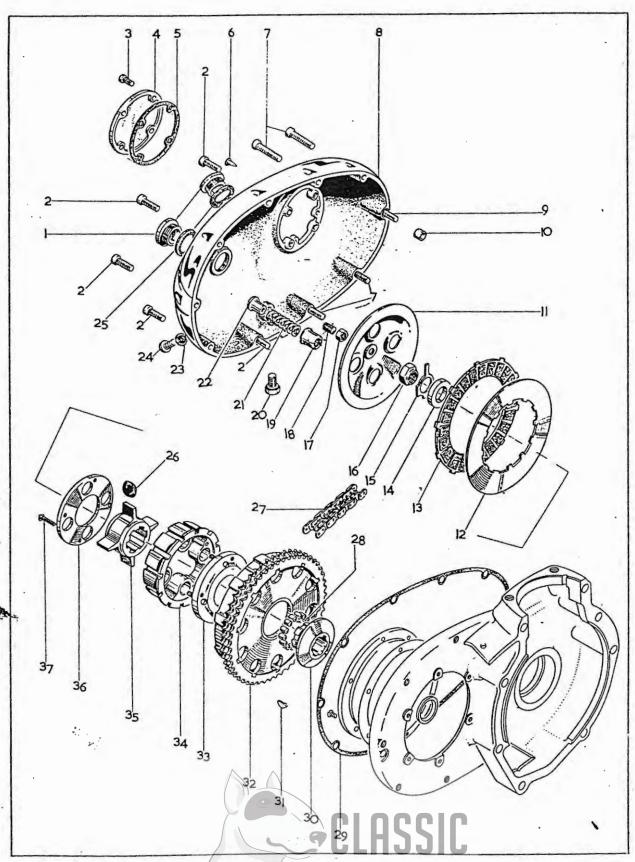

CLUTCH

Plate Ref.	Spares Number	Description	Per Set
1.	57–2166	Screwed plug, primary cover (1" × 16 un.s.)	
1.	70-9800	Screw breather plug, primary cover (1" × 16 UN.S.)	
2.	14-6610	Screw, short, primary cover (4" UN.C. × 14")	5
3.	76-4116	Screw, inspection cover (2 B.A. × ½)	. 4
4.	68-0839	Timing inspection cover	
. 5.	68-0840	Cover gasket	
6.	40-1005	Ignition pointer	
7.	14-6611	Screw, long, primary cover (‡" UN.C. × 1½")	4
8.	71-1058	Primary cover assembly	
9.	21-1951	Screw, primary cover (\frac{1}{2}" UN.C. \times 1\frac{1}{2}")	
10.	66-3074	Dowel, primary cover to crankcase	2
11.	57-4019	Clutch pressure plate	
12.	40-3220	Clutch driven plate	5
13.	40-3233	Clutch driving plate	4
14.	40-3234	Retaining washer, clutch	
15.	40-3221	Lockwasher, clutch nut	
16.	40-3227*	Retaining nuts, clutch (½" B.S.C.)	
17.	02-2395	Nut, clutch adjusting screw (‡" B.S.C.)	
18.	40-3230	Clutch adjusting screw (\frac{1}{2}" B.S.C. \times \frac{5}{8}")	
19.	57–3951	Clutch-spring cup	4
20.	21-1943	Drain plug, primary case	
21.	40-3231	Clutch spring	
22.	40–3219	Clutch spring nut	
23.	71–1065	Washer, oil level screw	
24.	21–2002	Oil level screw	
25.	70-8782	Washer for primary cover plugs	2
26.	41-3212	Rubber pads, cush drive	0
27.	19-8613	Primary chain (70 pitch)	
28.	40-3206		25
29.	70–7856	Roller, clutch hub	
30.	40-3201	Clutch hub	
31.	40-3150	Key, clutch hub	
32.	47-3214	Chainwheel complete (52 teeth)	
33.	40-3207	Retaining plate (inner)	
34.	41-3210	Clutch centre	
35.	41–3210	Clutch spider	
36.	40–3210	Retaining plate (outer)	
. 37.	40-3210	Screw, inner and outer retaining plates (1 B.A. × 18)	4
38.	57–4016	Clutch assembly complete	



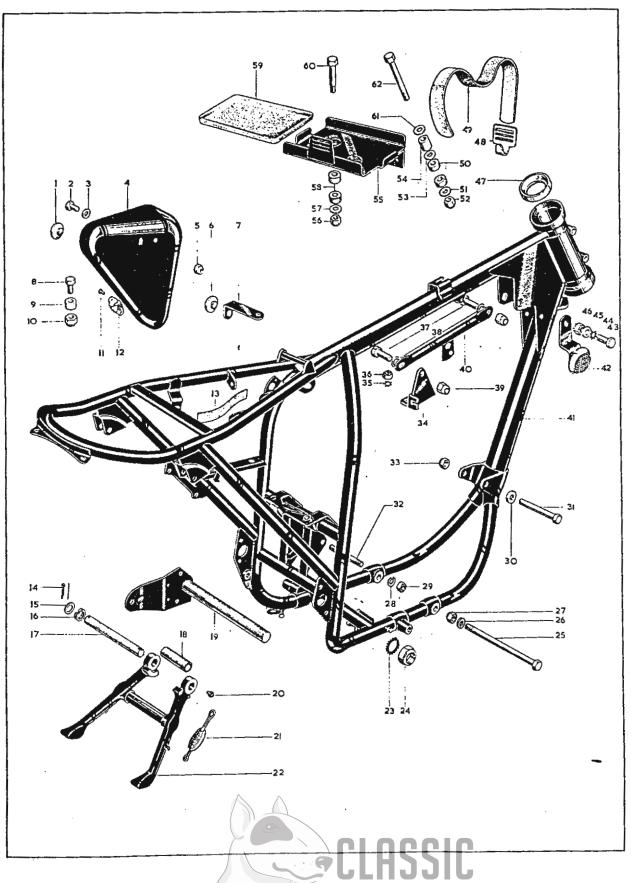


CLASSIC BIKE SPARES

FRAME

Plate Ref.	Spares Number	Description	Per Set
1.	40-8046	Rubber pad, sidecover	
2.	02-0220	Bolt, tool tray to frame $(\frac{1}{4}$ " B.S.C. $\times \frac{3}{8}$ ")	
3.	02-0525	Washer, tool tray to frame $(\frac{1}{4}" \times \frac{1}{4}" \times \cdot 048")$	
4.	40-9172	Tool tray	
5.	40-0414	Nut, for bolt line 2 (‡" B.S.C.)	
6.	40-8046	Rubber pad, sidecover	
7.	40-9187	Bracket for pad	
8.	02-1354	Bolt, tool tray to frame (4" B.S.C. × 11")	
9.	15-7563	Spacer, tool tray	
10.	40-0414	Nut, for bolt line 8 (‡" B.S.C.)	
11.	68-9337	Rivet for "Oddie" clip	4
12.	68-9115	"Oddie" clip for sidecover	2
13.	40-9188	Adhesive strip for sidecover	
14.	60-2722†	Split pin, centre stand pivot $(\frac{3}{32}" \times \frac{3}{4}")$	2
15.	15-0039†	Washer, centre stand pivot $(\frac{1}{2}" \times \frac{27}{32}" \times \frac{1}{16}")$	2
16.	03-1346†	Spring washer, centre stand pivot $(\frac{17}{32}" \times \frac{7}{8}" \times 040")$	
17.	82-9124†	Pivot bar, centre stand	
18.	82-9125†	Spacer tube, centre stand	
19.	47-4214	Swinging arm spindle	
20.	47-9012†	Grease nipple, centre stand	2
21.	68-4708†	Spring, centre stand	
22.	82-8686†	Centre stand	
23.	42-4364	Lockwasher, swinging arm spindle	
24.	42-4343	Nut, swinging arm spindle $(\frac{13}{16}"$ B.S.C.)	
25.	21-1934*	Bottom engine bolt ($\frac{1}{3}$ " UN.F. \times $7\frac{15}{15}$ ")	,
26.	02-2138	Spacer, engine bolt	
27.	14-1803	Nut, bottom engine bolt (3" UN.F.)	
28.	02-0522	Spring washer, rear engine stud	2
29.	02-0046	Nut, rear engine stud ($\frac{3}{8}$ B.S.C.)	2
30.	02-2138	Spacer, engine bolt	
30.	68-4925†	Spacer, exhaust pipe bracket	
31.	40-4081*	Front engine bolt $(\frac{3}{8}$ " B.S.C. \times $3\frac{13}{16}$ ")	
32.	40-4077*	Rear engine stud ($\frac{3}{8}$ " B.S.C. \times $2\frac{9}{16}$ ")	
33.	42-4475	Nut, front engine bolt (3" B.S.C.)	



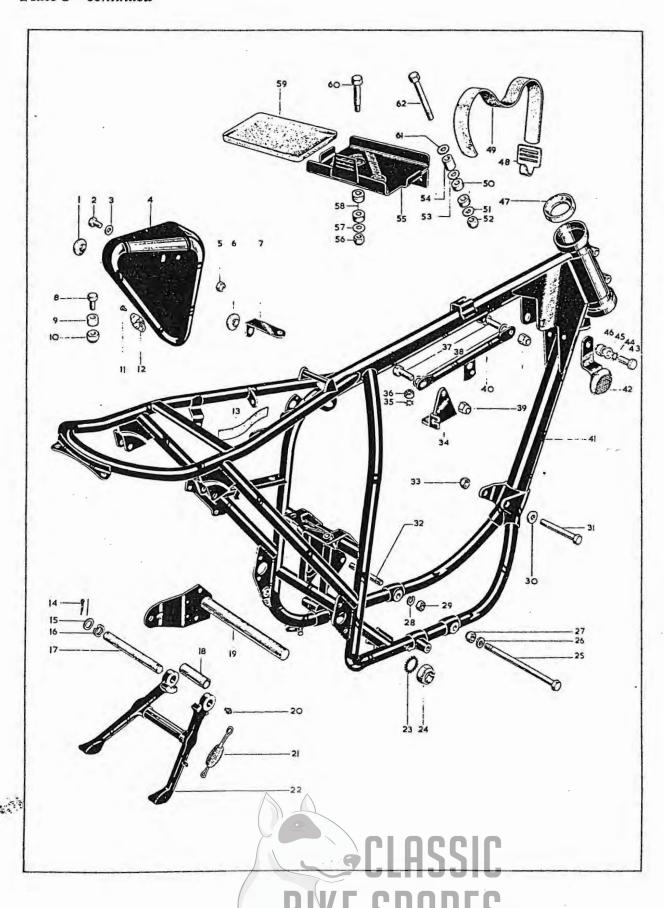


E.

FRAME

Plate Ref.	Spares Number				L	escripti	on					Pei Se
34.	40-0946	Engine stea	ady bracket			44						
35.	36-0382	Lockwashe	er, steady br	acket (1	· ")							
36.	02-0049	Nut, stead	y bracket (5 B.S.C.)							2
37.	75-4813*	Bolt, stead	y stay (3" B	.s.c. × -	13-")							2
38.	02-2138	Washer, st	eady stay (" × 3"	× 16)			**			2
39.	42-4475	Nut, stead	y stay (3" B.	s.c.)								2
40.	83-1513	Engine stea	ady stay									
41.	82-9213†	Frame con	iplete									
41.	83-1607‡	Frame com	iplete									
42.	19-1035‡	Side reflect	or, amber (Lucas 5	7173)							2
43.	75-4813*	Bolt, reflec	tor mountin	ng, right	-hand	(3" B.S.	c. x 1	3-7				
44.	66-4707	Lockwashe	r, reflector	mountin	g, rig	ht-hand						
45.	02-2138	Washer, re	flector mou	nting, ri	ght-ha	and (3"	× 3" >	(16)				
46.	42-4475	Nut, reflect	tor mountin	g, right-	hand	(1 B.S.C	c.)					
47.	66-4149	Steering he	ad cup									2
48.	82-9004	Strap hook	, battery ca	rrier								
49.	68-4577	Battery str	ар									
50.	40-4524	Rubber bu	sh, battery	carrier								2
51.	30-0733	Washer, ba	ttery carrie	r (計"×	₹" ×	16")						
52.	42-4475	Nut, batter	y carrier (}	" B.S.C.)								
53.	30-0733	Washer, ba	ttery carrie	r (計 ×	₹" ×	16)						
54.	90-4294	Spacer, bat	tery carrier					• •				
55.	82-8285	Battery car	rier :.									
56.	42-4476	Nut, for bo	olt line 60 (5 B.S.C	.)							2
57.	82-9008	Washer, ba	ttery carrie									2
58.	40-4524	Rubber bu	sh, battery	carrier				• •				4
59.	68-4597	Rubber ma	it, battery c	arrier								
60.	40-4530	Bolt, batter	ry carrier (B.S.C.	$\times 1_7$	7 -7						2
61.	30-0733	Washer, ba	ttery carrie	r (舒" ×	₹" ×	16")						
62.	65-8326	Bolt, batter	ry carrier (}	" B.S.C.	× 3")							
	*Special:	material:	25.—EN	15.		31.—E	N14B.		32	.—EN	15.	
			37.—EN	8R.		43.—E	N8R.				,	
	†U.S.	A. models exc	cepted.				‡U.S	.A. mo	dels o	nly.		




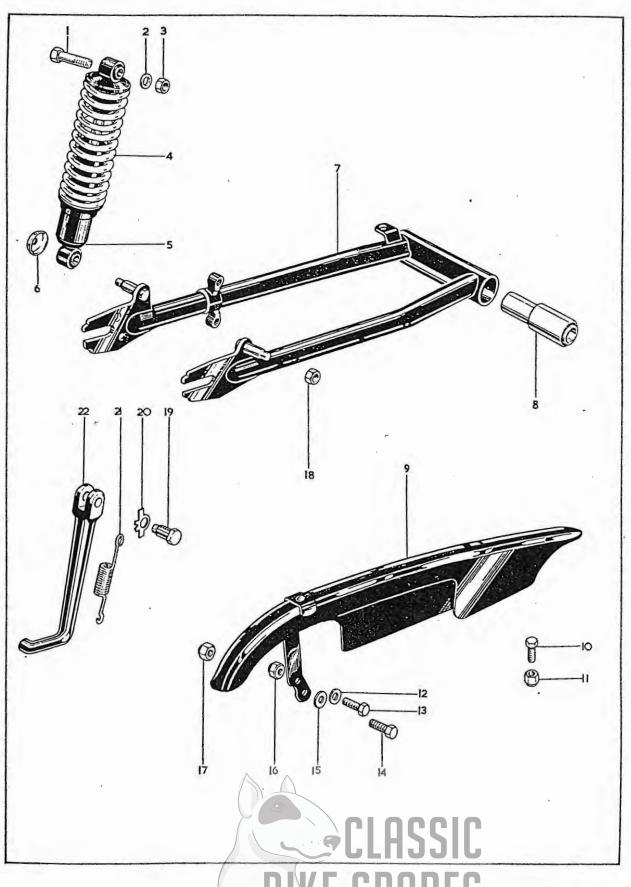

SWINGING ARM

Plate Ref.	Spares Number	Description	Per Se					
. 1.	40-6910*	Bolt, rear damper top mounting $(\frac{1}{8}" B.S.C. \times 1\frac{7}{8}")$						
2.	02-1733	Washer, rear damper top mounting $(\frac{3}{8}" \times \frac{13}{16}" \times \frac{1}{16}")$. 2					
3.	02-0449	Nut, rear damper top mounting (3" B.S.C.)	. 2					
4.	19-7441	Rear damper spring (Girling 64543708)	. 2					
5.	19-7452	Rear damper complete (Girling 4644)	. 2					
6.	82-8933	Dust cover, rear damper	. 2					
7.	82-9210	Swinging arm with bushes						
8.	40-4241	Silentbloc bushes, swinging arm	. 2					
9.	82-9950	Rear chainguard						
10.	02-0220	Bolt, chainguard front $(\frac{1}{4}$ " B.S.C. $\times \frac{3}{8}$ ")						
11.	40-0414	Nut, chainguard front (‡" B.S.C.)						
12.	02-2138	Washer, chainguard rear $(\frac{3}{3}" \times \frac{3}{4}" \times \frac{1}{16}")$						
13.	14-0113	Bolt, chainguard rear (16" UN.F. × 18")						
14.	67-1171*	Bolt, chainguard and anchor strap ($\frac{1}{8}$ B.S.C. \times 1 $\frac{5}{16}$)						
15.	02-0861	Washer, chainguard and anchor strap $(\frac{3}{3}" \times \frac{1}{4}" \times \frac{3}{32}")$						
16.	14-1902	Nut, for bolt line 13 (5" UN.F.)						
17.	41-4105	Nut, for bolt line 14 (3" B.S.C.)						
18.	14-0903	Nut, rear damper bottom mounting (3" UN.F.)	2					
19.	40-4733*	Pivot bolt, prop stand $(\frac{3}{3}$ B.s.C. $\times 1\frac{9}{32}$ ")						
20.	40-4734	Lockwasher, prop stand pivot						
21.	40-4735	Prop stand spring						
22.	83-1604	Prop stand assembly						
	*Special	material: 1.—EN15. 14.—EN15. 19.—EN32.						



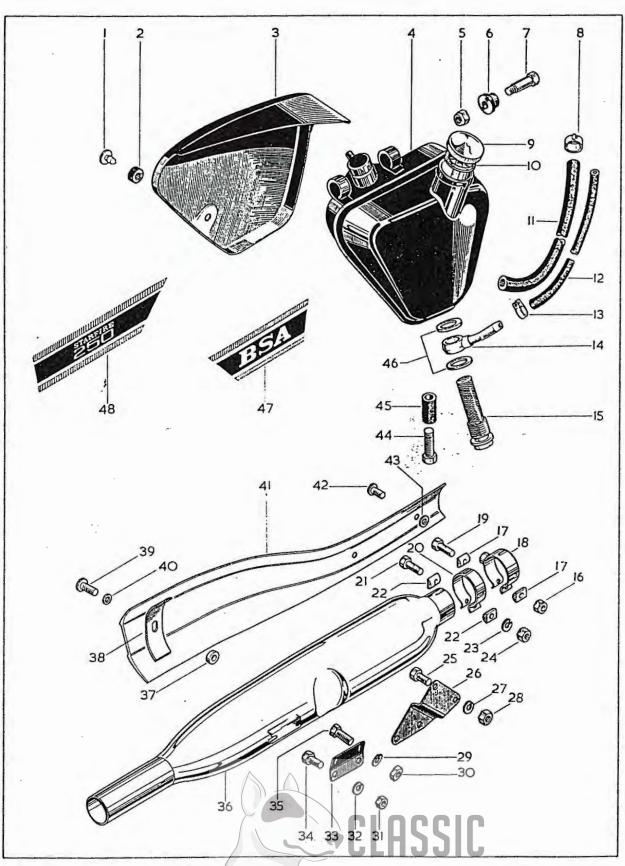

OIL TANK, SIDECOVER, SILENCER

Plate Ref.	Spares Number	Description						
1.	68-9287	"Oddie" stud (long)						
1.	68-9223	"Oddie" stud (short)	•					
2.	68-9226	Rubber bush, "Oddie" stud	. 3					
2.	68-9227	Rubber bush, "Oddie" stud						
3.	82-8614	Sidecover						
4.	83-1648	Oil tank with fixed fittings						
5.	42-3249	Nut, oil tank mounting (4" B.S.C.)	. 2					
6.	40-8436	Rubber bush, tank mounting	. 2					
7.	40-8435	Bolt, Tank top mounting $(\frac{1}{4}$ B.s.c. $\times 1\frac{3}{4}$)	2					
8.	68-8343	Clip, oil return pipe	. 2					
9.	83-1651	Filler cap, oil tank						
10.	67-0042	Filler cap washer						
11.	40-8382	Oil return pipe						
12.	68-8383	Oil feed pipe	0.					
13.	68-8382	Clip, oil feed pipe	2					
14.	82-8874	Oil pipe banjo connection						
15.	29-7962	Oil tank filter						
16.	14-1302	Nut, exhaust pipe clip (U.S.A.) 5" UN.F	. 2					
17.	75-2719	"D" washer, clip (U.S.A.)	. 4					
18.	71-1184	Clip, heat shield (U.S.A.)	. 2					
19.	14-0219	Bolt, heat shield clip (U.S.A.) $\frac{5}{16}$ " UN.F. \times $1\frac{1}{2}$ "	. 2					
20.	70-5874	Silencer clip						
20.	75-2725	Silencer clip (U.S.A.)						
21.	14-0219	Bolt, silencer $\frac{5}{16}$ UN.F. \times $1\frac{1}{2}$						
22.	75-2719	"D" washer, silencer clip	. 2					
23.	54-8003	Spring washer, silencer clip						
24.	21-1908	Nut, silencer clip (5 UN.F.)						
25.	14-0115	Bolt, bracket to frame (U.S.A.) $\frac{5}{16}$ UN.F. $\times \frac{7}{8}$. 2					
26.	71-1182	Silencer bracket (U.S.A.)						
27.	24-8784	Spring washer, bracket bolt (U.S.A.)	. 2					
28.	14-0302	Nut, bracket to frame (U.S.A.) 5" UN.F	. 2					



Plate 7—continued


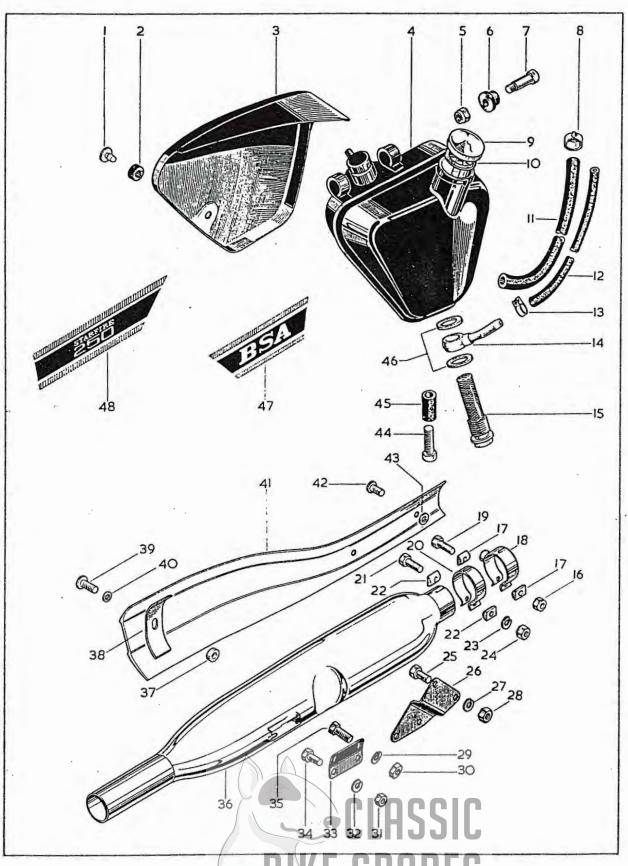


Plate 7-continued

OIL TANK, SIDECOVER, SILENCER

Plate Ref.	Spares Number	Description	Per Sei
29.	02-2903	Spring washer, bracket to frame (Standard)	2
30.	02-0046	Nut, bracket to frame (Standard) 3" B.S.C	2
31.	02-2395	Nut, bracket to silencer ‡" B.S.C	2
32.	82-9020	Spring washer, bracket to silencer	2
33.	40-2844	Silencer Bracket (Standard)	
34.	02-0204	Bolt, bracket to silencer ($\frac{1}{4}$ " B.S.C. $\times \frac{1}{2}$ ")	2
35.	24-0649	Bolt, bracket $(\frac{3}{8}$ B.S.C. $\times \frac{7}{8}$)	2
36.	70-9652	Silencer complete (Standard)	
36.	71-1181	Silencer complete (U.S.A.)	
37.	71-1223	Spacer, exhaust pipe shield (U.S.A.)	
38.	71-1222*	Support strip, heat shield (U.S.A.)	
39.	14-2206	Screw-rear, heat shield (U.S.A.) ‡" UN.F. × ‡"	•
40.	68-0331	Washer, heat shield screw (U.S.A.)	3
41.	71-1221	Heat shield (U.S.A.)	
42.	14-2205	Front screw, heat shield (U.S.A.) 1" UN.F. × 1"	2
43.	60-2338	Backing washer, heat shield (U.S.A.)	2
44.	21-0771	Lower bolt, oil tank $(\frac{5}{16}"$ UN.F. $\times 1\frac{3}{4}")$	
45.	40-8401	Rubber grommet, lower bolt	
46.	29-7971	Fibre washer, banjo connection	2
47.	60-2377	Oil tank transfer (U.S.A.)	
47.	60-2376	Oil tank transfer (Standard)	
48.	60-2378	Sidecover transfer (U.S.A.)	
48.	60-2376	Sidecover transfer (Standard)	



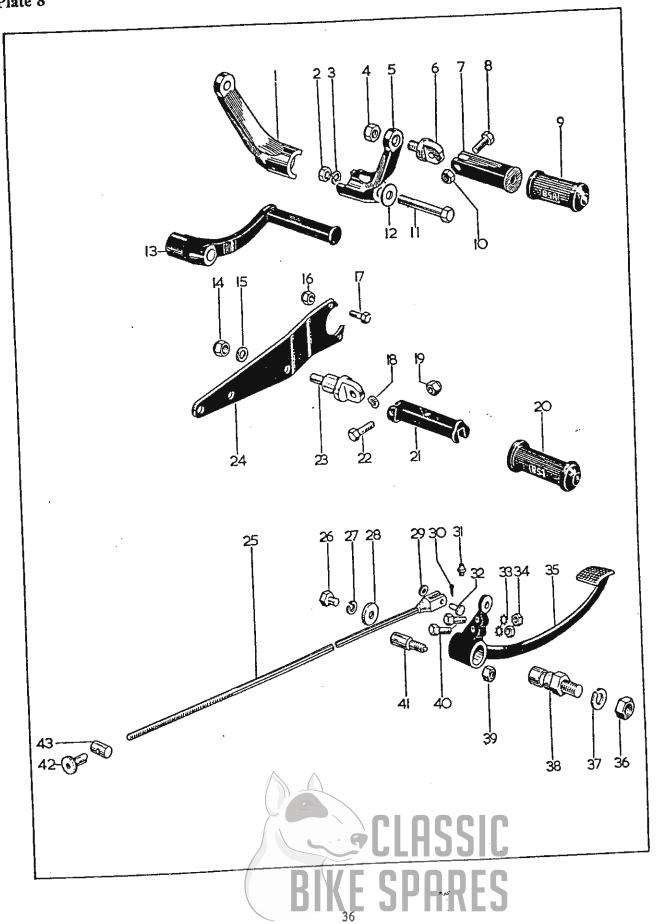


C 1

Plate 8

FOOTRESTS AND BRAKE LINKAGE

Plate Ref.	Spares Number	Description			Per Set
1.	83-1426	Footrest bracket for folding footrest (U.S.A.)			
2.	02-0046	Nut, footrest bracket to frame, right-hand (3" B.S.C.)			
3.	02-0522	Spring washer, footrest bracket to frame (right-hand)			
4.	41-4105	Nut, anchor bolt to bracket—U.S.A. (3" B.S.C.)	• •		2
5.	83-1428	Footrest bracket for folding footrest (U.S.A.)			
6.	65-4917	Anchor bolt, folding footrest (U.S.A.)			2
7.	42-4926	Folding footrest (U.S.A.)		• •	2
8.	29-5293	Bolt, footrest to anchor bolt—U.S.A. $(\frac{5}{16}" B.S.C. \times 1\frac{1}{4}")$		• •	2
9.	82-9608	Folding footrest rubber (U.S.A.)			2
9.	82-9602	Footrest rubber	• •	• •	2
10.	42-4476	Nut, footrest to anchor bolt—U.S.A. (5 B.S.C.)			2
11.	68-4081*	Bolt, footrest bracket to frame, right-hand ($\frac{3}{8}$ " B.S.C. $\times 2\frac{15}{16}$ ")			
12.	27-5676	Washer, footrest bracket to frame, (right-hand)			
13.	83-0256	Footrest left-hand	• •		2
13.	41-4863	Footrest, right-hand		2 or	
14.	41-4105	Nut, pillion footrest anchor bolt (\frac{1}{8}" B.S.C.)	• •	2 or	1
14.	14-0303	Nut, pillion footrest anchor bolt, left-hand—U.S.A. (3" UN.F.)			
15.	02-2138	Washer, pillion footrest anchor bolt $(\frac{3}{6}^{"} \times \frac{3}{4}^{"} \times \frac{1}{16}^{"})$	• •		2
16.	14-0702	Nut, bracket to frame $(\frac{5}{16}$ " UN.F.)			3
17.	14-0116	Bolt, bracket to frame $\binom{5}{16}$ UN.F. \times 1")			3
18.	04-2276	Washer, pillion footrest			2
19.	42-4476	Nut, pillion footrest pivot bolt (5 B.S.C.)			2
20.	82-9603	Pillion footrest rubber			2
21.	68-4835	Pillion footrest			2
22.	29-5293	Bolt, pillion footrest pivot $(\frac{5}{16}" \text{ B.s.c.} \times 1\frac{1}{4}") \dots$			2
23.	40-4820	Anchor bolt (left-hand)		4 *	
23.	82-8507	Anchor bolt, left-hand (U.S.A.)			
23.	65-4917	Anchor bolt (right-hand)			
24.	41-4835	Bracket, right-hand (U.S.A.)			
24.	82-9943	Bracket (right-hand)			
25.	41-7037	Rear brake rod			
26.	40-6030*	Bolt, brake pedal to pivot (\frac{1}{8}" B.S.C. \times \frac{1}{4}")			
27.	03-0111	Spring washer, brake pedal to pivot (13" × 13" × ·104")			
28.	30-0196	Washer, brake pedal to pivot $(\frac{3}{8}" \times 1\frac{1}{8}" \times \frac{1}{8}")$		• •	
29.	02-0525	Washer, brake rod to pedal $(\frac{1}{4}" \times \frac{1}{2}" \times .048")$			1
30.	60-2683	Split pin, brake rod to pedal $(\frac{1}{16}" \times \frac{3}{8}")$		• •	
31.	28-2080	Grease nipple, brake pedal			
32.	83-1460	Pivot pin, brake rod to pedal			
33.	29-0541	Lockwasher, pedal adjuster bolt			2
34.	02-1027	Nut, pedal adjuster (4" B.S.C.)			2
35.	47-7013	Rear brake pedal			
36.	02-1925	Nut, brake pedal pivot (76" B.S.C.)			
37.	02-1967	Spring washer, brake pedal pivot $(\frac{7}{16}" \times \frac{7}{8}" \times \frac{1}{16}")$			
38.	41-7007	Pivot pin, brake pedal			
39.	14-0702	Nut, brake pedal stop (16" UNF.)		• •	
40.	47-7003	Bolt, brake pedal adjuster (2 B.S.C.)			2
41.	82-9958	Brake pedal stop			
42.	90-7029	Adjuster nut, brake rod (4' B.S.F.)			
43.	65-6274	Swivel pin, brake rod			
		*Special material: 11.—BN15. 26.—EN14B.			

í.

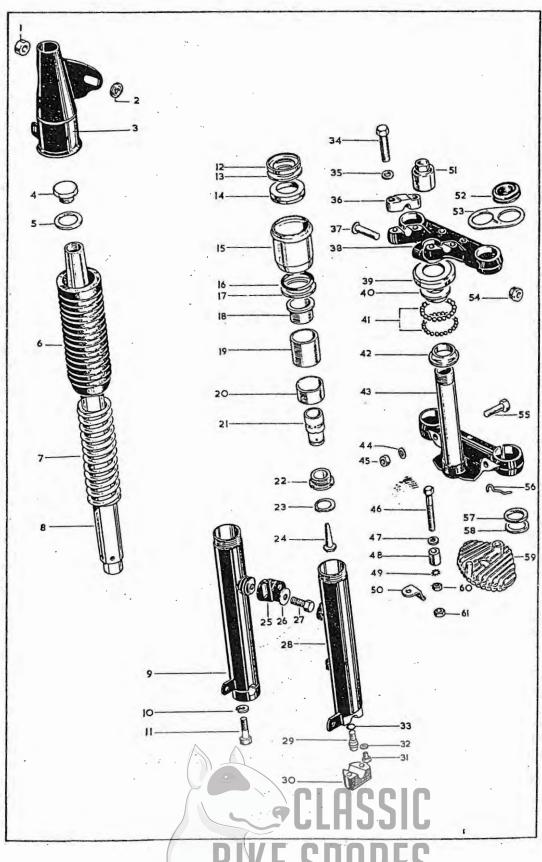


BIKE SPARES

Plate 9

FRONT FORK

Plate Ref.	Spares Number	Description	Per Set
1.	68-5108	Spacer, headlamp mounting	2
2.	68-5104	Washer, headlamp mounting	2
3.	97-3693	Fork sleeve (left-hand)	
3.	97-3694	Fork sleeve (right-hand)	
4.	97-2245	The second feel also feel (1.15 or 20 mm)	2
5.	65-5332	****	2
6.	97-2513	- 11 1	2
7.	97-3678	Fork spring	2
8.	97–3906	Tools also 6	2
9.	97-3921	Sliding tube (left-hand)	
10.	54-8003	Contraction and sea bolt	4
11.	14-0218	Date forth and and (5 family of 136)	4
12.	97-3638		2
13.	97-1656	Custom annual machan	2
14.	75-5099	To the Stand	2
15.	97-3639	Oil seal holder	2
16.	75-5199	F. 1. 402	2
17.	75-5088	Outer washer	2
18.	75-5105	Fork top bearing bush	. 2
19.	97-3672	Fork inner sleeve	. 2
20.	75-5104	Fork lower bearing bush	. 2
21.	97-2154	Shuttle valve	2
22.	97-2091	Fork shaft plug	. 2
23.	97-2127	Shuttle valve circlip	. 2
24.	97-2090	Valve restrictor	. 2
25.	97-3669	Mounting bracket, front mudguard (right-hand)	•
25.	97-3680	Mounting bracket, front mudguard (left-hand)	
26.	54-5504	Washer, bracket bolt	. 2
27.	21-1822	Bolt, mounting bracket $(\frac{5}{16}"$ UN.F. $\times \frac{1}{2}"$)	. 2
28.	97-3922	Sliding tube (right-hand)	
29.	97-2126	Bolt, valve restrictor ($\frac{1}{4}$ " UN.F. \times 1 $\frac{3}{32}$ ")	. 2
30.	75-5095	Fork end cap	. 2
31.	97–0519	Fork drain plug	. 2



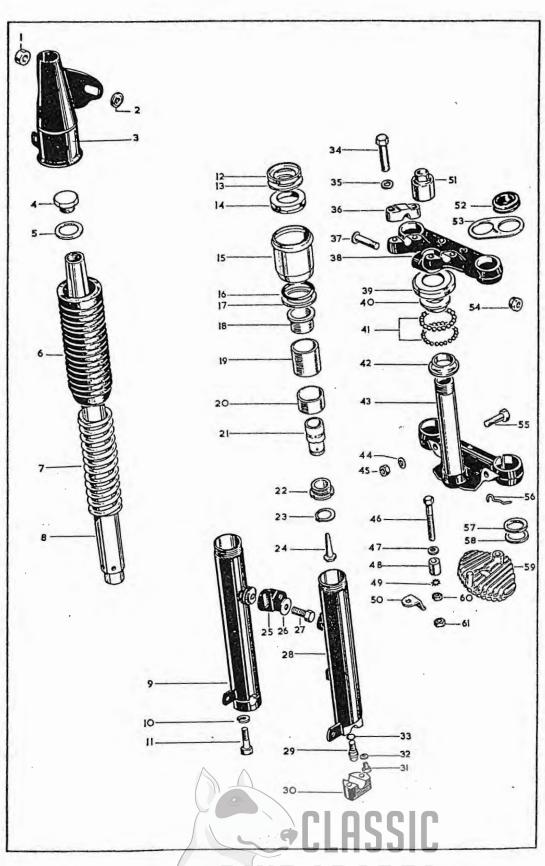

BIKE SPARES

FRONT FORK

Plate Ref.	Spares Number	Description					Per Set
32.	54-0042	Washer, fork drain plug			••		2
33.	40-5069	Sealing washer, restrictor bolt	••				2
34.	68-5056	Bolt, handlebar clamp $(\frac{5}{16}$ B.S.C. $\times 1\frac{1}{8}$)	• •			• •	4
35.	15-5155	Washer, handlebar clamp bolt (21 × 1 × ·048")					4
36.	65-5333	Handlebar clamp					2
37.	27-5135	Bolt, top yoke	• •	••		•	
38.	97-2525	Fork top yoke		• •			
39.	40-5145	Dust cap, steering head top cone				• •	
40.	40-5143	Top cone, steering head			• •	• 4	
41.	97-2704	Steel ball, steering head 4" diameter)				• •	40
42.	40-5144	Bottom cone, steering head					
43.	97-2526	Fork bottom yoke					
44.	02-2138	Washer, pinch bolt $(\frac{3}{8}" \times \frac{3}{4}" \times \frac{1}{16}")$		• •			2
45.	14-0303	Nut, pinch bolt (3" UN.F.)					2
46.	40-9134	Bolt, diode heat sink $(\frac{5}{10}$ B.S.C. \times 3")			• •		
47.	02-0923	Washer, heat sink bolt $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$					2
48.	29-9388	Spacer, heat sink					
49.	36-0382	Lockwasher, heat sink bolt (16")					
50.	68-9429	Diode retainer					
51.	40-5018	Adjusting cap, steering head				٠.	•
52.	76-9325	Grommet, cable guide (U.S.A.)					2
53.	68-5137	Cable guide (U.S.A.)					2
54.	64-6016	Nut, fork top yoke pinch bolt (3" B.S.C.)					
55.	21-0785*	Bolt, bottom yoke $(\frac{1}{8}"$ UN.F. $\times 2\frac{7}{16}"$)					2
56.	40-5090	Cable guide clip		• •		• •	
57.	47-5065	Sealing washer		,, ,			2
58.	47-5064	Seal retainer			• •		4
59.	68-9428	Diode heat sink			• •	• •	
60.	02-0049						
61.	75-3144	Nut, heat sink bolt $(\frac{5}{16}"$ B.S.C.)		• •			
	97-3895	Front fork complete				• •	
		*Special material: 55.—EN15.					



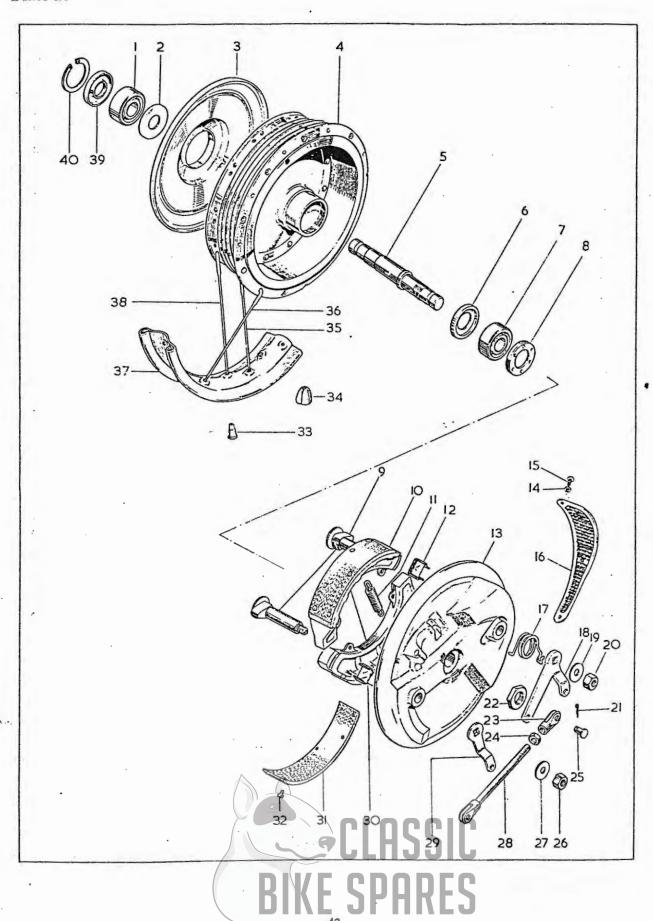





Plate 10

FRONT WHEEL

Plate Ref.	Spares Number	Description	Per Set
-	40.5010	P	
1.	42-5819	Bearing (Hoffman 120)	•
2.	37-1481	Grease cap (left-hand)	•
3.	37-3443	Cover plate (left-hand)	
4.	37-3466	Hub with spindle and bearings	
5.	37-3582	Wheel spindle	
6.	37-3337	Bearing backing ring (right-hand)	
7.	42-5819	Bearing (Hoffman 120)	
8.	42-6335	Bearing retainer	
. 9.	37-2001	Brake cam spindle	. 2 . 2 . 2
10.	37-3446	Brake shoe complete	. 2
11.	42-5841	Brake shoe spring	. 2
12.	37–2026	Pivot pad, brake shoe	
13.	37–2130	Brake plate with gauze	
14.	82-2351	Washer, for screw line 15	
15.	21-1998	"Taptite" screw, gauze air scoop $(4-40 \times \frac{5}{16})$. 3
16.	37-3444	Gauze, air scoop	
17.	37-3522	Return spring, brake lever	
18.	37-3453	Front brake lever (front)	
19.	37-2027	Washer, lever to cam spindle	
20.	14-0403	Nut, lever to cam spindle $(\frac{3}{8}"$ UN.F.)	
21.	60-2683	Split pin, rod to lever	. 3
22.	21-1995	Spindle nut, brake plate $(\frac{3}{4}^n \times 20 \text{ UN.F.})$	
23.	37-2005	Fork end, brake rod	,
24.	14-0401	Locknut, fork end to rod ($\frac{1}{4}$ " UN.F.)	
25.	42-5836	Pivot pin, rod to lever	. 3 .
26.	14-0403	Nut, lever to cam spindle $(\frac{3}{8}$ UN.F.)	
27.	37-2027	Washer, lever to cam spindle	
28.	37-3450	Brake rod assembly	
29.	37-3454	Front brake lever (rear)	•
30.	37-2026	Pivot pad, brake shoe	
31.	19-7736	Brake lining	. 2
32.	42-5840	Rivet, brake lining	16 .
33.	37-2136	Spoke nipple	40
34.	37-1197	Balance weight (3")	. as read.
34.	37-1198	Balance weight (1")	. as regd.
35.	37-2134	Spoke, right-hand inner	. 10
36.	37-2135	Spoke, right-hand outer	. 10
37.	37–1373	Wheel rim (WM2–18)	
38.	37-2133	Spoke (left-hand)	20
39.	42-5820	Dust cover (left-hand)	
40.	57-0280	Dust cover circlip (left-hand)	
, 70.	37–3455	Brake plate assembly with brake details	
	37-3463	Wheel complete with spindle and bearings	
	31-3403	CLOCCIO	



Plate 11

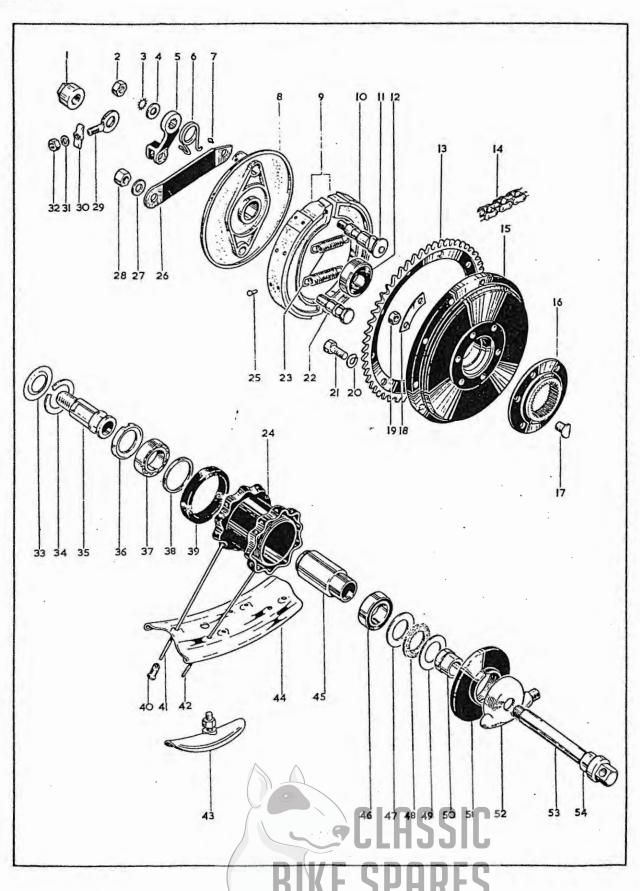


-

REAR WHEEL

Plate Ref.	Spares Number	Description .	Per Set
1.	68-6066	Nut, fixed spindle	
2.	02-0440	Nut, brake lever to cam spindle $(\frac{7}{16}$ B.S.C.)	
3.	66-4708	Lockwasher, brake lever to cam spindle	
4.	15-0431	Washer, brake lever to cam spindle $(\frac{7}{16}" \times \frac{1}{4}" \times \frac{1}{16}")$	
5.	42-6045	Brake lever	
7.	28-2080	Grease nipple, cam spindle	
8.	41-6093	Brake anchor plate	
9.	65-5940	Rear brake shoe complete	2
10.	19-7717	Brake lining	2
11.	37-2226	Brake cam spindle	
12.	65-5883	Brake drum bearing (Hoffman LS.9)	
13.	41-6091	Rear chainwheel (49 teeth)	
14.	19-8687	Rear chain (100 pitch)	
15.	41-6090	Rear Brake drum	
16.	42-6019	Driving flange	
17.	67-6038*	Bolt, hub to drum (3" B.S.C.)	6
18.	68-6135	Lockplate, for nut line 19	3
19.	02-0452	Nut, hub to drum (3" B.S.C.)	6
20.	24-8784	Spring washer, chainwheel to drum	10
21.	68-6095*	Bolt, chainwheel to drum $\left(\frac{5}{16}$ UN.F. $\times \frac{13}{32}$)	10
22.	68-6133	Fulcrum pin, brake shoe	
23.	65-5904	Return spring, brake shoe	2
24.	41-6022	Rear hub with spindle and bearings	
25.	35-6436	Rivet, brake lining	14
26.	41-6094	Brake anchor strap	
26.	68-6134	Brake lever return spring	
27.	65-5111	Washer, fulcrum pin	
28.	24-7000	Nut, fulcrum pin (½" B.S.C.)	



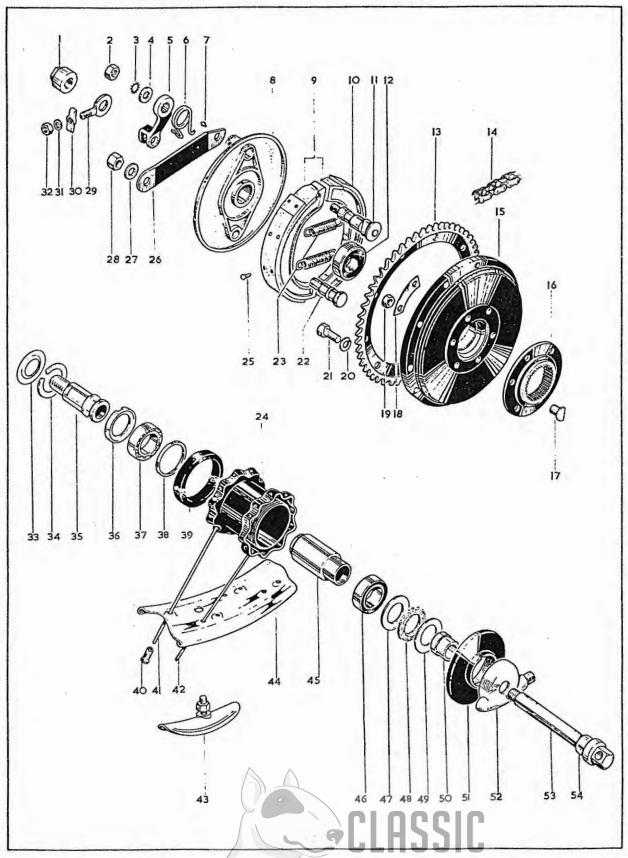

C


BIKE SPARES

Plate 11-continued

REAR WHEEL

Plate Ref.	Spares Number	Description	Per Set
			•
29.	40-6033	Rear wheel adjuster	2
30.	406040	Adjuster cap	2
31.	02-0923	Washer, wheel adjuster $(\frac{5}{10}" \times \frac{5}{8}" \times \frac{1}{10}")$	2
32.	42-4476	Nut, wheel adjuster (5 B.S.C.)	2
33.	67-6033	Shim, brake drum bearing	
34.	67-6034	Retainer, brake drum bearing	.`
35.	41-6032	Fixed spindle	:
36.	68-6081	Retainer, left-hand hub bearing	
37.	41-6016	Hub bearing (Hoffman LS.9RS)	
38.	65-5884	Thrust washer, left-hand bearing	
39.	67-6051	Rubber seal ring	
40.	27-6810	Spoke nipple	40
41.	42-6011	Spoke (left-hand)	20
42.	42-6012	Spoke (right-hand)	. 20
43.	37-3469	Security bolt	
44.	40-6080	Wheel rim (WM2-18)	
45.	67-6027	Spindle sleeve	
46.	41-6016	Hub bearing (Hoffman LS.9RS)	•
47.	65-5887	Retaining ring, felt washer	
48.	655886	Felt washer	
49.	41-6021	Outer retaining ring, felt washer	
50.	41-6019	Spacer, inner right-hand	
51.	68-6142	Hub end cover	
. 52.	19-9212	Speedometer gearbox-2 to 1 ratio (BG.5330/31)	
53.	41-6098	Hub spindle	
54.	41-6082	Spacer, outer right-hand	
	40–6078	Rear wheel with spindle and bearings	
		*Special material: 17.—EN14B. 21.—EN14B.	



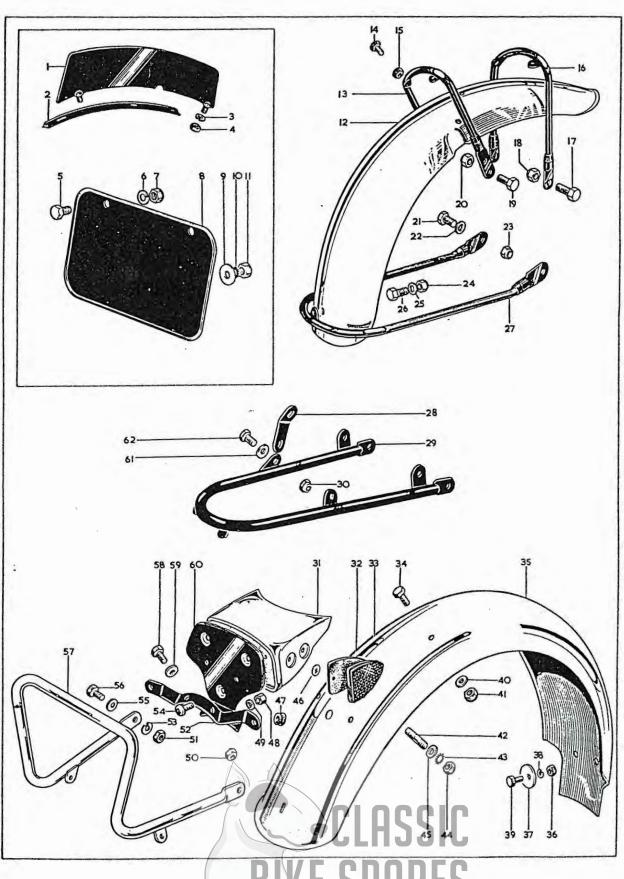

BIKE SPARES


P :

MUDGUARDS

Plate Ref.	Spares Number							
1.	90–6576	Front number plate						
2.	42-6558	Beading, front number plate						
3.	82-9020	Spring washer, front number plate $(\frac{1}{4}" \times \frac{19}{22}" \times .040")$	2					
4.	02-2395	Nut, front number plate (‡" B.S.C.)	2					
5.	14-0604	Bolt, rear number plate ($\frac{1}{4}$ " B.S.C. $\times \frac{7}{16}$ ")	2					
6.	82-9020	Spring washer, rear number plate ($\frac{1}{4}$ " $\times \frac{19}{2}$ " $\times \cdot 040$ ")	2					
7.	14-0301	Nut, rear number plate (‡" B.S.C.)	2					
8.	83-1559	Rear number plate						
9.	27-8560	Washer, rear number plate $(\frac{1}{4}'' \times \frac{5}{8}'' \times .048'')$						
10.	29-0541	Lockwasher, rear number plate						
11.	14-0301	Nut, rear number plate (‡" U.N.F.)						
12.	90-6579	Front mudguard						
12.	90-6580	Front mudguard (U.S.A.)						
13.	82-8393	Centre stay, front mudguard						
14.	02-0204	Bolt, stay to mudguard (4" B.s.c. × 1")	4					
15.	42-3249	Nut, stay to mudguard (4" B.S.C.)	4					
16.	82-8392	Front stay, front mudguard						
17.	15-0518	Bolt, stays to bracket $(\frac{5}{16}"$ B.S.C. $\times 1\frac{1}{32}")$	2					
18.	75-6594	Nut, stays to bracket (5 B.S.C.)	2					
19.	27-6037	Bolt, stays to bracket $\binom{5}{16}$ B.S.C. $\times \frac{7}{8}$	2					
20.	75-6594	Nut, stays to bracket (5" B.S.C.)	2					
21.	14-0114	Bolt, stay to fork end (16" UN.F. × 3")	2					
22.	54-0055	Washer, stay to fork end	2					
23.	14-0702	Nut, stay to fork end (16" UN.F.)	2					
24.	75-6594	Nut, stay to mudguard (5 B.S.C.)						
25.	02-0923	Washer, stay to mudguard $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$	·.					
26.	67-8313	Bolt, stay to mudguard $(\frac{1}{16}$ " B.S.C. $\times \frac{1}{2}$ ")						
27.	97-3685	Bottom stay, front mudguard						
28.	68-6802	Bracket, support rail	2					
29.	41-6782	Support rail	• •					
30.	75-6594	Nut, rail to frame $(\frac{5}{16}"$ B.S.C.)	72					
31.	83-0270	Tail lamp support						
32.	82-8140	Rubber pad, reflector	2					



Plate 12-continued

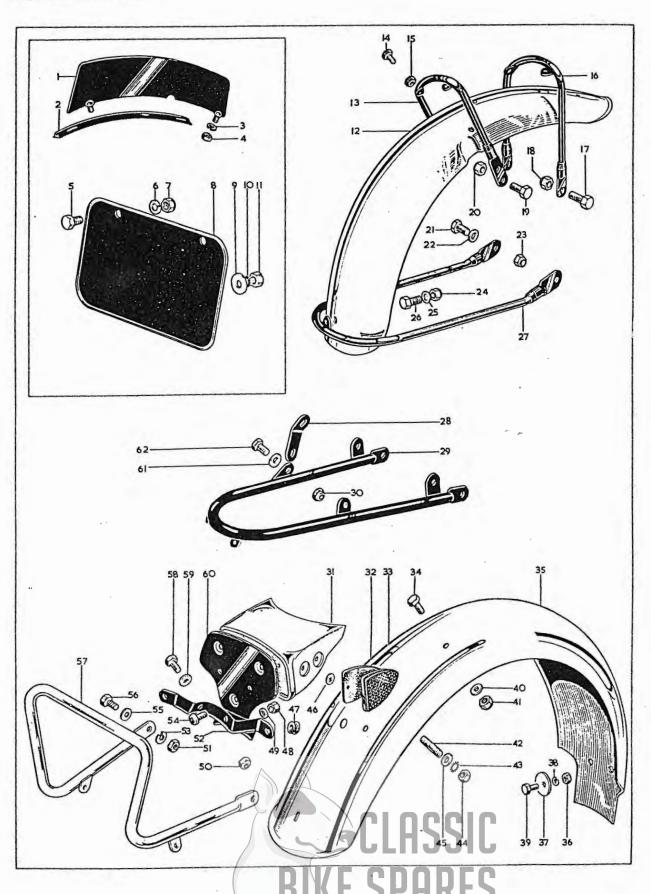


CA

Plate 12-continued

MUDGUARDS

Plate Ref.	Spares Number	Description				Per Set
33.	19-0943	Rear side reflector—red (Lucas 57111)		٠.		2
34.	28-2338	Bolt, rear guard to top rail (16" B.S.C. × 33")				2
35.	82-9988	Rear mudguard		• •		
35.	82-9989	Rear mudguard (U.S.A.)	. ,.			,
36.	02-2395	Nut, rear guard to frame (4" B.S.C.)				2
37.	40-6790	Washer, rear guard to frame		• • .		2
38.	82-9020	Spring washer, rear guard to frame (\frac{1}" \times \frac{132"}{32" \times \cdot 040")			2
39.	02-0204	Bolt, rear guard to frame ($\frac{1}{4}$ " B.S.C. $\times \frac{1}{2}$ ")				2
40.	02-0923	Washer, rear guard to top rail $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$				2
41.	42-4476	Nut, rear guard to top rail (16" B.S.C.)				2
42.	70-2980*	Stud, tail lamp support (4" B.S.C./W.F. × 15")		••		
43.	54-9081	Lockwasher, tail lamp support				
44.	42-3249	Nut, tail lamp support stud (4" B.S.C.)				
45.	57-3638	Spacer, tail lamp support				
46.	82-8195	"Push-fix" rear reflector		••		4
47.	67-6839	Wiring grommet		• •		2
48.	21-5161	Nut, for screw line 54 (2 B.A.)				
49.	54-0170	Washer, for screw line 54				
50.	40-0414	Nut, number plate bracket (‡" B.S.C.)			• •	2
51.	02-0049	Nut, handrail to support rail (5 B.S.C.)				2
52.	68-6834	Number plate bracket				
53.	24-8784	Spring washer, handrail to support rail (16" × 18" × 1	040")			2
54.	54-9012	Screw, tail lamp to support rail (2 B.A. $\times \frac{13}{32}$ ")				3
55.	02-0923	Washer, handrail to support rail $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$		••		2
56.	27-6742	Bolt, handrail to support rail (音" B.S.C. × 器")				2
57.	41-9152	Handrail				
58.	02-0204	Bolt, number plate bracket (1" B.S.C. × 1")				2
59.	27-8560	Washer, number plate bracket (4" × 4" × .048")				2
60.	68-6835	Tail lamp support plate			• •	
61.	02-0923	Washer, rail to frame $(\frac{5}{16}" \times \frac{5}{8}" \times \frac{1}{16}")$				2
62.	28-2338	Bolt, rail to frame $(\frac{3}{16}$ B.S.C. $\times \frac{23}{32}$)				2
		*Special material: 42.—EN8.				



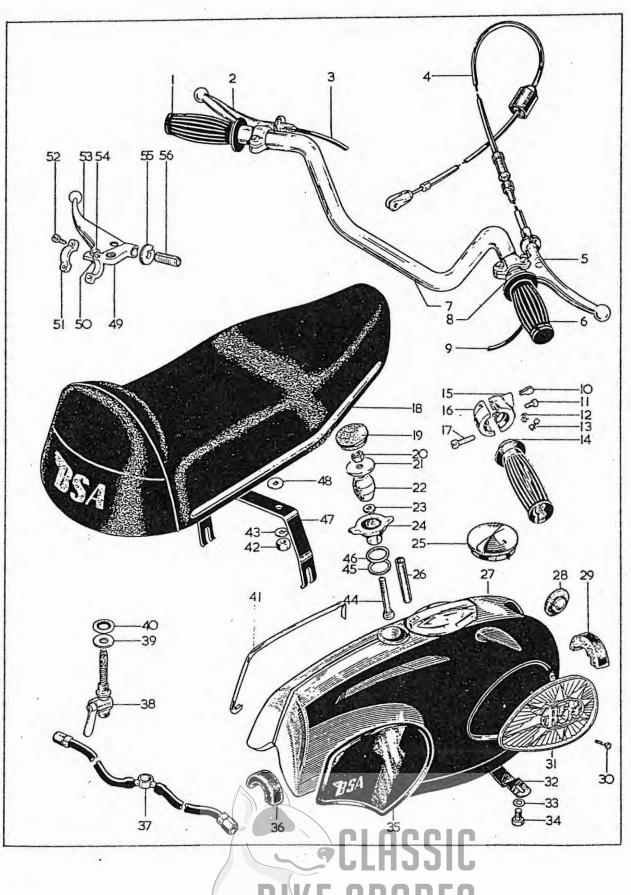


P

PETROL TANK, TWINSEAT AND CONTROLS

Plate Ref.	Spar	es Number	Description		Per Set
	B.S.A. NO.	MAKERS NO.			
1.	19-7221		Rubber grip, lest-hand		
2.	60-2442	19/952M	Clutch control complete		
3.	60-2082		Clutch cable (standard)		
3.	60-2083		Clutch cable (U.S.A.)		
4.	60-2053		Front brake cable (standard)		
4.	60-2034		Front brake cable (U.S.A.)		
5.	60-2443	19/1098M	Front brake control complete		
6.	19-7222		Rubber grip, right-hand	٠	
7.	68-4968		Handlebar (standard)		
7.	40-4960		Handlebar (U.S.A.)		
8.	19-7223	16/364	Throttle control complete		
9.	40-8657		Throttle control cable		
10.		16/011	Cable stop		
11.		16/009	Friction spring screw		
12.		16/010	Friction spring nut ;		
13.		16/008	Friction spring		
14.		16/091	Rotor, throttle control		
15.	201	16/329	Body, bottom half		
16.		16/328	Body, top half		
17.		11/013	Clamp screw	٠	2
18.	82-9732		Twinseat complete		
19.	42-8010		Grommet, petrol tank		
20.	68-8014		Nut, tank mounting (5" B.S.C.) standard		
20.	02-0049		Nut, tank mounting (5 B.S.C.) U.S.A		
21.	68-8016		Washer, tank mounting (standard)	٠.	
21.	. 82-9008		Washer, tank mounting (U.S.A.)		
22.	42-8017		Mounting rubber, petrol tank		
23.	76-0012		Washer, tank mounting (standard)		
23.	02-0923		Washer, tank mounting (U.S.A.)		
24.	82-9782		Beading holder, petrol tank (standard)		
25.	75-8009		Filler cap, petrol tank (U.S.A.)		
26.	41-4043		Spacer, tank mounting (U.S.A.)		
26.	41-8011		Spacer, tank mounting (standard)		
27.	82-9729		Petrol tank (standard)		
27.	82-9801		Petrol tank (U.S.A.)		
28.	82-9730		Anti-roll rubber (standard)		2
28.	42-8052		Anti-roll rubber (U.S.A.)		2



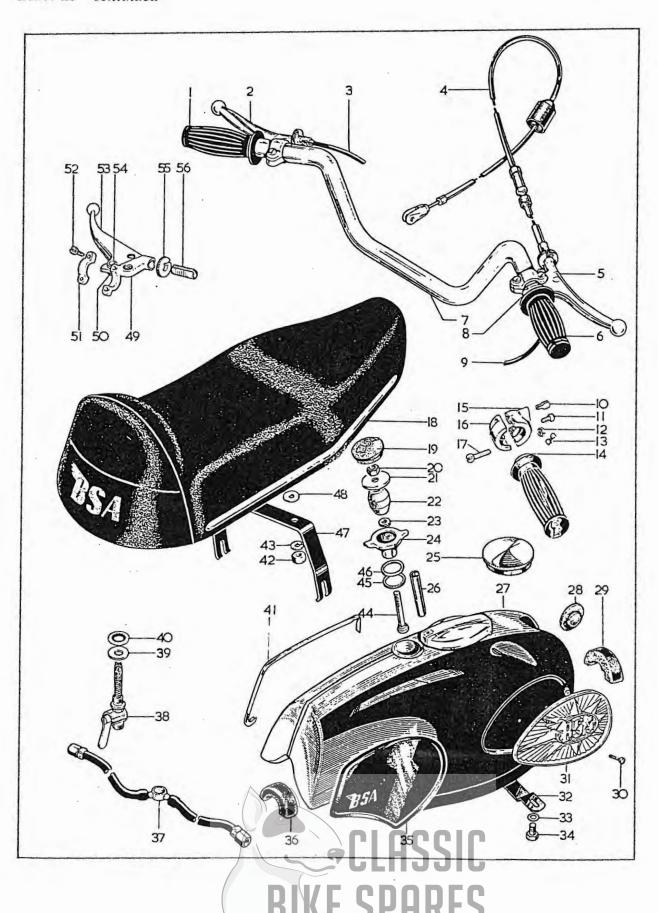


.

Plate 13—continued PETROL TANK, TWINSEAT AND CONTROLS

Plate Ref.	Spa	res Number	Description	Per Set
	B.S.A. NO.	MAKERS NO.		
29.	82-9747		Mounting rubber, front and rear (standard)	2
29.	40-8121		Mounting rubber, front (U.S.A.)	
30.	82-8250		Badge screw (1 × 40 w.f. × 1)	4
31.	82-9696		Tank badge, right-hand (standard)	
31.	82-9695		Tank badge, left-hand (standard)	
32.	82-9746		Strap assembly (standard)	
32.	41-9071		Strap assembly (U.S.A.)	
33.	02-0923		Washer, strap to tank	2
34.	14-0113		Bolt, strap to tank 16" UN.F. X 1" (standard)	2
34.	75-6594		Nut, strap to tank 16 B.S.C. (U.S.A.)	
35.	82-9723		Knee grip, right-hand (standard)	
35.	82-9722		Knee grip, left-hand (standard)	
36.	68-8018		Mounting rubber-rear (U.S.A.)	
37.	82-9787		Petrol pipe assembly	
38.	82-4971		Petrol tap-short, left-hand	
38.	82-4972		Petrol tap-long, right-hand	
39.	83-0002		Petrol tap washer	2
40.	70-7351		"Stato" seal, petrol tap	2
41.	82-9721		Trim strip-rear (standard)	
42.	02-0051		Nut, twinseat bracket (1" B.S.C.)	2
43.	82-9020		Spring washer, twinseat bracket	2
44.	82-9784		Bolt, tank mounting $\frac{5}{16}$ B.S.C. \times $3\frac{3}{8}$ (standard)	
44.	68-8045		Bolt, tank mounting $\frac{3}{16}$ B.S.C. $\times 2\frac{3}{8}$ (U.S.A.)	
45.	68-8013		"O"-ring tank mounting (standard)	
46.	68-8019		Mounting ring (standard)	
47.	41-9131		Twinseat bracket	
48.	27-8560		Washer, twinseat bracket	2
49.		19/002	Clutch control bracket	
49.		19/003	Brake control bracket	
50.		18/053	Fulcrum pin nut, clutch and brake controls	2
51.		12/595	Clamp, clutch and brake controls	. 2
52.		11/014	Clamp screw, clutch and brake controls	4
53.		18/752	Clutch lever only	
53.		18/754	Brake lever only	
54.		18/087	Fulcrum pin, clutch and brake controls	2
55.	60-2072	18/1709	Adjuster nut, clutch and brake controls	2
56.	60-2071	18/1708	Adjuster, clutch and brake controls	2



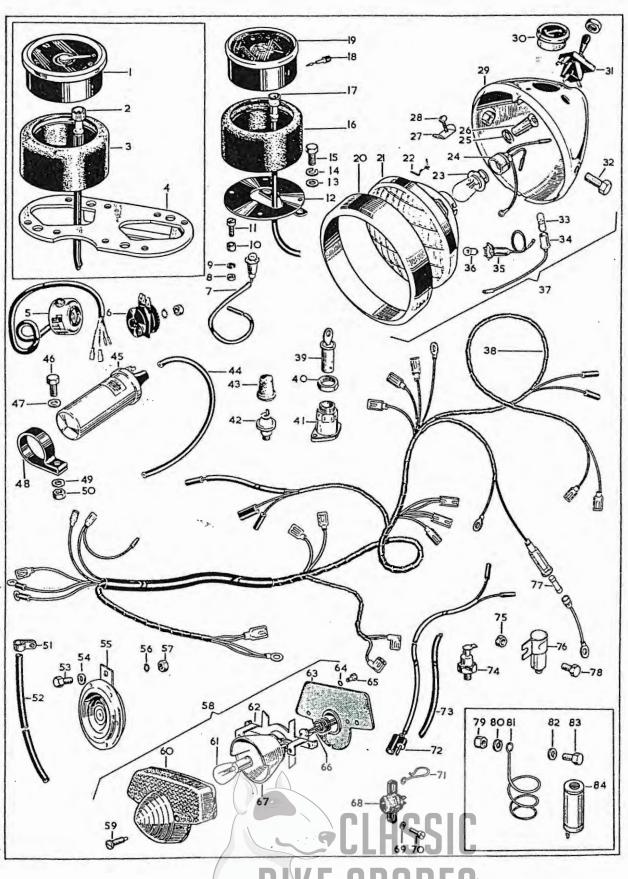


BIKE SPARES

Plate 14

ELECTRICAL EQUIPMENT

Plate Ref.	Spai	res Number	D	escriptio	on				Per Set
	B.S.A. NO.	MAKERS NO.							
1.	19-8953	RSM.3003/13	Tachometer head						
2.	19-9094		Tachometer cable						
3.	83-0281		Mounting cup, tachometer he	ad					
4.	97-3689		Mounting plate, tachometer a	and spee	dome	ter			
5.	19-0214	Wico 16714		_					
6.	19-1715	49072	Rectifier						
7.	19-1166	54953389	Speedometer light lead						
8.	02-0047		Nut, speedometer and tachon	neter (3	- B.S.				4 or 2
9.	24-7068		Spring washer, speedometer a						
1.72			/110.0 01.0 0.00						4 or 2
10.	68-9418		Spacer, speedometer and tach						4 or 2
11.	76-0543		Screw, speedometer and tacho						4 or 2
12.	82-8283		Mounting plate, speedometer						
13.	02-0525		Washer, plate to fork (1" × 1						2
14.	24-0978		Spring washer, plate to fork (2
15.	02-1354		Bolt, plate to fork (4" B.s.c. >						2
16.	83-0281		Mounting cup, speedometer h						
17.	19-9089	DF.9110/00/63							
18.	19-9080	14-148-203-10	0 1 1 1 0						
19.	19-8951	SSM.5007/02							
19.	19-8952	SSM.5007/03							
20.		553248	TT 11 '						
21.	19-0958	516798	** * * * * * * *						
21.	19-0959	54522680	Light unit (France and Europ						
21.	19-1043	553940	Light unit (West Germany and						
22.		504665	**** ** * ** * *	• •					6
23.		446	Main Lully (standard)						
23.		410	** * * * ** **						
23.		411	16: 1 11 /12						
23.	19-1044	370	Main bulb (West Germany an						
24.		554602	Main bulb holder						
24.		553738	Adaptor, main bulb (France a	nd Euro	one)		• •		
25.		54140331			· Pc)		.,		
26.	19-0965	38189	Warning light (red)				• •	• •	



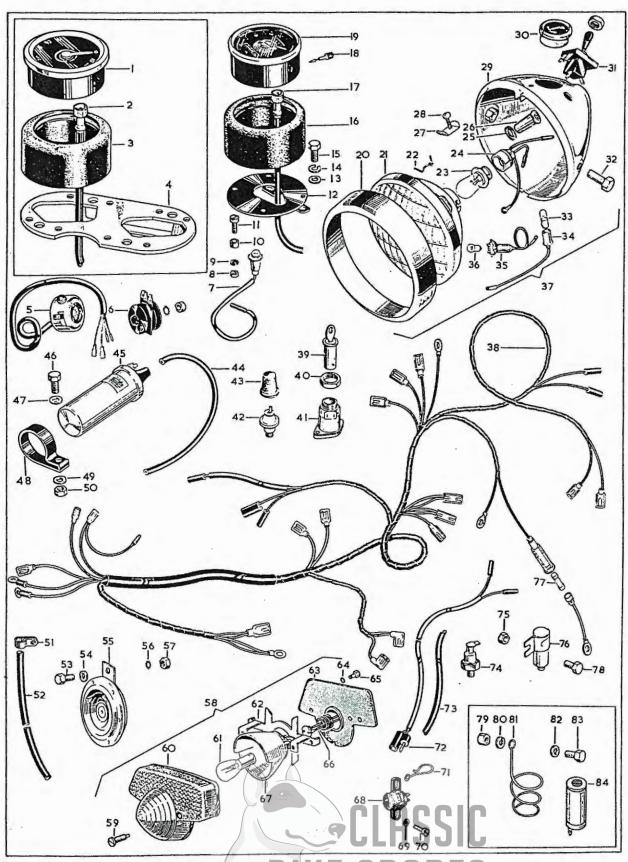


BIKE SPARES

Plate 14—continued

ELECTRICAL EQUIPMENT

Plate Ref.	Spar	es Number	Description			Per Set
	B.S.A. NO.	MAKERS NO.			:	
26.	19-0982	38191	Warning light (green)			
27.		534296	Plate, headlamp rim			
28.		144921	Screw, headlamp rim			
29.		54523999	Lamp body			
30.	19-0963	36403	Ammeter			
31.	19-0964	35710	Light switch			
32.		112201	Bolt, headlamp mounting			2
33.		281	Bulb, warning light			
34.		54945043	Bulb holder, warning light			
35.		54573590	Bulb holder, pilot light			
36.		989	Pilot bulb			
37.	19-1173	59883	Headlamp complete (standard)			
37.	19-1184†	59885	Headlamp complete (Europe)			
37.	19-1186	59885	Headlamp complete (France)-with 411 main	bulb		
38.	19-1316	54957239	Wiring harness			
39.	68-9304	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Lock and key for ignition switch			
40.	19-1247	54130041	Nut, ignition switch			
41.	19-1775	31899	Ignition switch			
42.	19-6508	PS.5300/1/07	Oil pressure switch			
43.	60-2045		Oil pressure switch cover			
44.	19-1885	54956469	High-tension lead (standard)			
44.	19-1886	54956427	High tension lead (U.S.A.)			
45.	19-1881	45221	Ignition coil			
46.	14-0204	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Bolt, coil clip $(\frac{1}{4}"$ B.S.C. $\times 1\frac{1}{32}")$			
47.	27-8560		Washer, coil clip (1" × 1" × .048")			
48.	83–1603		Coil clip			
49.	66-9262		Spacer, coil clip			
50.	14-0801		Nut, coil clip (‡" B.S.C.)			
51.	66-8340		Clip, battery vent pipe			
52.	68-9163		Battery vent pipe			
53.	75-4813*		Bolt, horn to bracket (\frac{1}{6}" B.S.C. \times \frac{1}{16}")			
54.	02-2138		Washer, horn to bracket $(\frac{3}{8}^n \times \frac{3}{4}^n \times \frac{1}{16}^n)$			
55.	19-2064		Horn (Clearhooter)			
56.	66-4707		Lockwasher, horn to bracket			
50.	00 -1101					



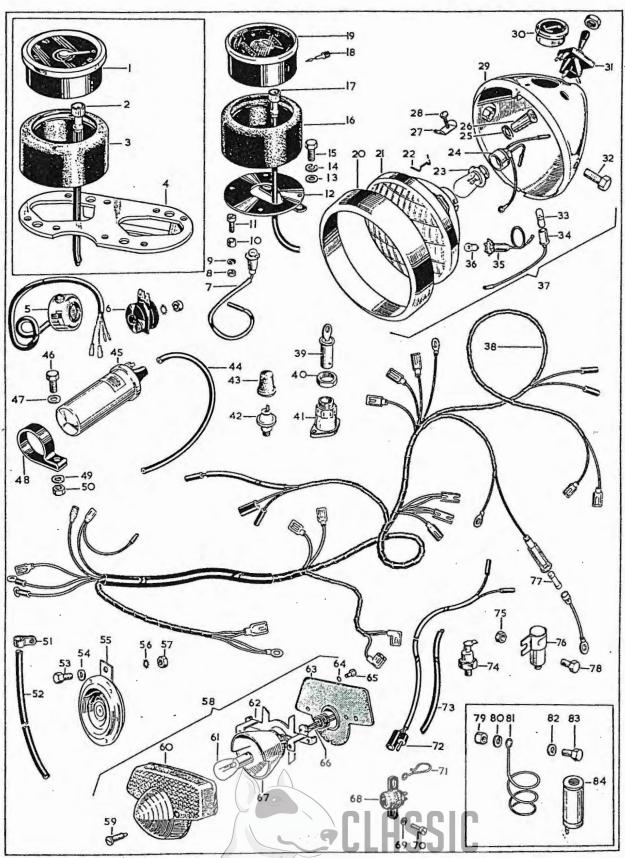

BIKE SPARES

Ph.

ELECTRICAL EQUIPMENT

Plate Ref.	Spar	es Number	Description	Se Se
	B.S.A. NO.	MAKERS NO.		
57.	42-4475		Nut, horn to bracket (3" B.S.C.)	
58.	19-1245	53973	Stop/tail lamp complete	
59.		144921	Screw, lens fixing	
60.		54577109	Lens, tail lamp	:
61.		380	Bulb, tail lamp	
62.		54578212	Base, tail lamp	
63.		54571677	Gasket, tail lamp	
64.		188330	Lockwasher, tail lamp	
65.		110714	Screw, tail lamp	
66.		573828	Interior bulb holder, tail lamp	
67.		54578213	Bulb holder assembly	
68.	19-0916	34815	Stop switch, tail lamp	
69.	02-1096		Washer for switch screw $(\frac{3}{16}^{\circ} \times \frac{3}{8}^{\circ} \times .044^{\circ})$:
70.	42-4574		Screw, stop lamp switch $(\frac{3}{16}" B.S.C. \times \frac{1}{2}")$:
71.	47-9030		Cable clip, stop switch leads	
72.	82-8314	54953386	Tail lamp lead	
73.	82-8307		Tail lamp lead tube	• •
74.	19-1735	49345	Zener diode	• •
75.	40-0414		Nut, condenser mounting	
76.	19-1747	54441582	Condenser, contact breaker	• •
77.	19-1249	188218	Fuse (12 volt, 35 amp.)	
78.	020204		Bolt, condenser mounting	.:
79.	02-2395		Nut, capacitor mounting (4" B.S.C.)	
80.	82-9020		Spring washer, capacitor mounting $(\frac{1}{4}" \times \frac{19}{32}" \times .040")$	• •
81.	82-8320	54483156	Spring, capacitor mounting	
82.	02-0525		Washer, capacitor mounting $(\frac{1}{4}" \times \frac{1}{2}" \times .048")$	
83.	02-1354		Bolt, capacitor mounting (4" B.s.c. × 11")	
84.	82-8319	54170009	Capacitor	
	19-1776	54027029	Battery	
	00-5195		Tachometer kit	• •
	00-4403		Capacitor kit	

*Special material: 53.—EN8R. †Except West Germany and Italy

Note:--Where no B.S.A. part number is quoted, the part is only available from the makers.



Plate 15


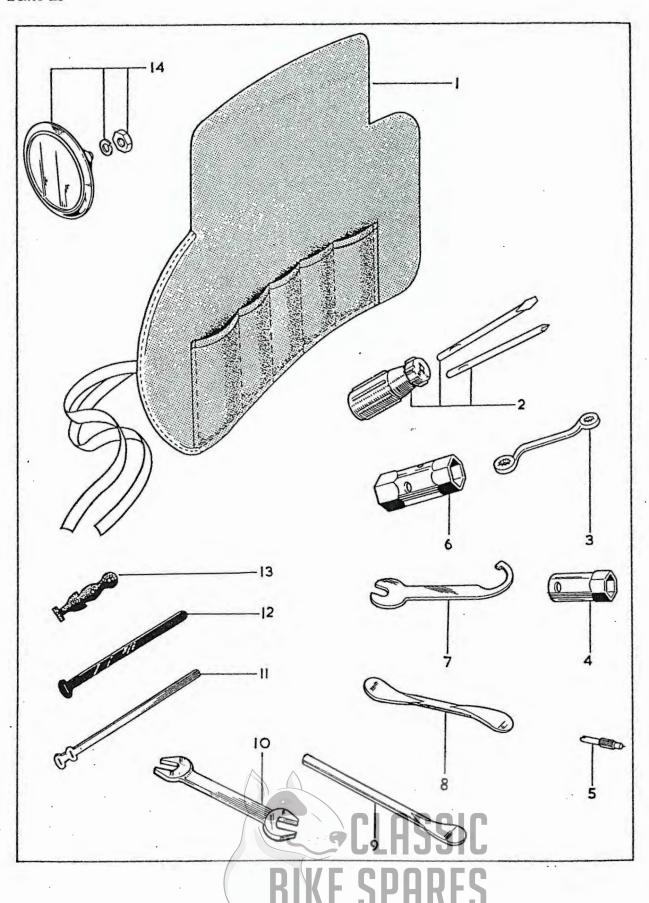


Plate 15

TOOLS

Plate Ref.	Spares Number				D	escripti	on	**		Per Set	
1.	68–9461	Tool roll							 		•
2.	60-0767	Screwdriver set							 	 4	
3.	67-9026	Ring Spanner							 		
4.	68-9464	Plug spanner					• •		 		
5.	68-9467	Tyre valve key							 		
6.	40-9017	Box Spanner							 		
7.	60-2184	Damper unit "C"	span	ner					 		
8.	29-9252	Tyre lever							 		
9.	60-0801	Tyre lever/tommy	bar						 		
10.	60-2084	Double open-ende	d spa	nner					 		
11.	76-9136	Cable clip (alloy)							 	 5	
12.	75-9045	Cable clip (alloy)							 	 3	
13.	90-9024	Cable clip (short)				٠			 	 2	
14.	19-5390	Licence holder							 		
r-	60–2113	Toolkit complete	• •	••	••		• •	• •	 		



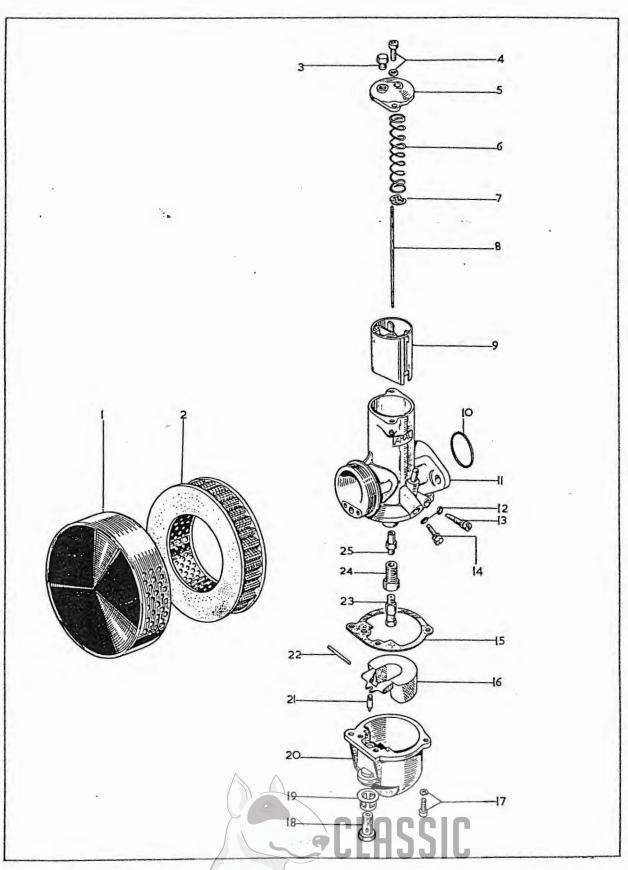

BIKE SPARES

Plate 16

CARBURETTER

Plate Ref.	Spares	Number	Description	Per Set
	B.S.A. NO.	AMAL NO.		
1.	60-1053		Air cleaner complete (two layer)	
2.	19-7115		Air cleaner element (two-layer)	
3.		4/137A	Plug screw for top cap	
4.	19-3093	622/086	Screw and washer for top cap	. 2
5.		928/097	Top cap, mixing chamber	
6.	19-3094	622/061	Spring, throttle valve	
7.	193095	622/067	Clip, throttle needle	
8.		622/124	Throttle needle	
9.	19-3108	928/060	Throttle valve (3)	
10.	19-3090	622/101	"O" ring, carburetter flange	
11.		R.928	Carburetter body	
12.	19-3098	622/082	"O" ring, pilot air and throttle stop screws	2
13.		622/076	Pilot air screw	
14.		622/077	Throttle stop screw	
15.	19-3106	622/073	Gasket, float chamber	
16.	19-3102	622/069	Float	
17.	19-3093	622/086	Screw and washer for float chamber	. 2
18.	19-3103	622/078	Banjo bolt, petrol pipe to carburetter	
19.	19-3048	376/093	Filter, petrol pipe	
20.		622/050	Float chamber	
21.	19-3105	622/068	Float needle	
22.		622/071	Float spindle	
23.	19-2877	376/100	Main jet (170 c.c.)	
24.		622/128	Jet holder	
25.		622/122	Needle jet (·106)	
	19-2419	R.928/4	Carburetter complete	

Note:-Where no B.S.A. part number is quoted, the part is only available from the makers.



NUMERICAL INDEX

Number	PAGE PLATE	Code	NUMBER	PAGE	PLATE	CODE	Number	PAGE	PLATE	CODE
00-3168	5		03-0111	37 .	. 8	27	18-0053	55 .	. 13 .	. 50
00-3310	5		03-1346	27 .	. 5	16	18-0087		. 13 .	. 54
00-4403	5		04 0127		16	-	18-0752	55 .		. 53
00-4403 00-5195	61 —		04-0137 04-2276	65 .	. 16	3 18	18-0754 18-1708	55 .	. 13 .	. 53 . 56
00-5195	:: 61 :: -	–					18-1709	55 .	. 13 .	. 55
02-0046	27 5	29	11-0013 11-0014	53 .	. 13	17 52	19-0002	55 .	. 13 .	. 49
02-0046	35 7	30					19-0003	55 .	. 13 .	. 49
02-0046	37 8	2	12-0595	55 .	. 13	51	19-0214		. 14 .	
02-0047 02-0049	57 14	8	14-0113	55 .	. 13	34	19-0916 19-0943	61 .	12	22
02-0049	53 13	20	14-0113	31 .	-	13	19-0952	53 .	. 13 .	•
02-0049	29 5	36	14-0114	49 .	. 12	21	19-0958	57 .		. 21
02-0049	41 9	60	14-0115	33 .		25	19-0959	57 .	. 14 .	
02-0051 02-0130	55 13	42	14-0116 14-0204	37 .	* *	17 46	19-0963 19-0964	59 .	. 14 .	. 30
02-0130	49 12	14	14-0208	21 .	3	50	19-0965	57 .	. 14 .	26
02-0204	51 12	39	14-0218	39 .		-11	19-0982	59 .	1.4	. 26
02-0204	51 12	58	14-0219	33 .		19	19-1035	29 .		. 42
02-0204	61 14	78	14-0219 14-0301	33 .	12	21	19-1043	57 .		
02-0204 02-0220	35 7	34	14-0301	40	12	11	19-1044 19-1098	57 .	12	. 23
02-0220	31 6	10	14-0302	17 .	2	66	19-1166	57 .	11	7
02-0440	45 11	2	14-0302	17 .	. 2	80	19-1173	59 .	. 14 .	. 37
02-0449	31 6	3	14-0302	17 .	~	92	19-1184	59 .		
02-0452 02-0522	45 11	19	14-0302 14-0303	33 .	-	28	19-1186 19-1245	59 .	. 14 .	. 37 . 58
02-0522	37 8	28	14-0303	37 .		14	19-1247	59 .	1.4	40
02-0525	57 14	13	14-0303	41 .	•	45	19-1249	61 .	14	. 77
02-0525	17 2	71	14-0401	43 .		24	19-1262	17 .	. 2 .	
02-0525	61 14	82	14-0403	9 .	. 1	9	19-1316	59 .	. 14 .	-
02-0525 02-0525	9 1	7	14-0403 14-0403	43 .	4.0	20 26	19-1715 19-1735	61 .	. 14 .	. 6
02-0525	15 2	62	14-0604	49 .	10	5	19-1747		. 14 .	76
02-0525	19 3	23	14-0702	49 .		23	19-1775	59 .	. 14 .	41
02-0525	27 5	3	14-0702	37 .	0	16	19-1776	61 .	2	44
02-0525	37 8	29	14-0702 14-0801	37 .	4.4	39 50	19-1849 19-1852	21 .	•	11
02-0923	47 11	31	14-0903	31 .		18	19-1853	21 .	2	42
02-0923	49 12	25	14-1302	33 .	. 7	16	19-1881	59 .	. 14 .	
02-0923	51 12	40	14-1401	15 .		53	19-1885	59 .		. 44
02-0923 02-0923	51 12	55	14-1803 14-1901	27 .	2	27 3	19-1886 19-2064	59 .	1.4	. 44
02-0923	53 12	23	14-1901	15 .	2	45	19-2419	6 .		
02-0923	55 13	53	14-1901	17 .	. 2	64	19-2419	65 .		-
02-0923	9 1	5	14-1901	17 .		70	19-2877		. 16 .	
02-0923	17 2	81	14-1902 14-2205	31 .	7	16 42	19-3048 19-3090	65 .	. 16 .	. 19
02-0923 02-0923	17 2	91	14-2206	35 .	7	39	19-3093	65 .		4
02-0923	41 9	47	14-6102	17 .	. 2	101	19-3093	65 .	. 16 .	. 17
02-1027	37 8	34	14-6606	19 .	. 3	19	19-3094		. 16 .	~
02-1096	67 14	69	14-6606 14-6608	21 .	2	73 98	19-3095 19-3098		. 16 .	10
02-1354 02-1354	57 14	83	14-6610	19 .	•	17	19-3102		. 16 .	11
02-1354	27 5	8	14-6610	19 .	. 3	24	19-3103	65 .	. 16 .	. 18
02-1733	31 6	2	14-6610	21 .	. 3	72	19-3105	65 .	. 16 .	
02-1925	37 8	36	14-6610	25 .		2	19-3106	65 .	11	. 15
02-1967 02-2138	37 8	37	14-6611 14-6611	26	. 3	62 7	19-3108 19-5390	65 .	1.	1.4
02-2138	59 14	10	14-6612	21 .	2	63	19-6508	70	. 14 .	40
02-2138	27 5	26	14-6614	21 .	•	64	19-7115	65 .	. 16 .	. 2
02-2138	27 5	30	15 0000	07			19-7221		. 13 .	. 1
02-2138	29 5	38	15-0039 15-0431	27 .		15	19-7222 19-7223		. 13 .	0
02-2138 02-2138		40	15-0518	49 .	4.0	17	19-7441	21	. 6 .	
02-2138	31 6	15	15-5155 15-7563	A 41 .	. 9	35	19-7452	31 .	. 6 .	. 5
02-2138	41 9	44	15-7563	27 .		9	19-7606	9 .	. 1 .	. 2
02-2395	49 12	4	16 0000	42	12	12	19-7625	9 .	. 1 .	10
02-2395 02-2395	51 12	36	16-0008 16-0009	53	4.0	4 4	19-7717 19-7736	42	. 11 .	~ .
02-2395	25 4	17	16-0010	53		111	19-8019	10	. 10 .	. 98
02-2395	35 7	31	16-0011	53		10	19-8613	25 .	. 4 .	. 27
02-2578	21 3	58	16-0091	53 .		14	19-8687	45 .	. 11 .	
02-2579	21 3	60	16-0328 16-0329	53 53 53	. 13 13	16 15	19-8951 19-8952	57 57 .	. 14 .	. 19 . 19
02-2580	21 3	39								

NUMBER	PAGE PLATE CODE	NUMBER PAGE PLATE CODE	NUMBER PAGE PLATE CODE
19-9080 19-9089 19-9094 19-9212	57 14 18 57 14 17 57 14 2 47 11 52	35-6436 45 11 25 36-0382 17 2 67 36-0382 29 5 35 36-0382 41 9 49	40-0865 17 2 84 40-0892 11 1 43 40-0907 11 1 49 40-0913 11 1 51 40-0915 9 1 36
21-0771 21-0785 21-1822 21-1857 21-1889 21-1890 21-1891 21-1892 21-1893 21-1894 21-1895 21-1898 21-1908 21-1943 21-1943 21-1943 21-1943 21-1943 21-1943 21-1943 21-1943 21-1998 21-1998 21-1998 21-1998 21-1998 21-1998 21-1998	35 . 7 . 44 . 41 . 9 . 55 . 39 . 9 . 27 . 17 . 2 . 63 . 13 . 2 . 20 . 17 . 2 . 90 . 17 . 2 . 65 . 17 . 2 . 65 . 17 . 2 . 87 . 15 . 2 . 44 . 17 . 2 . 95 . 13 . 2 . 6 . 17 . 2 . 95 . 13 . 2 . 6 . 17 . 2 . 95 . 13 . 2 . 6 . 17 . 2 . 95 . 13 . 2 . 6 . 17 . 2 . 94 . 19 . 3 . 25 . 33 . 7 . 24 . 27 . 5 . 25 . 25 . 4 . 20 . 25 . 4 . 9 . 17 . 2 . 73 . 43 . 10 . 15 . 25 . 4 . 24 . 51 . 12 . 48	37-1197 43 10 34 37-1198 43 10 34 37-1373 43 10 37 37-1481 43 10 2 37-1798 15 2 34 37-2001 43 10 9 37-2026 43 10 12 37-2026 43 10 12 37-2027 43 10 19 37-2027 43 10 19 37-2130 43 10 13 37-2133 43 10 38 37-2134 43 10 35 37-2136 43 10 36 37-2226 45 11 11 37-3443 43 10 3 37-3444 43 10 3 37-3444 43 10 3 37-3450 43 10 10 37-3453 43 10 28 37-3453 43 10 28	40-0917 11 49 40-0918 11 49 40-0919 11 49 40-0929 11 59 40-0931 11 69 40-0932 9 11 75 40-0933 11 1 75 40-0939 11 1 75 40-0942 11 1 77 40-0942 11 1 77 40-0946 29 5 34 40-0965 9 1 18 40-0966 9 1 72 40-0968 11
24-0036 24-0649 24-0724 24-0732 24-0978 24-5160 24-6040 24-7000 24-7068 24-8784 24-8784 24-8784	. 13 . 2 . 16 . 35 . 7 . 35 . 11 . 1 . 46 . 9 . 1 . 40 . 57 . 14 . 14 . 9 . 1 . 22 . 9 . 1 . 4 . 45 . 11 . 28 . 57 . 14 . 9 . 45 . 11 . 20 . 51 . 12 . 53 . 33 . 7 . 27	37-3454 43 10 29 37-3455 43 — — 37-3463 5 — — 37-3463 43 — — 37-3466 5 — — 37-3466 43 10 4 37-3469 47 11 43 37-3522 43 10 17 37-3582 43 10 5 40-0020 9 1 24 40-0025 13 2 8 40-0028 19 3 15	40-1007 1 69 40-1009 1 68 40-1010 3 2 11 40-1016 15 2 41 40-1018 11 1 66 40-1021 13 2 11 40-1030 11 1 45 40-1031 9 1 41 40-1033 17 2 89 40-1035 17 2 68 40-1037 11 1 54 40-2710 9 1 26 40-2711 9 1 28
27-5135 27-5676 27-6037 27-6742 27-6810 27-8560 27-8560 27-8560 27-8560	41 9 37 37 8 12 49 12 19 51 12 56 47 11 40 49 12 9 51 12 59 55 13 48 59 14 47	40-0064	40-2712 9 1 27 40-2844 35 7 33 40-3007 23 3 93 40-3019 23 3 93 40-3020 23 3 91 40-3032 23 3 100 40-3043 23 3 111 40-3044 23 3 112 40-3044 23 3 109
28-2080 28-2080 28-2338 28-2338	45 11 7 37 8 31 51 12 34 51 12 62	40-0236 21 3 61 40-0241 17 2 77 40-0242 13 2 23 40-0243 17 2 76	40-3045 23 3 110 40-3051 19 3 2 40-3059 19 3 8 40-3061 19 3 5 40-3073 21 3 55
29-0541 29-0541 29-0541 29-2053 29-2054 29-2089 29-3319 29-3857 29-5293 29-5293 29-5293 29-7962 29-7971 29-9252 29-9388	49 12 10 15 2 36 37 8 33 13 2 1 13 2 2 11 1 64 21 3 53 23 3 89 37 8 22 33 7 15 35 7 46 63 15 8 41 9 48	40-0246 17 2 78 40-0325 17 2 93 40-0326 17 2 93 40-0327 17 2 93 40-0375 17 2 72 40-0381 19 3 21 40-0394 13 2 22 40-0414 51 12 50 40-0414 61 14 75 40-0414 27 5 5 40-0414 27 5 5 40-0414 31 6 11 40-0414 31 6 11 40-0455 15 15 2 33 40-0682 21 3 18 47	40-3084 21 3 69 40-3085 21 3 70 40-3119 23 3 93 40-3120 23 3 93 40-3121 19 3 91 40-3127 23 3 91 40-3150 25 4 31 107 40-3155 3 107 40-3193 3 108 40-3194 3 106 40-3201 28 40-3206 36 40-3210 40-3210
30-0196 30-0733 30-0733 30-0733	37 8 28 29 5 51 29 5 53 29 5 61	40-0682 40-0683 40-0705 40-0723 40-0723 40-0862 19 3 47 48 2 5 5 1 3 48 4 45 1 3 1 3 1 45 1 3 1 3 1 45 1 3 1 3 1 3 1 3 1 3 1 3 1 45 1 3 1	40-3220 25 4 12 40-3221 25 4 15 40-3221 25 4 15 40-3230 25 4 16 40-3230 25 4 18

NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE
40-3231 40-3233 40-3234 40-3254 40-3257 40-3258 40-3262 40-3265	23 . 19 . 23 . 23 .	. 4	13 14 97 30 79 80 114	41-3045 41-3054 41-3063 41-3068 41-3070 41-3072 41-3074 41-3078	23 23 23 23 23 23 23 23	. 3	94 84 87 85 85 85	47–5064 47–5065 47–7003 47–7013 47–9012 47–9030 53–3049	41 37 37 27 61	9 9 8 5 14	57 40 35 20 71
40-3271 40-3272 40-3273 40-3275 40-3276 40-3277 40-3282 40-3282 40-3283 40-3291	19 19 19 21 19 21 19 19 21 19 21 21 23 23	. 3	32 31 76 39	41-3089 41-3095 41-3209 41-3210 41-3212 41-4043 41-4105 41-4105 41-4335	19 25 25 25 31 37 37	. 3 4 4 13 6 8	4 35 34 26 26 17 4	54-0042 54-0055 54-0170 54-5504 54-8003 54-9012 54-9081	49 51 39 33 39	. 9 . 12 . 12 . 9 . 7 . 9 . 12	22 49 26 23
40-3292 40-3292 40-3321 40-3323 40-3330 40-4077 40-4081 40-4524 40-4524 40-4524 40-4530 40-4733 40-4735 40-4820 40-4960 40-5018	21 23 19 23 25 27 27 31 29 29 29 29 31 31 31	3 3 3 5 5 6 6 8	78 86 7 105 37 32 31 8 50 58 60 19	41-4363 41-6016 41-6016 41-6019 41-6021 41-6022 41-6032 41-6032 41-6090 41-6091 41-6093 41-6094 41-6094 41-7037	37 47 47 47 47 45	8 11 11 11 11 11 11 11 11 11 11 11 11 11 11 11 12	13 37 46 50 49 24 35 54 15 13 8 26 53 29	57-0280 57-0948 57-2641 57-2641 57-2646 57-2750 57-2759 57-2754 57-3638 57-3763 57-3850 57-3854 57-3872 57-3874 57-3876	17 25 21 21 21 21 21 21 51 19 19 19 23 23 23	. 10 2 3 .	1 65 75 67 41 66 68 45 6
40–5069 40–5090 40–5143 40–5144 40–5145 40–6030 40–6033 40–6040	41 41 41 41 41 41 41 41 41 41 41 47 47 47	. 9 9 9 9 11	33 56 40 42 39 26 29	41-8011 41-9071 41-9131 41-9152 42-3249 42-3249 42-3249	53 55 55 51 51 49 51 33	. 13 . 13 . 13 . 12	26 32 47 57	57-3877 57-3951 57-4016 57-4016 57-4019 57-4070	23 25 5 25 25 21	. 3 . 4 . — . 4 . 3	82 19 — 11 77
40-6078 40-6078 40-6080 40-6790 40-6910 40-8046 40-8121 40-8382 40-8401 40-8435 40-8435 40-8657 40-9017 40-9134 40-9172 40-9188 40-9190	5	 11 12 6 5 7 7 7 7 9 5 5	44 37 1 1 6 29 11 45 7 6 46 4 7 13 82	42-4343 42-4364 42-4475 42-4475 42-4475 42-4476 42-4476 42-4476 42-4476 42-4476 42-4574 42-4574 42-45819 42-5819 42-5819 42-5836 42-5840	27 27 61 29 29 29 47 51 11 29 37 37 43 43 43 43	5 14 5 5 5 11 1	24 23 57 33 39 46 52 32 41 53 56 10 19 70 7	60-0801 60-1053 60-2034 60-2045 60-2053 60-2071 60-2082 60-2083 60-2084 60-2184 60-2376 60-2376 60-2377 60-2378 60-2442 60-2443 60-2683	63 53 53 55 53 35 35 35 35 35 35 35 37 37 37	. 15 16 13 13 13 13 13 15 7 7 7 7 7 7 7 7 8	9 1 4 43 4 56 55 3 10 7 43 48 47 47 48 2 5 30
41-0143 41-0146 41-0560 41-0565 41-0567 41-0603 41-0605 41-0609 41-0624 41-0715 41-0715 41-0804	17 9 15	2 2 2 2 2 2 2 2 2 2 2 2 2 3 3	96 97 37 56 55 32 37 49 47 57 47 51 13	42-5841 42-6011 42-6012 42-6049 42-6335 42-6534 42-6558 42-8010 42-8017 42-8052 47-3214 47-4214	43 47 47 45 45 43 21	. 10 . 11 . 11	11 41 42 16 5 8 57 2 19 22 28	60-2683 60-2722 60-2724 62-0263 64-6016 65-1232 65-2593 65-4917 65-3111 65-5332	43 27 23 11 41 11 19 37 37 45 39 39	. 10 . 5 . 3 . 1 . 9 . 1 . 8 . 8	21 14 104 63 54 56 27 6 23 27 5

24

Number	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE
65-5333	41 .	. 9 .	36	68-8383	33 .	. 7	. 12	71–1059	19	3 .	
65-5883	40	. 11 .	10	68-9115	27 .	. 5		71-1065	25	4 .	. 23
65-5884	47	. ii	20	68-9163	59 .	14		71-1087	5		
65-5886	47		40	68-9223	33 .	. 7	. 1	71-1119	5		
	47	11	47	68-9226	33 .	. 7	2	71-1119	17	2 .	. 85
65-5887	AF	• •	22	68-9227	33 .	. 7	•	71-1133	5		. —
65-5904	4.5		9	68-9287	33 .	. 7	. ī	71-1136	15	2 .	. 43
65-5940	27	0	42	68-9304	59 .		20	71-1139	15	2 .	20
65-6274	20	•	(1)	68-9337	27 .	. 5		71-1142	15	-	. 39
65-8326	29 .	.)	02	68-9418	57 .	2.4	. 10 .	71-1143	15	2 .	
ee 0102	9 .	. 1 .	. 3	68-9428	41	. 9 :	. 59	71-1147	15	2 .	40
66-0102 66-3074		1	76	68-9429	41 .	. 9		71-1148	15	2 .	F-3
66-3074		^	60	68-9461	63 .	. 15 .	. 1	71-1155	13	2 .	. 27
		2	27	68-9464	63 .			71-1165	11	1 .	
66-3074		4	10	68-9467	63 .	. 15	. 5	71-1166	11	1 .	. 71
66-3074	20		40	00-2407				71-1178	9	1 .	. 25
66-4149		. 14 .	56	70-2980	51 .	. 12	. 42	71-1181	35	7 .	. 36
66-4707	•••		44	70-3789	17 .	2	20	71-1182	33	7 .	. 26
66-4707	4.5	11	2	70-5874	33 .	-	20	71-1184	33	7 .	. 18
66-4708	17	. 11	100	70-6026	23 .			71-1221	35	7 .	. 41
66-7518	50	1.4		70-6838	4			71-1223	35	7 .	
66-8340		1.4		70-6838	. 9 .	. 1	. 31	71-1276	13	2 .	. 30
66-9262	59 .	. 14	47	70-6839	4			12.0			
67 0042	22	. 7 .	10	70-6839	0	1	22	75-0257	19	3 .	. 10
67-0042				70-7351		1.7	10	75-2719	33	-	. 17
67-1171	31 .	2	83	70-7351		. 3		75-2719	33		. 22
67-1236	* -	. 2		70-7334	21 .	. 1	. 29	75-2725	33	7 .	. 20
67-1286	10	. 2	60 54	70-7739		•	20	75-3144	41	9 .	. 61
67-1288		. 2 .	40	70-7777	13 .	1 1	. 12	75-4813		14 .	
67-1391	15 .				9 .	. i	. 16	75-4813	29	5 .	. 37
67-6027	47 .	. 11		70-7787	•	•	20	75-4813	20		. 43
67-6033	47 .	. 11	. 33	70-7790	•	1	. 14	75-5088	20	•	. 17
67-6034	47 .	. 11	. 34	70-7791		1	. 55	75-5095	20	^	. 30
67-6038		. 11	. 17	70-7820	11 .		20	75-5099	20	•	
67-6051	47 .	. 11	. 39	70-7856	25 .	. 4	. 29	75-5104	39		. 20
67-6839		. 12	47	70-7858	11 .		£1	75-5104		^	. 18
67-8313		. 12		70-7882	21 .	1	. 31	75-5199	20		. 16
67-9026	63 .	. 15 .	. 3	70-7911	9 .	1	. 21	75-6594	. 49	10	. 18
27 2 2 2 3				70-7996	9 .	~		75-6594	40		20
68-0018		. 1		70-8259	17 .	. 2	-		40	**	24
68-0289		. 3 .		70-8276	6 .			75-6594	40	12 .	. 30
68-0331		. 3 .		70-8276	9 .	. 1		75-6594	55		
68-0331		. 7 .		70-8277	6 .			75-6594		10	25
68-0383		. 2 .	. 74	70-8278	6 .		20	75–8009 75–9045		15 .	. 12
68-0661		. 1		70-8315	13 .	2		13-9043	63	15 .	. 12
68-0839		. 4 .		70-8737	21 .		20	76-0012	9	1 .	. 23
68-0840		. 4 .		70-8782	25 .	. 4		76-0012		13 .	. 23
68-0938		. 2 .		70-8836	11 .	-	01	76-0012	19		. 29
68-3168		. 2 .		70-8896	13 .	. 2	. 21		11		
68-4081		. 8 .	. 11	70-9017	6 .			76-0308			. 61
68-4577		. 5 .		70-9018	6 .		. –	76-0378	10		. 35
48-4597	29 .	. 5 .	. 59	70-9021	6 .		. –	76-0528	67		
68-4708	27 .	. 5 .	. 21	70-9022	6 .			76-0543	57	14 .	. 11
68-4835		. 8 .		70-9263	11 .	. 1		76-4116			
68-4925		. 5 .	. 30	70-9381	13 .	. 2		76-9136		-	. 11
68-4968		. 13 .		70-9382	13 .	•		76-9325	41	9 .	. 32
68-5056	41 .	. 9 .	. 34	70-9383	13 .	. 2		92 2251	42	10	. 14
68-5104	39 .	. 9 .		70-9384	13 .			82-2351	43	10 .	-0
68-5108	39 .	. 9 .	. 1	70-9428	13 .	. 2		82-4971	55		. 38
68-5137	41 .	. 9 .	. 53	70-9429	13 .	. 2		82-4972	55	40	. 38
68-6066		. 11 .	. 1	70-9430	13 .	. 2		82-8140	49		. 32
68-6081		. 11 .	. 36	70-9431	13 .			82-8195	51	12 .	. 46
68-6095		. 11 .	. 21	70-9432	13 .	. 2		82-8250	55		. 30
68-6133		. 11 .	. 22	70-9433	21 .	. 3	. 74	82-8283	57	-	. 12
68-6134		. 11 .	-	70-9517	13 .	. 2		82-8285	29	5 .	. 55
68-6135	45	. 11 .	10	70-9526	·· 19 .	. 3		82-8307	61		. 73
68-6142	400	. 11 .	. 51	70-9652	. 35 .	. 7		82-8314			. 72
68-6802		. 12 .	20	70-9724	9 .	. 1	. 25	82-8319	61		. 84
68-6834	51	. 12 .	F3	70-9737	13 .	. 2	. 28	82-8320	61		. 81
68-6835		. 12 .		70-9800	25 \.	4		82-8320 82-8392 82-8393	49		. 16
68-8013		. 13 .	4.0	70-9848	5			82-8393	49		. 13
68-8014	53	. 13 .	20	70-9848	9	. 1	. 38	82-8507	37	8 .	. 23
68-8016		13	21	70-9906	11		. 48	82-8614	33		. 3
68-8018	55	. 13 .	31	70-9907	i II	4		82-8686	27	5 .	. 22
68-8019		17	41	70-9979	15	2 .	58	82-8874	33	7 .	. 14
68-8019	**		4.4					82-8933	31		. 6
68-8343	22	7	0	71-1003	11		. 44	82-9004	29	5 .	. 48
	22	-	12	71-1058	: 11 25		. 44	82-9008			. 21
68-8382	33 .			1. 1030							

Number	PAGE	PLATE	CODE	NUMBER		PAGE	1	PLATE	CODE	NUMBER		PAGE	PLA	ΤE	Code
82-9008	29	. 5 .	. 57	97-0519		39		9 .	. 31	144921		59 .	. 14		28
82-9020	40	10	•		• •	39	• •	•		144921		61 .	. 14	• •	59
		12		97-1656											
82-9020	49	. 12 .	. 6	97-2090		39		9 .		188218		61 .	. 14		77
82-9020	51	12	. 38	97-2091		39		9 .	. 22	188330		61 .	. 14		64
82-9020	66	13	. 43	97-2126		39		9 .		504665		44	. 14		22
			. 80			39	• •	9 .	23			57 .	. 14		21
82-9020		. 14 .		97-2127			• •			516798				• •	
82-9020		. 7		97-2154		39		9		534296			. 14		27
82-9124	27	5	. 17	97-2245		39		9	. 4	553248		57 .	. 14		20
82-9125	27	5	. 18	97-2513		39		9	. 6	553738		57 .	. 14		24
82-9210	31	6	7	97-2525		41		9 .	20	553940		57 .	. 14		21
82-9213				97-2526		41		^	42	554602					24
							• •						-	• •	
82-9213	29	5 .		97-2704		19		3		573828		61 .	. 14		66
82-9602	37	8	. 9	97-2704		21		3	. 71	54027029					
82-9603	37	8	. 20	97-2704		41		9	. 41	54130041		59 .	. 14		40
82-9608	27	. 8 .	•	97-3638		39		9	. 12	54140331		57 .	. 14		25
82-9695		11	21	97-3639		39				54170009					84
							• •				• •				
82-9696	55	. 13 .	. 31	97-3669		39		9	. 25	54441582		61 .	. 14	• •	76
82-9721		. 13		97-3672		39		9		54483156		61 .	. 14		81
82-9722	55	. 13	. 35	97-3678		39		9	. 7	54522680		57 .	. 14		21
82-9723		. 13	35	97-3680		39		9	20	54523999		59 .	. 14		29
82-9729	**	12	07	97-3685		49		40	-	54571677					63
	**	12										**		-	
32-9730		. 13	. 28	97-3689		57		14		54573590		59 .			35
32-9732	53	13	. 18	97-3693		39		9		54577109		61 .	. 14		60
32-9746	55	13	. 32	97-3694		39		9	. 3	54578212		61 .	. 14		62
32-9747		. 13	20	97-3895		5		_	_	54578213		61 .	. 14		67
32-9782		10	24	97-3895		41				54945043		59 .	. 14		34
							• •	~	_		• •			• •	
32-9784		. 13		97-3906		39		9		54953386		61 .		• •	72
32-9787	55	. 13	. 37	97-3921		39		9	. 9	54953389		57 .	. 14		7
32-9801	53	. 13	27	97-3922		39		9	28	54956427		59 .	. 14		44
2-9943	27	0	24							54956469		59 .	4.4		44
32-9950			0	201		59		14	. 33	54957239		59 .	. 14	• •	38
				281						34931239		Jy .	. 14		20
82-9958		. 8		370		57		14							
82-9988	51	. 12	. 35	380		61		14	61	376/093		65 .			19
32-9989	F 1	. 12	25	410		57		14	. 23	376/100		65 .	. 16		23
				411		57		14							
33-0002	55	. 13	39	446		57	* *	14	23	622/050		65 .	. 16		20
	27	0					• •								
33-0256		. 8		989		59		14	. 36	622/061		65 .	. 16		6
3-0270	49	. 12	31	16714		57		14	5	622/067		65 .	. 16		7
3-0281	57	. 14	3	31899		59		14	41	622/068		65 .	. 16		21
3-0281	67	. 14	16	34815		61		14	68	622/069		65 .	. 16		16
3-1426	27	0		35710		59	• •	14		622/071	-	65 .			22
							• •						. 16		15
3-1428		. 8		36403		59	• •	14	30	622/073		65 .			
3-1460		. 8	32	38189		57		14	26	622/076		65 .	. 16		13
3-1513	29	. 5	40	38191		59		14	26	622/077		65 .	. 16		14
3-1559	40	. 12	0	45221		59		14	45	622/078		65 .	. 16		18
3-1603	**	1.4	40	49072		57	•	14	6	622/082		65 .	. 16	-	12
			22						~1			10	11		
3-1604		. 6	22	49345		61		14		622/086		65 .		• •	4
3-1607	5 .		_	53973		61		14	58	622/086		65 .	. 16		17
3-1607	29 .	. 5	41	59883		59		14	37	622/101		65 .	. 16		10
3-1648	22	7	4	59885		59		14	37	622/122		65 .	. 16		25
			9	37003		3,	• •	AT	٠,	622/124		65 .	. 16	• •	8
3–1651	33 .	/	,	14-148-203	3-10	57		14	18 .	622/128	::	65 .		• • • •	24
9-3208	21	. 3	56	DF9110/0	7/63	57		14	17	928/060		65 .			9
0-0011	19 .	. 3								928/097		65 .			5
0-4294	29	. 5	54	RSM3003,	01	57		14	1						
0-5268	10	. 3	00					7.5		R928		65 .	. 16		11
0-6074		•	•	SSM5001/	03	57		14	19	R928/4		65 .			***
	40	10	1							K)Z0 4				• •	
0-6576	4.0	. 12		SSM5001/				14							
0-6579	49 .	. 12	12	PS5300/1/0)/	59		14	42						
-6580	40	. 12	10							1					
	27	•	42	110714		61		14	65	1					
7029															
0-7029 0-9024		. 15	40	112201			• •	14							

